

Wireless Microphone Kit

User Manual



OneScreen

onescreensolutions.com

(+1) 855 898 8111

support@onescreensolutions.com

1. About Wireless Microphone Kit

The Wireless Microphone Kit provides an effective solution to users with a need for exceptional audio input. The kit includes two wireless microphones and a dedicated receiver. Once connected to the OneScreen Touchscreen, the kit provides exceptional audio input with background noise cancellation, and facilitates sound amplification through the system's audio output. This setup is ideal for both large and small classrooms, lecture halls, or conference rooms, ensuring clear and consistent audio transmission from the presenter to the audience.

The lightweight and portable system allows seamless connectivity with the 3.5mm audio port on OneScreen interactive panels and features mute control, with visual indicators for status and battery levels as well.

2. Inside the box



Receiver



Transmitter x 2



Magnet x 3



USB-C cable x 1



USB-A to Type-C cable x 1



3.5 mm camera cable x 1




Magnetic clip x 2



Charging case


3. Charging Case

The image below labels all the components on and inside the charging case:

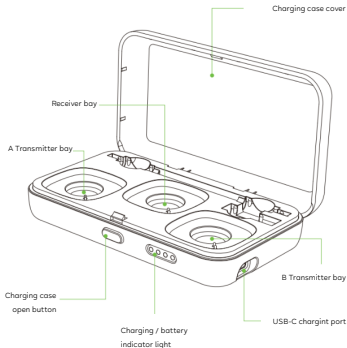


4. Transmitter

The image below labels all the components on the transmitter:

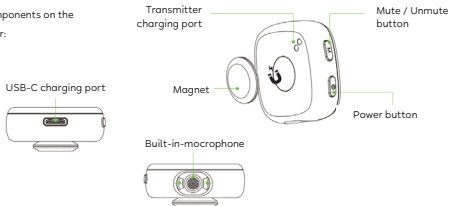


5. Receiver

The image below labels all the components on the receiver:

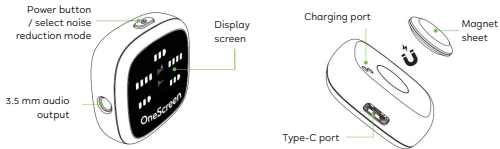

6. Receiver Display Screen

The image below labels all the components on the receiver's display screen:

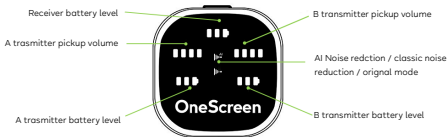


7. Transmitter Indicator Light

The image below labels the indicator light on the transmitter:

Color	Indication
Green (outside charging case)	Connected to the receiver
Flashing Green (outside charging case)	Not connected to the receiver
Flashing Red (inside charging case)	Charging in progress
Red Light Off (inside charging case)	Fully Charged


Transmitter indicator light

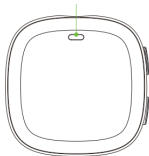

8. Pairing the Transmitter and Receiver

Follow the steps given below to pair the transmitter (microphone) with the receiver:

- Take out the receiver and the transmitter from the charging case
- Plug the receiver into the OneScreen Touchscreen using the USB-A to USB-C cable
- Press and hold the power button on the transmitter
- The green LED indicator light on the transmitter will light up, indicating that the pairing between the transmitter and the receiver has been successful

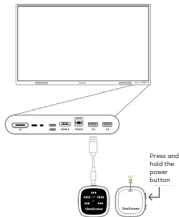

9. Wearing the Microphone Transmitter

9.1 Using Magnetic Clip

Follow the instructions below to securely wear the microphone transmitter using the magnetic clips:

- Choose a flat spot around the collar area of your shirt
- Fix the magnetic clip on the shirt
- Attach the magnetic end of the transmitter to the outer side of your clothing, aligning it with the clip placed underneath
- Allow the magnet hold the transmitter in place
- Make sure the transmitter feels secure and doesn't move around
- Keep the transmitter facing outward so the microphone and lights work properly
- Avoid placing near pacemakers or other medical devices



9.2 Without Magnetic Clip

Follow the instructions below to securely wear the microphone transmitter without using the magnetic clips:


- Choose a flat spot on your shirt near the chest or collar area
- Place the transmitter on the outside of your clothing
- Hold the magnetic sheet behind your clothing, aligned with the transmitter
- Let the magnet hold the transmitter in place through the fabric
- Make sure the transmitter feels secure and doesn't move around
- Keep the transmitter facing outward so the microphone and lights work properly
- Avoid placing near pacemakers or other medical devices



10. Charging the Transmitter and Receiver

To charge the transmitters and receiver, follow these steps:

- Place both the transmitters and the receiver into the designated slots in the charging case, and then close the lid
- Connect the charging case to a power source using the included USB-C cable
- Refer to the LED indicators on the charging case to check the charging status, as explained below:

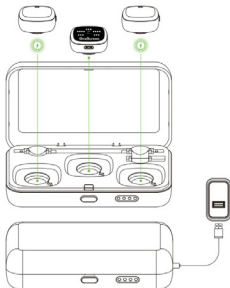

LED	Battery Level During Charging
   	< 25%
   	26% - 50%
   	51% - 75%
   	76% - 99%
   	100%

11. Additional Documents

You may access additional documents and guides on the product by visiting the resources tab on our website. You may access the Resources Tab by scanning the QR Code below:



12. Contact Support

USA, Canada and Rest of the World

 (+1) 855 898 8111

 support@onescreensolutions.com

Mexico and South America

 (+57) 318 280 3611

 guru.es@onescreensolutions.com

Middle East, Africa and Central Asia

 (+971) 56 410 3115

 support.emea@onescreensolutions.com