 


Wireless Keyboard with Trackpad

User Guide

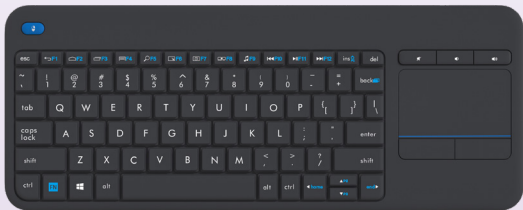


1. Introduction


The OneScreen Wireless Keyboard with Trackpad (Model: WK-1) is a compact, portable input device designed to maximize productivity and flexibility when using OneScreen interactive panels. With reliable wireless connectivity and an integrated touchpad, it allows educators and professionals to control presentations, navigate content, and interact with digital tools from anywhere in the room.

2. Connecting the Keyboard


1. Open the battery compartment on the underside of the keyboard.

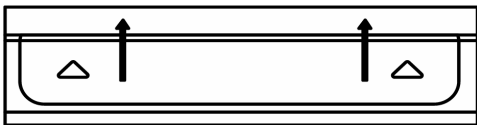

 2. Remove the USB receiver stored in the battery compartment cover.

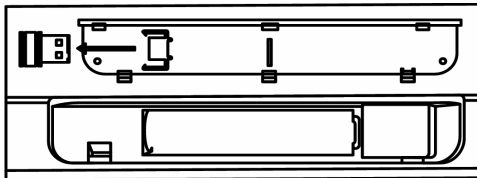

3. Plug the USB receiver into a USB port on the OneScreen interactive panel. Using the USB ports at the front of the panel allows you to use the keyboard on both Android and OPS sources.

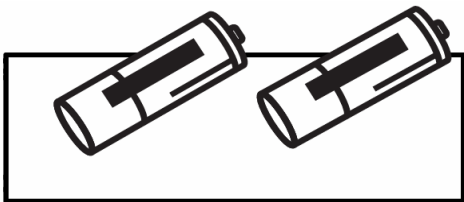

4. Insert two AA batteries and power on the keyboard using the switch on the top. Batteries are not included with the keyboard and must be purchased separately.



3. Function Keys Overview (PC)

- F1: Previous Page
- F2: Home Page
- F3: Switch App
- F4: Open App
- F5: Search
- F6: Show Desktop
- F7: Maximize Window
- F8: Screen Projection Options
- F9: Media Player
- F10: Previous Track
- F11: Play/Pause
- F12: Next Track

4. Special Key Functions

- Insert: Sleep
- Backspace: Screenshot
- Arrow Right: End
- Arrow Left: Home
- Arrow Down: Page Down
- Arrow Up: Page Up

5. Touchpad Gestures

- Tap or Click: Left Click
- Double Tap and Drag: Drag
- Two Finger Tap: Right Click
- Two Finger Swipe: Scroll Vertically / Horizontally
- Three Finger Swipe Up: Task View
- Three Finger Swipe Down: Show Desktop
- Three Finger Swipe Left/Right: Switch Apps