



# Instructions for Sony BRAVIA Wifi Access point + BRAVIA Meeting Free App

This solution allows you to use your Sony BRAVIA display as a Wifi access point so that you can connect to the device directly, with no additional external hardware or software, and mirror and transmit content to your Sony BRAVIA display.



## Initial set-up (Android 10):

You can connect your display to your wired LAN network (preferable) or alternatively use the wireless option to connect to your network (ideal frequency 2.4 GHz).

### Activate USB interface:

Switch to Pro Settings mode: Press the keys i+, mute, Vol+, Home

- Activate Settings > Pro Settings > USB Autoplay > Import Settings
- Activate Settings > Pro Settings > USB Autoplay > Start Installing BPK
- Activate Settings > Pro Settings > USB Autoplay > Start Web App
- Activate Settings > Pro Settings > USB Autoplay > Install Web App

# SONY



## Activate Wifi access point:

Switch to Pro Settings mode: Press the keys i+, mute, Vol+, Home

- Settings > Pro Settings > WiFi Access Point > Activate WiFi Settings
- You can change the SSID: Settings > Pro Settings > WiFi Access Point > SSID > Change SSID (you will find this SSID as a WiFi access point on your device)
- Access point security settings: Settings > Pro Settings > WiFi Access Point > Security > WPA2-PSK (AES) or Open Network (no security)
- Set the access point password: Settings > Pro Settings > WiFi Access Point > Password
- Optional: Protect Pro Settings mode with a pin code: Settings > Pro Settings > Activate Pro Mode Lock
- Launch Pro mode: Settings > Pro Settings > Launch Pro Mode

## Activate BRAVIA Meeting Free:

Switch to Pro Settings mode: Press the keys i+, mute, Vol+, Home

- Activate Settings > Pro Settings > Start-Up Services > Install and Activate Bravia Meeting Free  
The display will restart and display the Bravia Meeting Room overview  
Press the "Play" button on your remote control to make changes
- Change background image: Download the folders and add images and/or videos to the media folder. (Format USB as FAT 32 and make sure that both folders (Sony & Media) are in the USB root directory)
- Plug the USB into the display
- A pop-up notification will appear: Confirm that you want to copy the content to BRAVIA. The old background image will then be replaced
- Supported format and extension: JPEG: jpeg, jpg / PNG: png and mp4 / MPEG TS: ts, m2ts