


Hardware Overview

Hardware Introduction

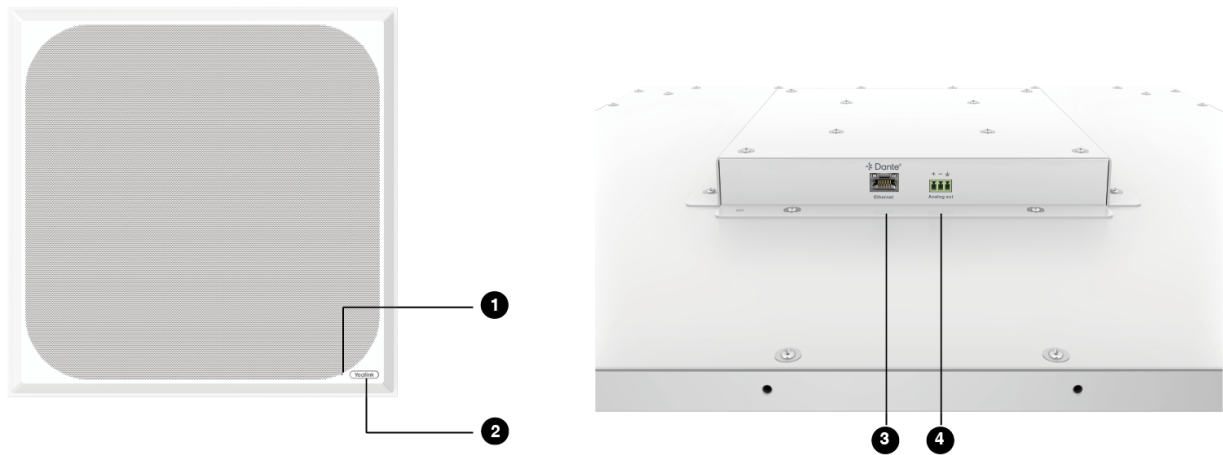

NO	Name	Description
•		
1	Reset Button	Long poke for 5s to reset all network and configuration settings to the factory defaults. To poke it, use a paper clip or other tools.
2	LED Indicator	Refer to LED Indicator Introduction.
3	RJ-45 Port (Dante supported)	Connect Yealink DSP, PoE switches, and third-party standard Dante devices.
4	Phoenix Analog Interface (Balanced)	1 Phoenix interface with 3 ports for analog signal output.

LED Indicator Introduction

LED Indicators	Description
Solid Orange	• Initializing and not connected to a host device. • Rebooting

Off	• Powered off • Idle: You can set the device to remain steadily green or turn off when idle in Designer.
Solid Green	• On a call. • Idle: You can set the device to remain steadily green or turn off when idle in Designer.
Solid Red	Muted
Flash Red and Green Alternately	Positioning CM50.
Flash Orange Slowly	CM50 is upgrading.
Flash Red	Network exception.