


Screen Icon


Call Screen Icons


All of your active and held calls are displayed on the calls screen. You can press the up or down navigation key to switch between calls.

When there is an active call and a held call, the call screen is shown below:

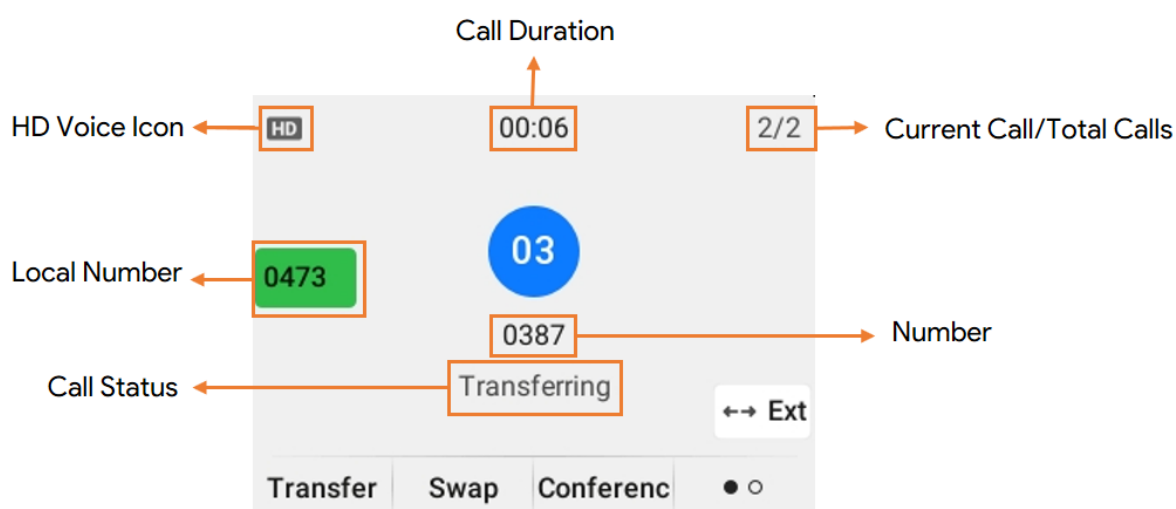


You can press **OK** key during a call to view the current time & date, and phone status. The phone screen is shown below:

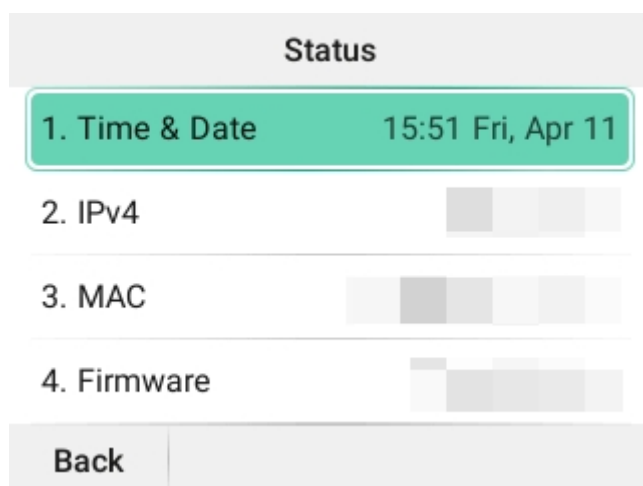

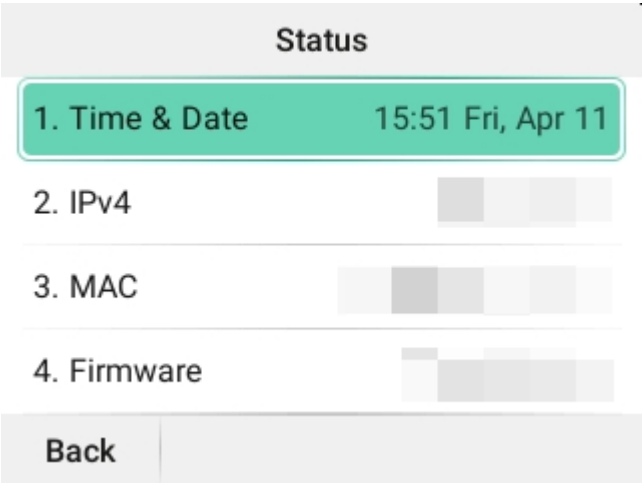

Idle Screen Icons

The idle screen is made up of the status bar, line keys, and soft keys. The time & date are displayed in the middle of the screen.

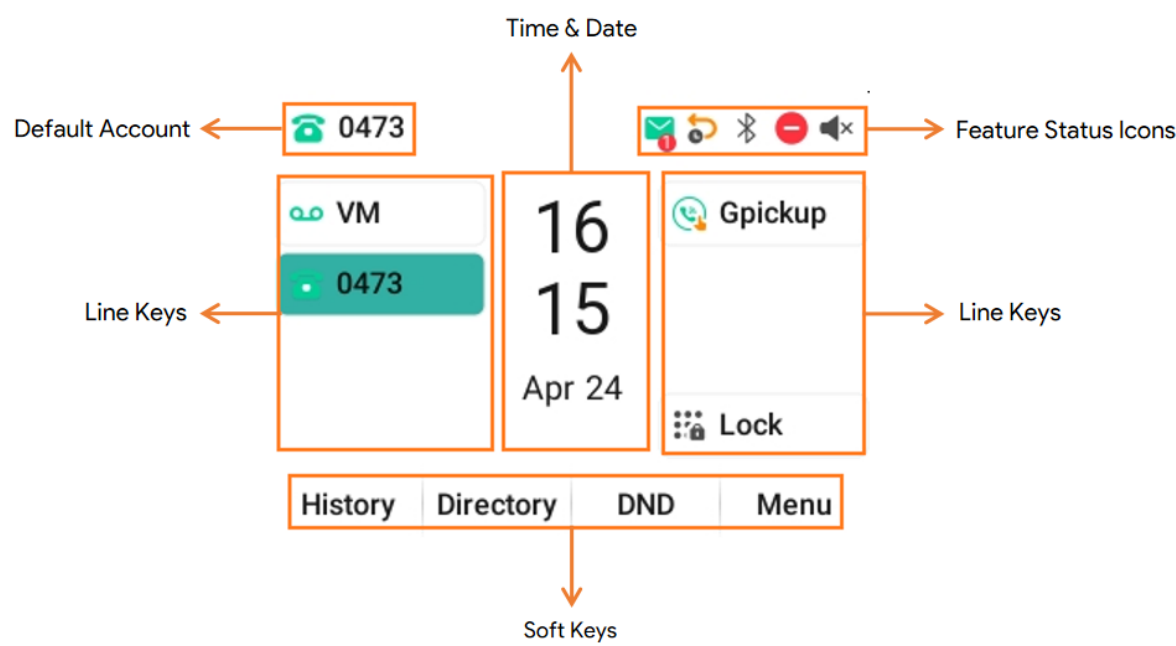

Line Key Icons

! If you want to hide the icon of the [Line Key](#), contact your administrator.

Icon indicators (associated with line key features)

Icons	Description	Icons	Description
	Hold		DND
	Voice Mail		SMS

	Direct Pickup		Group Pickup
	Conference		Forward
	Transfer		Recall
	Record		Recording in the process (Record)
	Multicast Paging Paging List		Hot Desking
	Phone Lock		Directory
	Speed Dial		DECT Intercom
	Mobile Account		Extend

Icon indicators (associated with the line)

Icon s	Description	Icons	Description
	The private line is registered successfully		The shared/bridged line registers successfully
	Registering	 (Flashing)	Register failed
	Call forward is enabled on this line		DND is enabled on this line.

Status Bar Icons

Icon s	Description	Icon s	Description
	Wired network is unavailable		Missed Calls
	Wired network is unreachable		Busy Forward

	Speakerphone (hands-free) mode		Always Forward
	Handset Mode		No Answer Forward
	Headset Mode		Recording starts successfully (Using a USB flash drive)
	Voice Mail		Recording is paused (Using a USB flash drive)
	Text Message		Bluetooth mode is on
	Auto Answer		Bluetooth headset is both paired and connected
	Do Not Disturb (DND)		Bluetooth mobile phone connection fails
	Phone Warning		Wi-Fi connection is successful
	Keep Mute		Wi-Fi connection is unreachable
	Ringer volume is 0		Wi-Fi connection fails