

Pair CTP25 with Yealink MeetingBar

Introduction

The CTP25 is a cutting-edge touch console specifically designed for meeting control. With its user-centered interactive design and a 10.1-inch touchscreen, users can effortlessly join and manage meetings with ease. Say goodbye to the complexities of video conferencing as CTP25 simplifies the process, delivering an enhanced meeting experience. It seamlessly integrates essential meeting functions, including direct connection to the system, screen sharing, BYOD, and PD charging capabilities. Elevating communication efficiency to new heights.


Before You Begin

- For the compatibility of CTP25 and Yealink MeetingBar, refer to [Rooms Accessories Compatibility Lists](#).
- For how to install the CTP25, refer to [Yealink CTP25 Quick Start Guide](#).
- Update your Yealink MeetingBar to the latest version.

Connect CTP25 to Yealink MeetingBar

Direct Connection

Use a network cable to connect the VCH port of Yealink MeetingBar to the Internet port of the CTP25.

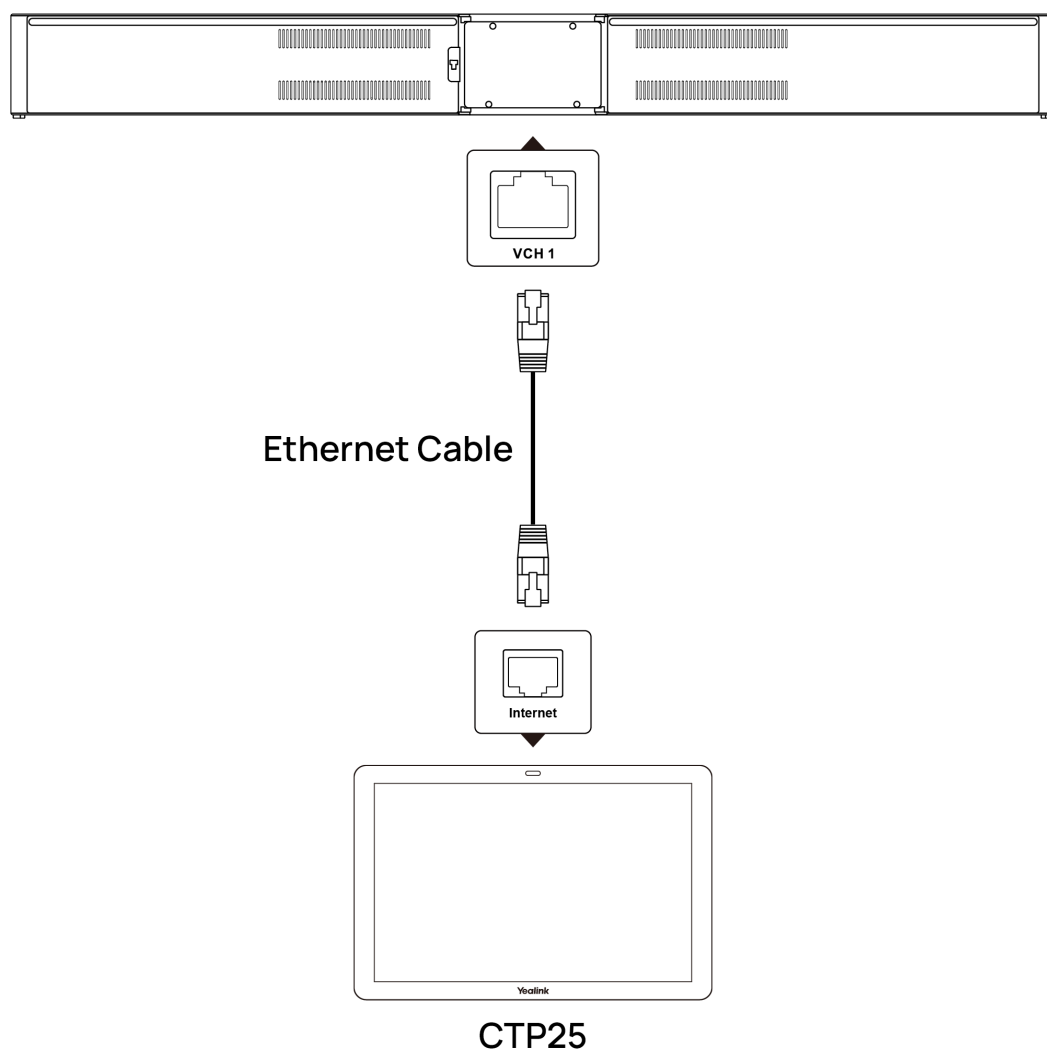MeetingBar


Connection on the Same LAN

1. Use a network cable to connect the Internet port to the external network port.

! Yealink MeetingBar and the CTP25 must be on the same LAN.

2. Use the power adapter to connect the CTP25 to the power port.

MeetingBar

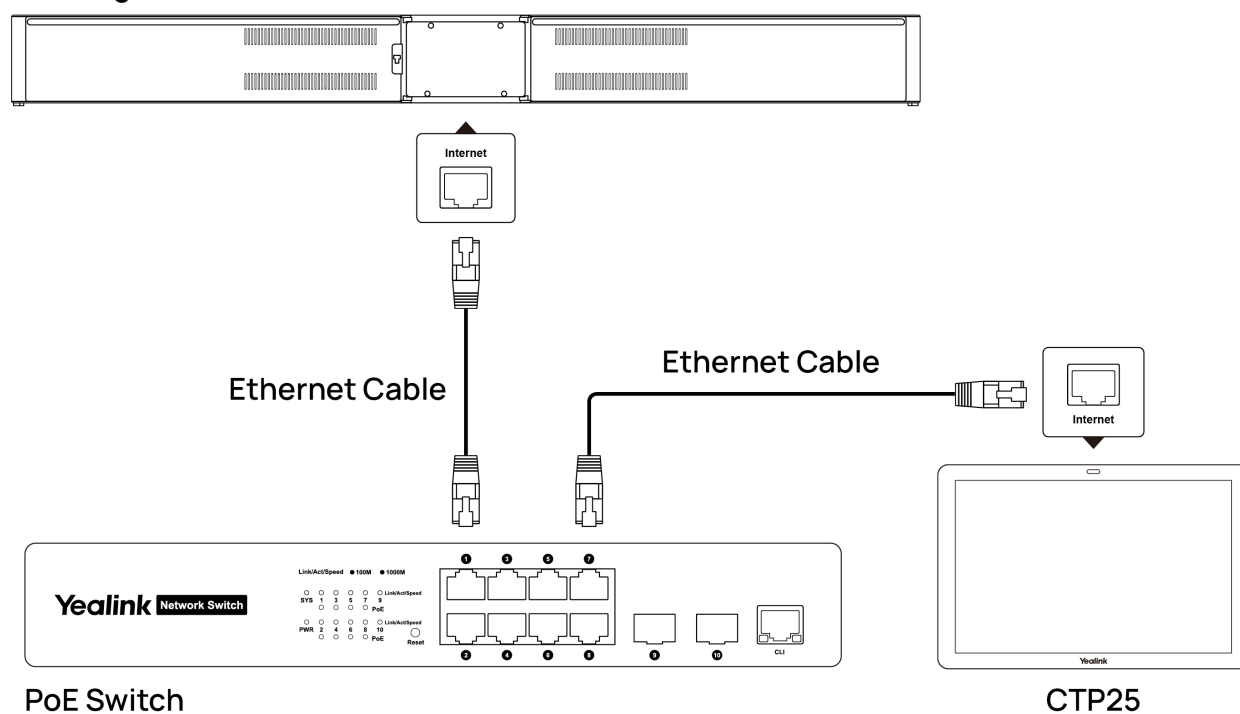

Pair CTP25 with Yealink MeetingBar

! If you choose the direct connection method, pairing is not required.

Auto Pair

1. On the CTP25 screen, select the device you need to pair, and tap **Pair**.

English ▾



Pair with host

IP Address: 10.50.165.19

Network Setting

Help

Pairable hosts

Manually enter the host IP >



Device Name: MeetingBoard 75 Pro
IP: 10.50.165.7

Pair



Device Name: MeetingEye 900
IP: 10.50.165.15

Pair




Device Name: MeetingBar A40
IP: 10.50.165.2


Pair

2. Enter the pairing code displayed on Yealink MeetingBar screen.

4 / 7

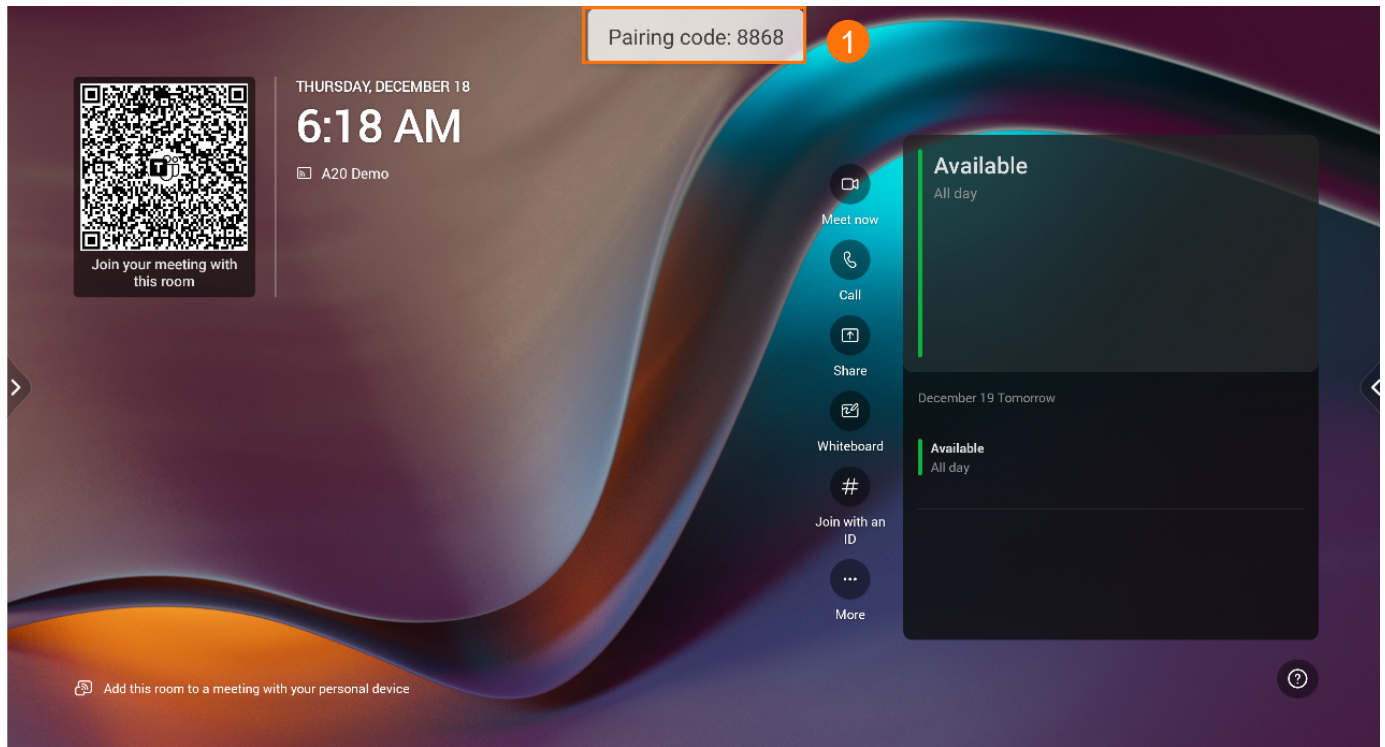

MeetingBar

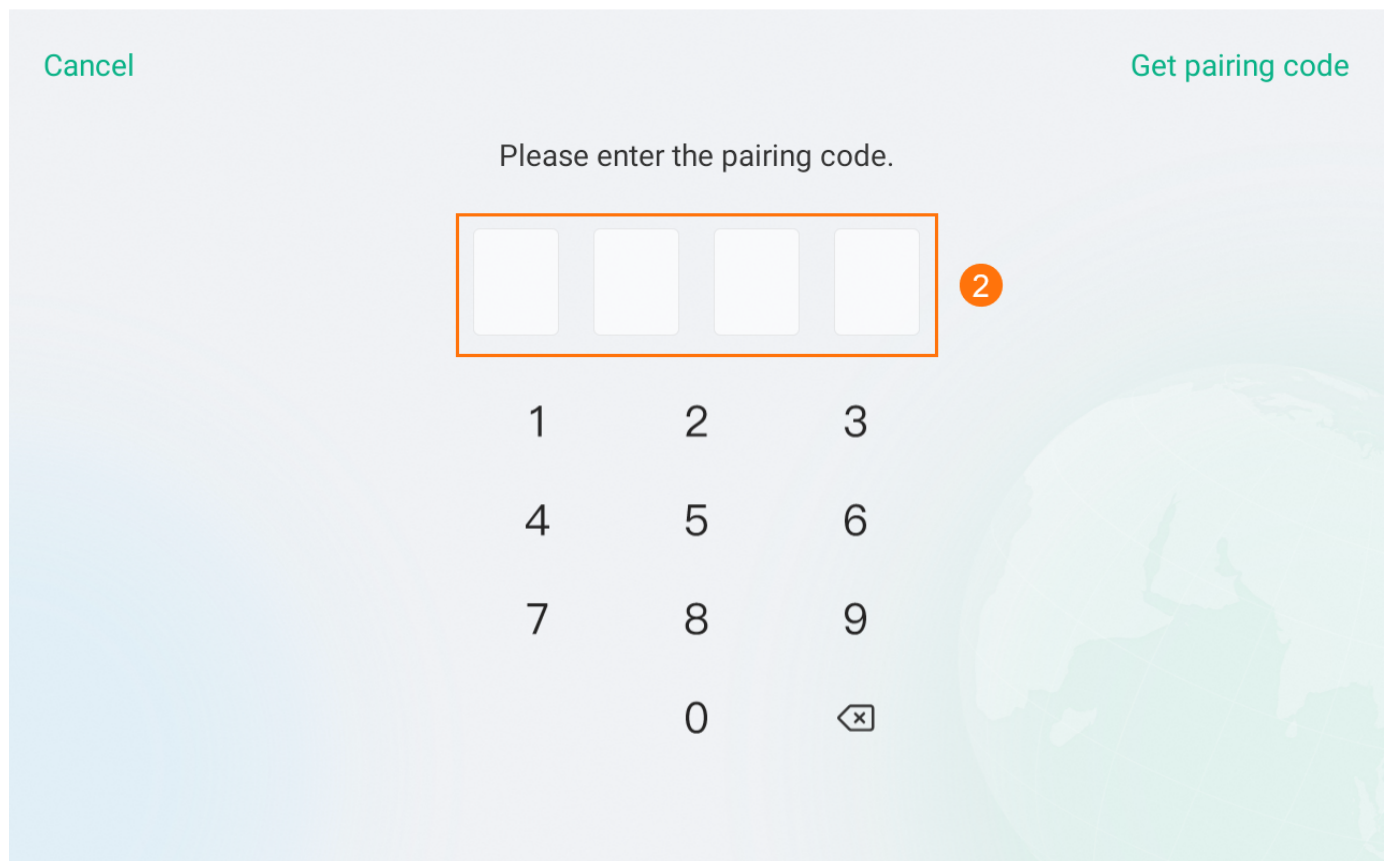


CTP25


Manual Pair

If the host is not found in the list, you can manually enter the host IP for pairing.


1. On Yealink MeetingBar screen, tap **Settings > About**, and find the device IP address.
2. On the CTP25 screen, tap **Manually enter the host IP**.

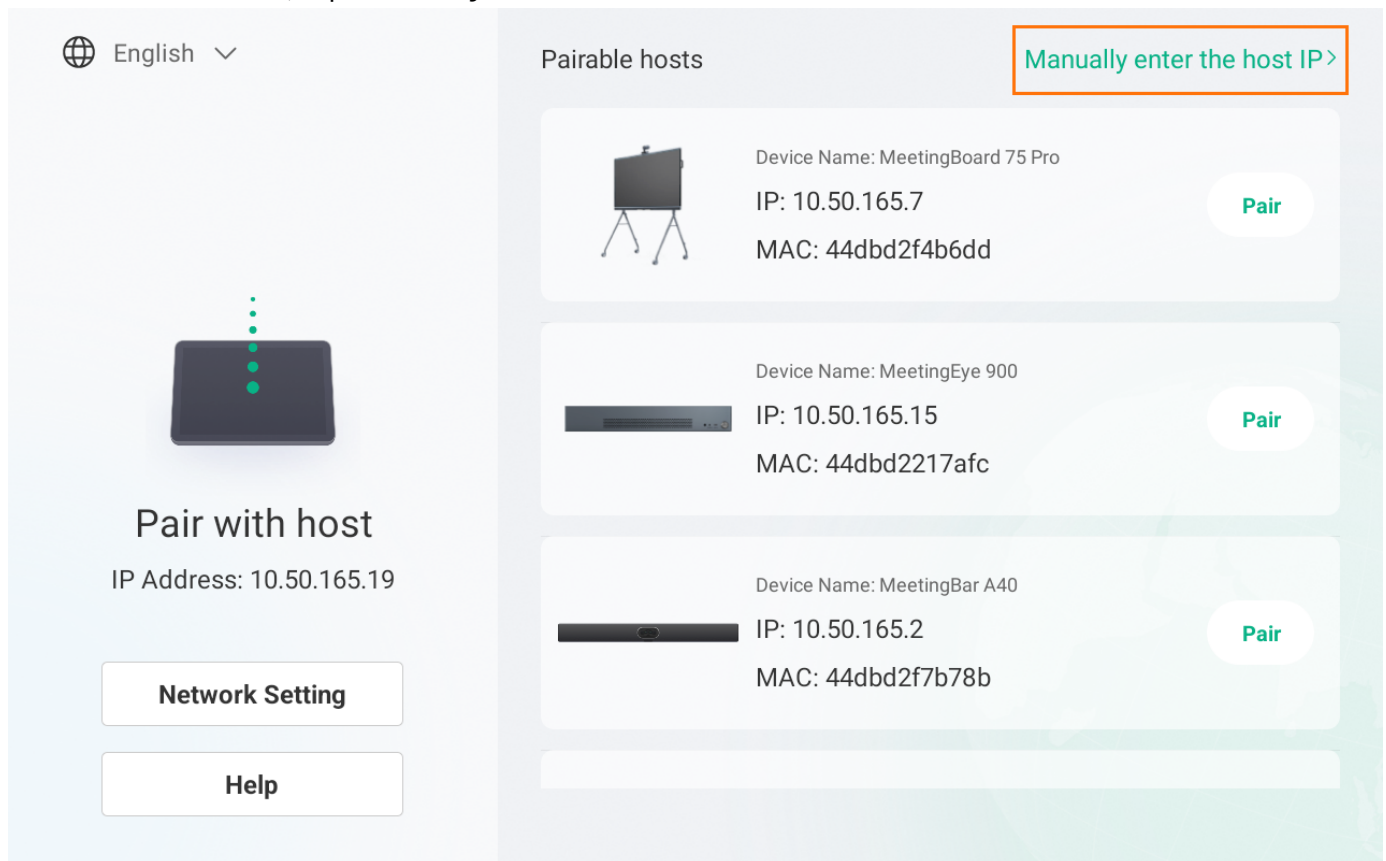


3. Enter the device IP address, and tap **Pair**.

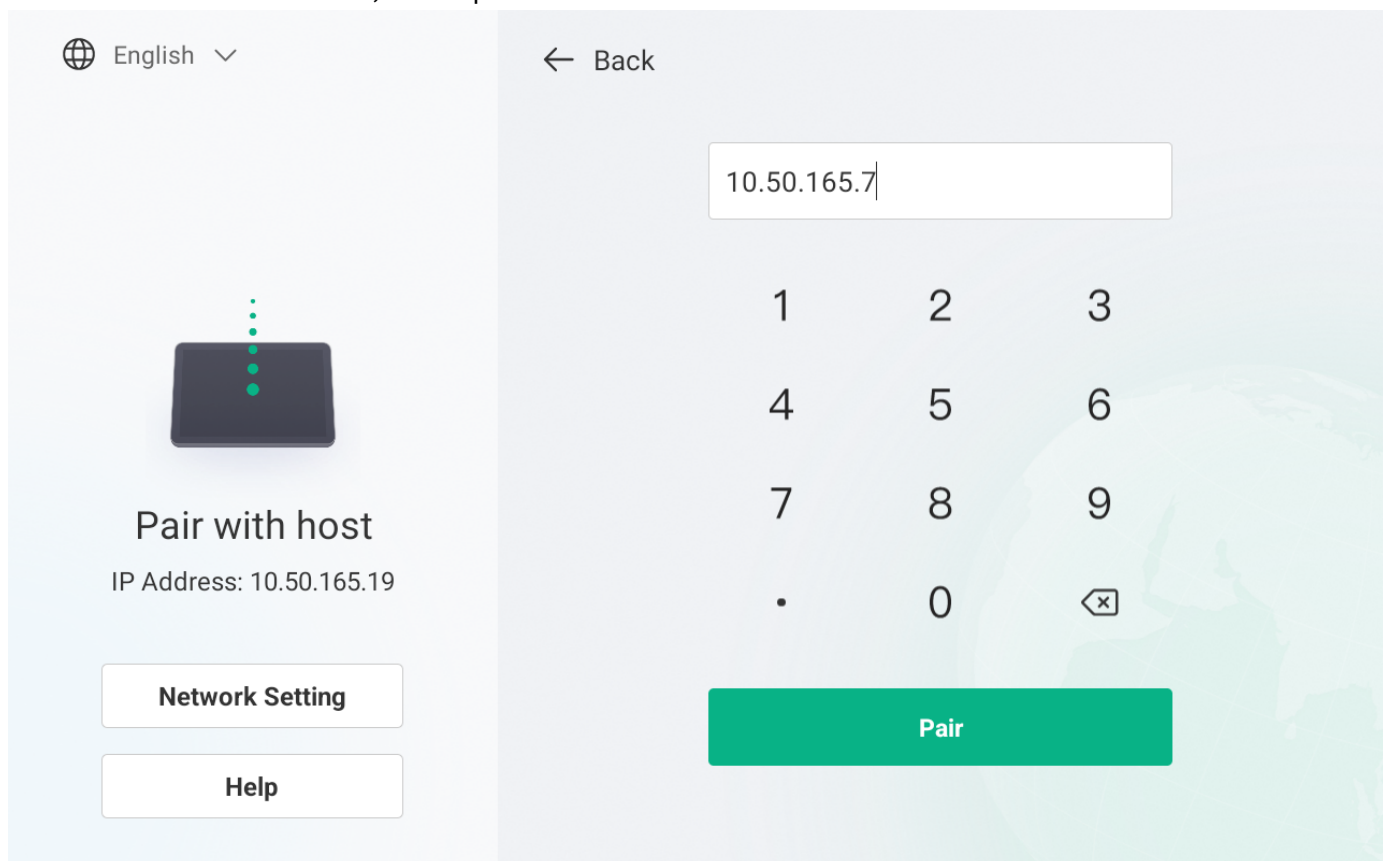

4. Enter the pairing code displayed on Yealink MeetingBar screen.

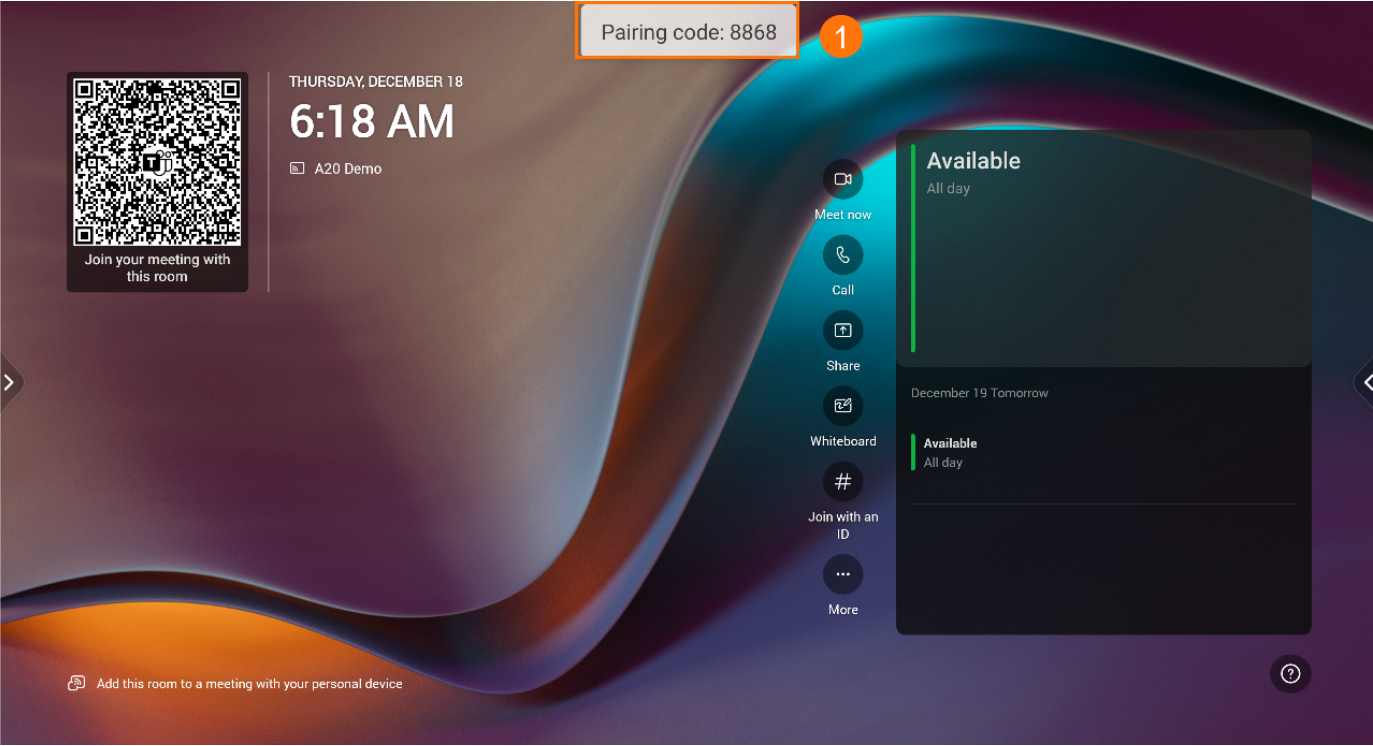

MeetingBar

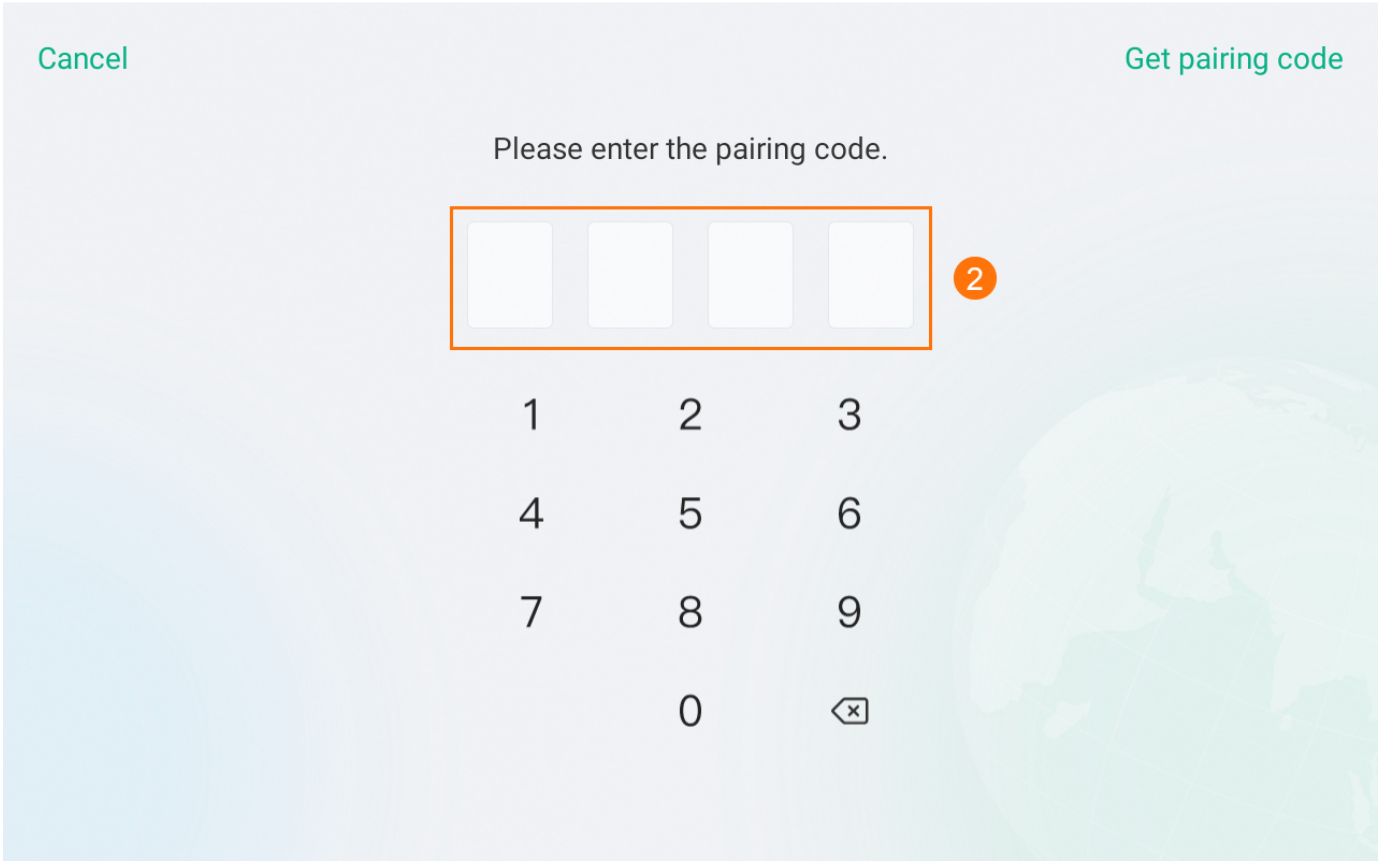

CTP25