

Pair CTP25 With MCore 4 (Teams Rooms)

Introduction

After pairing is complete, you can control the Yealink endpoint to perform operations such as conferencing and screen projection.

Before You Begin

- Make sure that MCore 4 and the Yealink MTouch Touch Panel are disconnected. For more information about the Yealink MTouch Touch Panel, refer to [Rooms Product Family](#).
- Ensure that the Yealink CTP Touch Panel is on the same LAN as MCore 4. For more information about the Yealink CTP Touch Panel, refer to [Rooms Product Family](#).
- If you have difficulty deploying the device, you can tap **Help** in the first step of CTP pairing to view the deployment instructions.


Supported Devices

For details on supported devices, refer to [Rooms Accessories Compatibility Lists](#).

Pair CTP25 With MCore 4

Automatic Identification and Pairing

- Find the host, tap **Pair**.

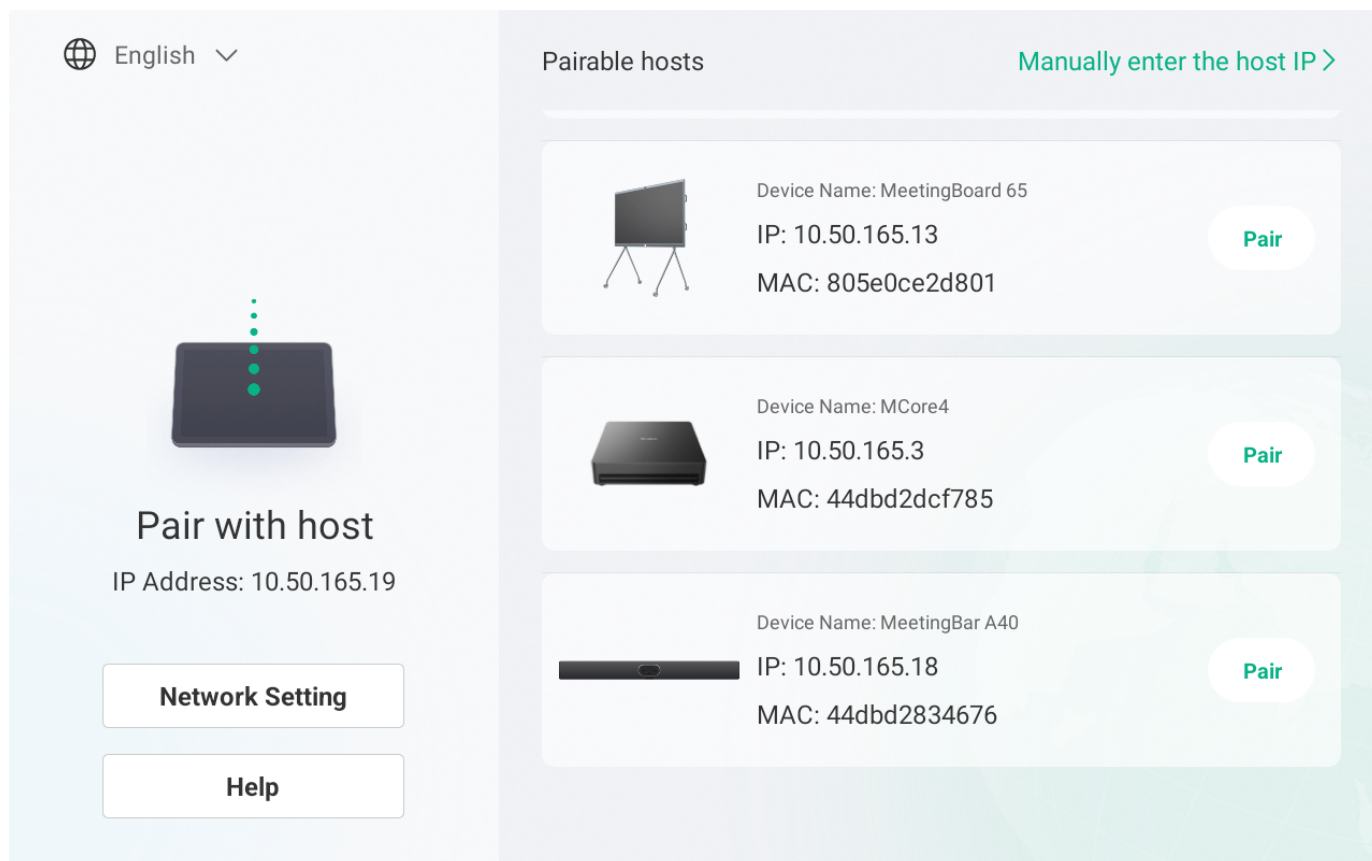

Manually Enter the IP to Pair

If the host is not found in the list, you can manually enter the host IP for pairing.

1. Connect MCore 4 to the display via an HDMI cable.
2. In Windows mode, open Yealink RoomConnect.
3. Select **MCore 4**.
4. Select **Network Settings > Wired Network > IPv4** to view the IP address.

← IPv4

IP Type Dynamic IP Static IP

IP Address 169.254.15.87

Subnet Mask 255.255.0.0

Gateway Address Please Enter

Static DNS ☐

Primary DNS Please Enter

Secondary DNS Please Enter

Save

5. On CTP, tap **Manually enter host IP** and enter the endpoint's IP address.

English

← Back

Please enter the host IP address

1 2 3

4 5 6

7 8 9

• 0

Pair

Pair with host

IP Address: 10.50.165.19

Network Setting

Help

6. Enter the pairing code displayed on the display. If the pairing code has expired, tap **Get Pairing Code Again**.

[Cancel](#)[Get pairing code16s](#)


Please enter the pairing code.

1	2	3
4	5	6
7	8	9
	0	

Open Multi-screen Control Pairing Mode

Once enabled, MCore will broadcast information for 5 seconds.

- In Windows mode, open Yealink RoomConnect.
- Select **MCore 4**.
- Select **Pairing Manage**.
- Open **Screen Control Pairing Mode**.

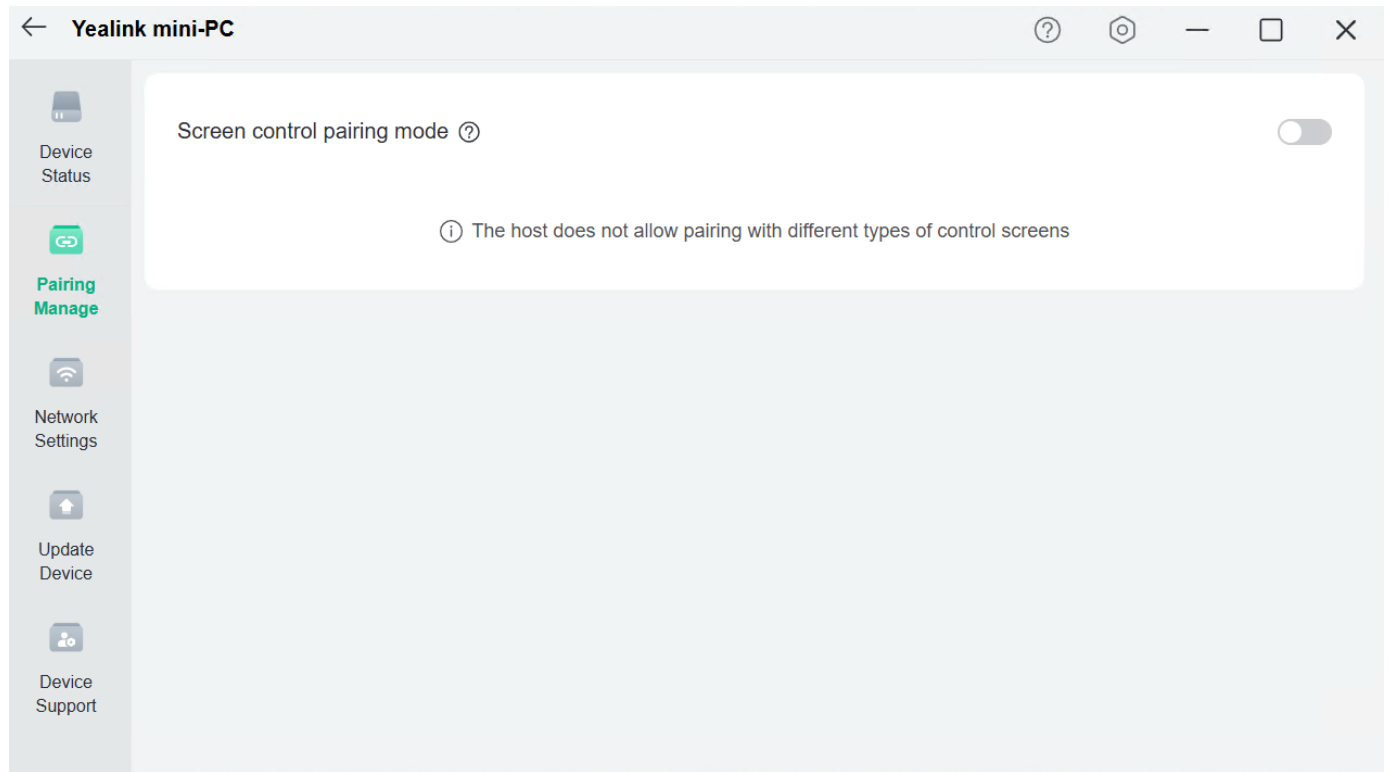

Unpair CTP25 With MCore 4

To Unpair via Yealink RoomConnect

1. In Windows mode, open Yealink RoomConnect.
2. Select **MCore 4**.
3. Select **Pair Manage > Unpair**.

To Unpair via Yealink CTP Touch Panel

- On the home screen, tap  > **Controller > Cancel pairing**.