


Controller Quick User Guide for Microsoft Teams

Teams Rooms Interface


To enter the Microsoft Teams Rooms (MTR) interface, switch the system to Microsoft Teams mode. For more information, refer to [Switch Account](#).

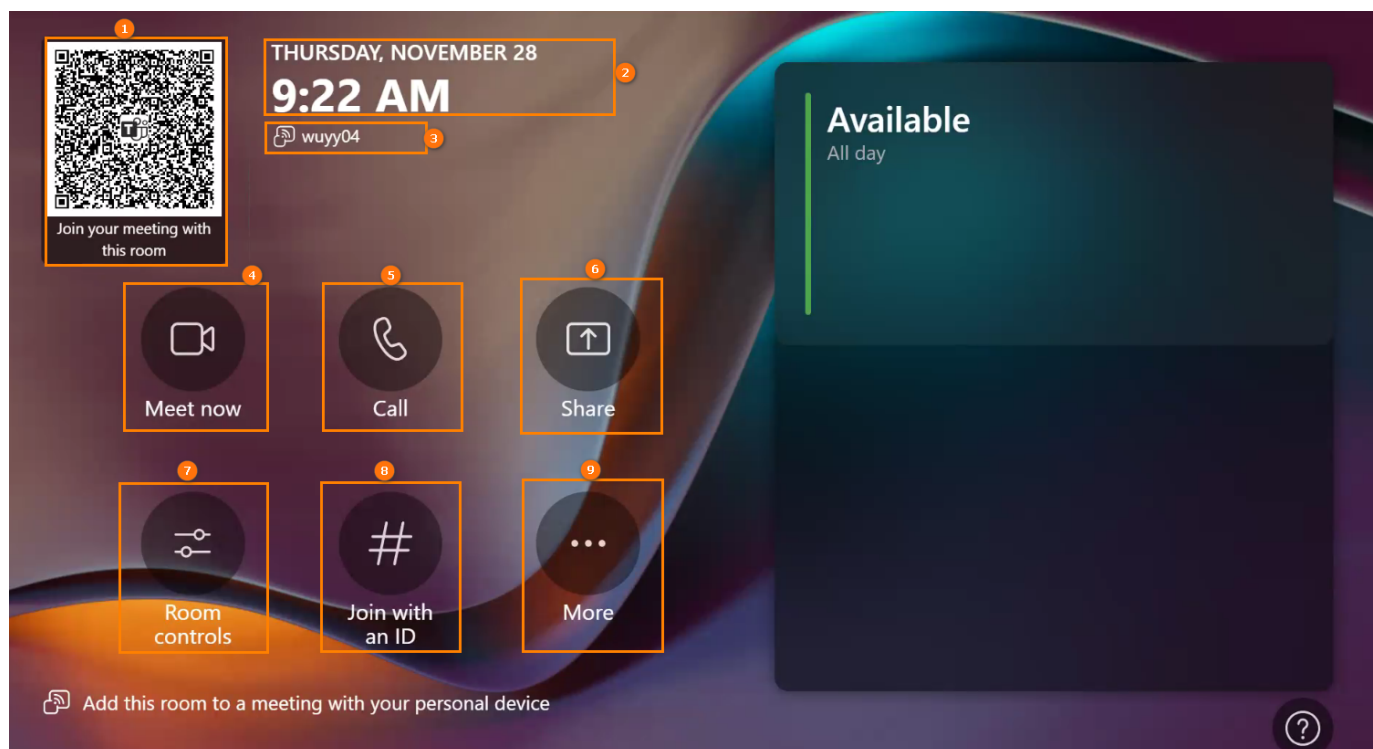

No.	Description
1	Scan the QR code to join your meeting with this room.
2	The local time.
3	The username and account number.
4	Start an instant meeting.
5	Make a phone call or call someone to join the meeting.
6	Start/Stop sharing.
7	Navigate to Camera Control, Mic Control, Status, Device Settings, and more.
8	Enter a meeting ID and meeting passcode to join a scheduled meeting.
9	Access additional settings, including Accessibility, Language, Restart Device, and other options.

Teams Rooms Meeting Interface


Switch the system to Microsoft Teams mode. For more information, refer to [Switch Account](#). During a meeting, you can see the following user interface.

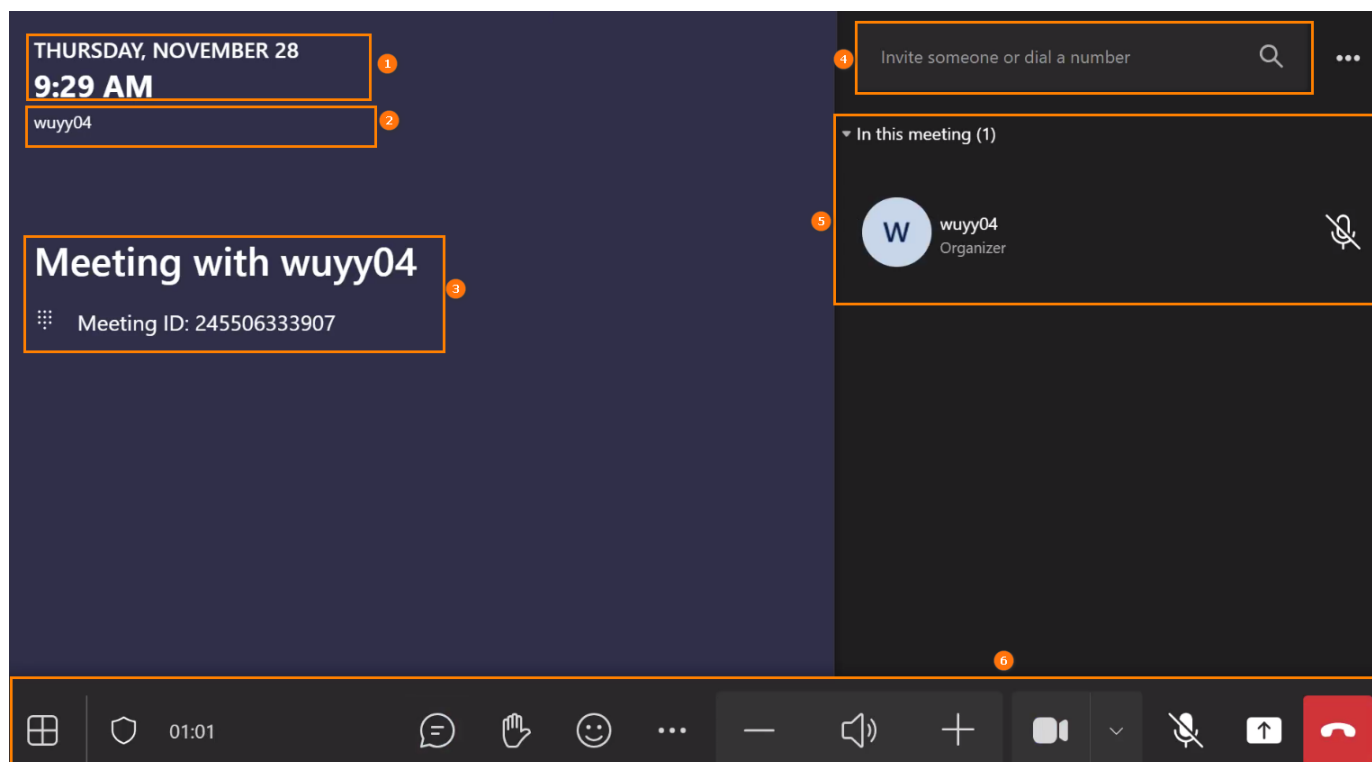

No.	Description
1	The local time.
2	The username.
3	Display the meeting name and meeting ID.
4	Invite someone or dial a number.
5	Display the list of participants, and you can do operations such as muting.
6	Meeting controls toolbar.

Yealink RoomConnect Software Interface

1. Switch the system to Windows mode. For more information, refer to [Switch Account](#).
2. Open Yealink RoomConnect, and the software interface is as follows.

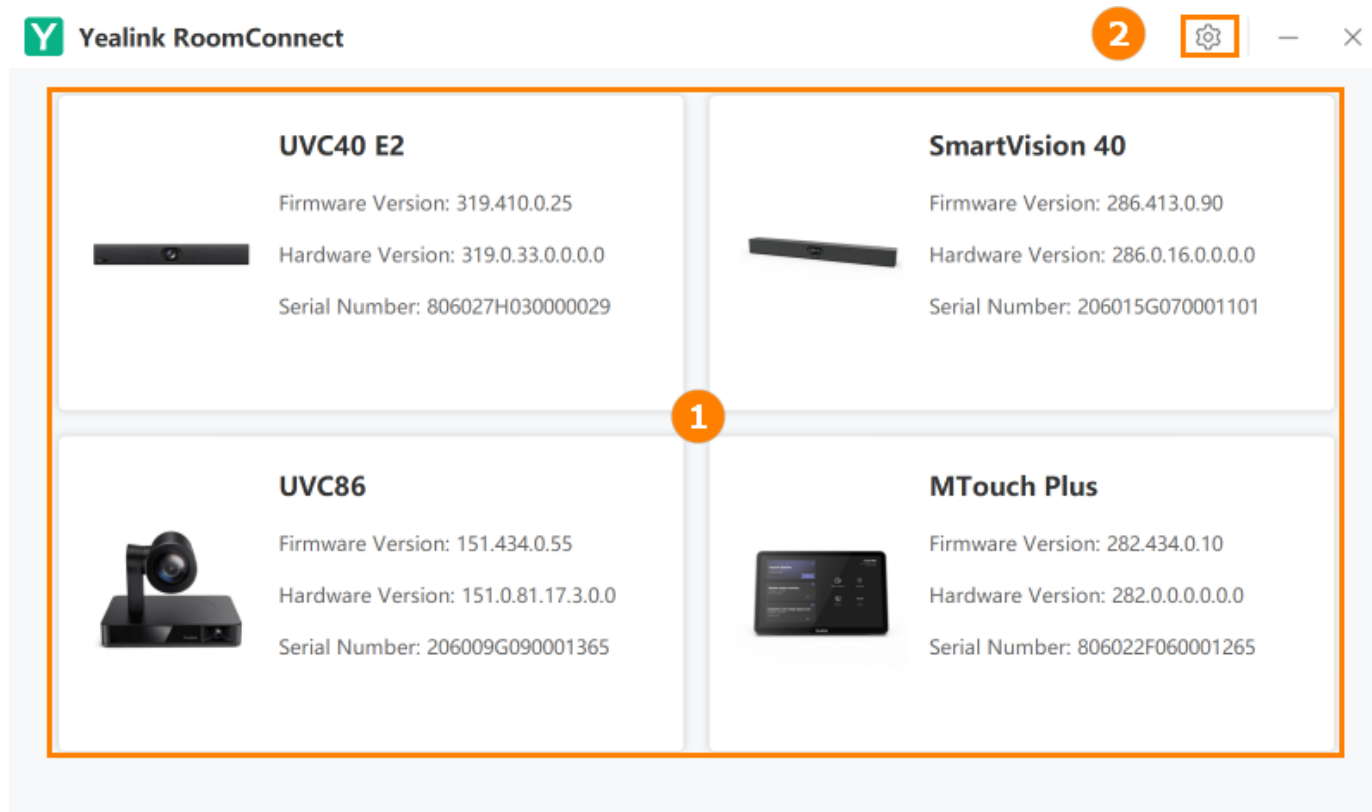

No.	Description
1	Display basic device information. Click to enter the device details setting.
2	Basic software information and device management server configuration.

General Feature

When the administrator completes the [Quick Setup](#), the device can start working properly.

Description	Related Document
Start an instant meeting	Instant Meeting
Join the meeting	Join Meeting
Start sharing via a cable	Share Content via Cable
Start sharing via the Yealink Wireless Presentation Pod	Share Content via Yealink Wireless Presentation Pod
Camera control	General Settings