

Quick Setup

This guide outlines how to boot the Zoom Rooms system and initialize the system for administrators.

Before You Begin

Before setting up your ZVC system, ensure that:

- You have a Zoom account.
- You have connected a mouse (a wireless mouse kit is recommended) or a Yealink MTouch Touch Panel to your Yealink mini-PC.

Initial Setup


Once your Yealink mini-PC is powered on, it will enter the setup page. On the display, do the following:

1. Select the desired language and go to the next step.
2. Select the desired country or region and go to the next step.
3. Select the desired keyboard layout and go to the next step.

Sign In

On Yealink MTouch Touch Panel, do the following:

 1. Tap **Sign In** and choose one of the following methods to sign in account:
 - **Sign in via Web User Interface:** Use a PC with Internet access, open <https://zoom.us/pair> in a browser, then follow the on-screen prompts on Yealink MTouch Touch Panel.
 - **Sign in with Email:** On Yealink MTouch Touch Panel, tap **Email** and operate according to the on-screen prompts.
 - **Sign in with Activation Code:** On Yealink MTouch Touch Panel, tap **Activation Code** and contact your Zoom administrator to obtain the activation code. For more information, refer to [Zoom](#).

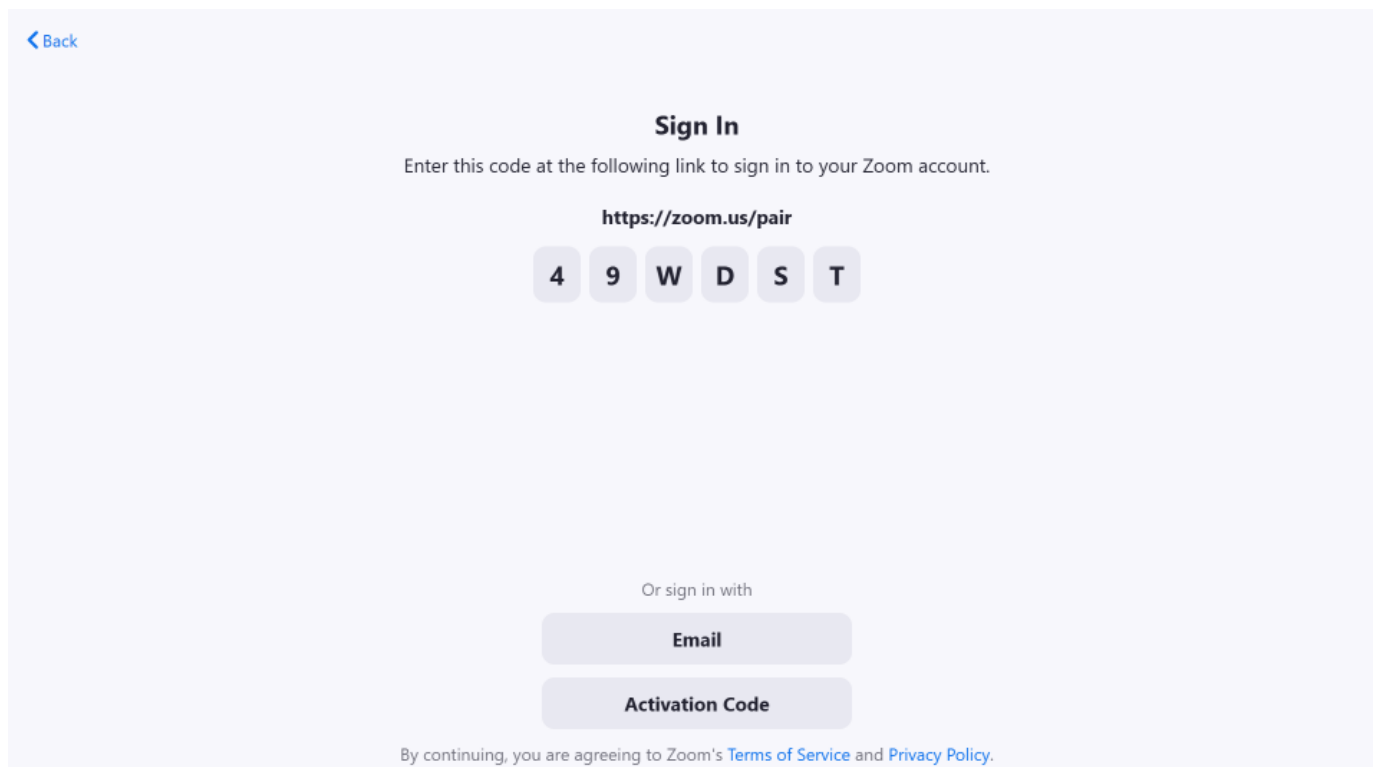

2. Select the desired room, and tap **Yes, It's Me** on Yealink MTouch Touch Panel to confirm.

3. Set a PIN or select **Set Up Later** to skip.

Check Network

If the interface shows that "This device isn't connected to the Internet", check whether the network cable is connected correctly.

Account Settings

Switch Account Mode

For more information, refer to [Switch Account](#).

Sign in with a Different Account

To switch to another account, sign out by switching to Zoom Rooms mode, selecting **Settings** > **General** > **Sign Out**, and signing in with a different account.

 
Check Firmware Version

Check Windows Version

For more information, refer to [Windows Update](#).


Check Zoom Rooms Version

- In the Zoom Rooms mode, select **Settings** > **About** to view the Zoom Rooms version.

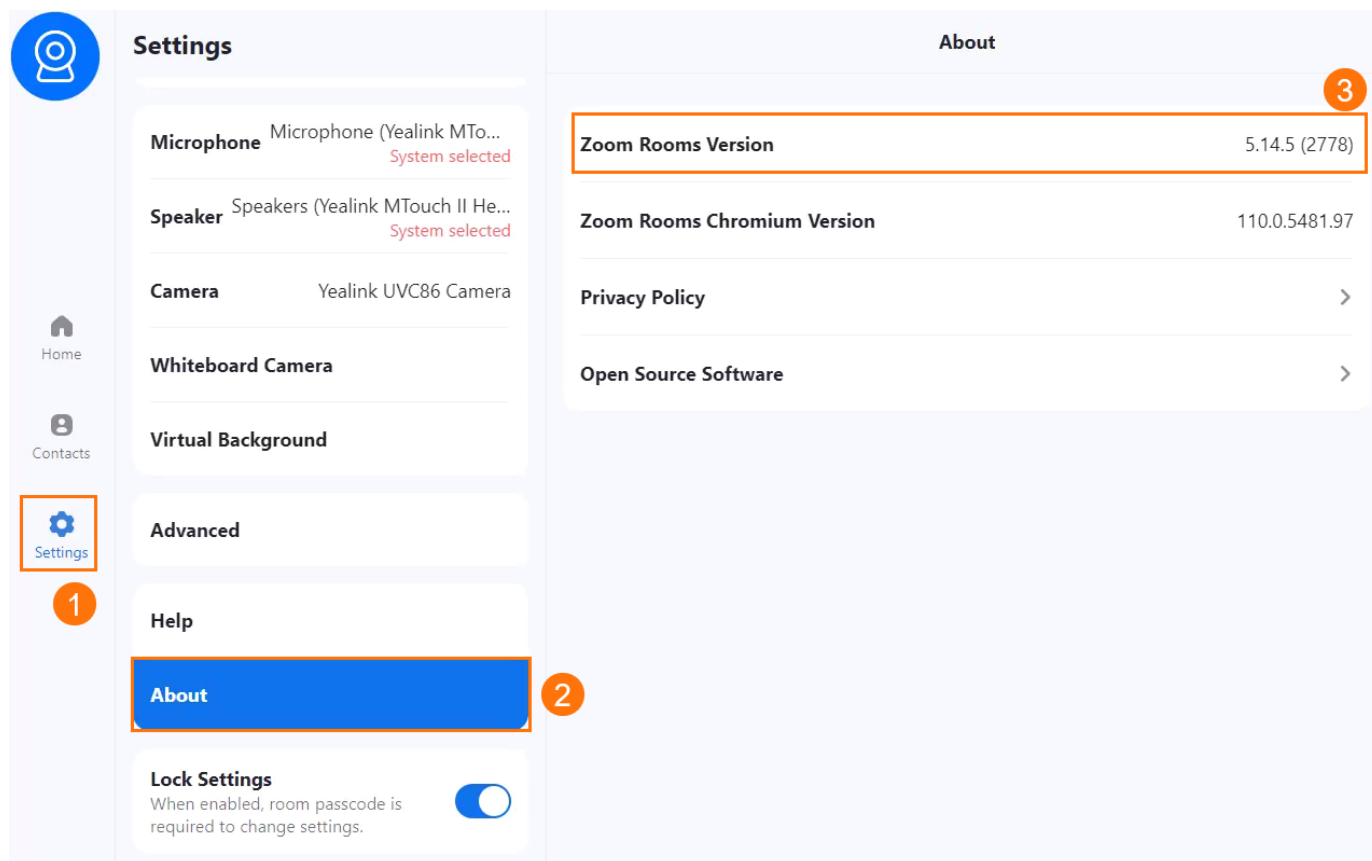

Check Device Version

 1. In the Windows mode, open Yealink RoomConnect and select a desired device.
2. Select **Device Status** to check the device firmware version.

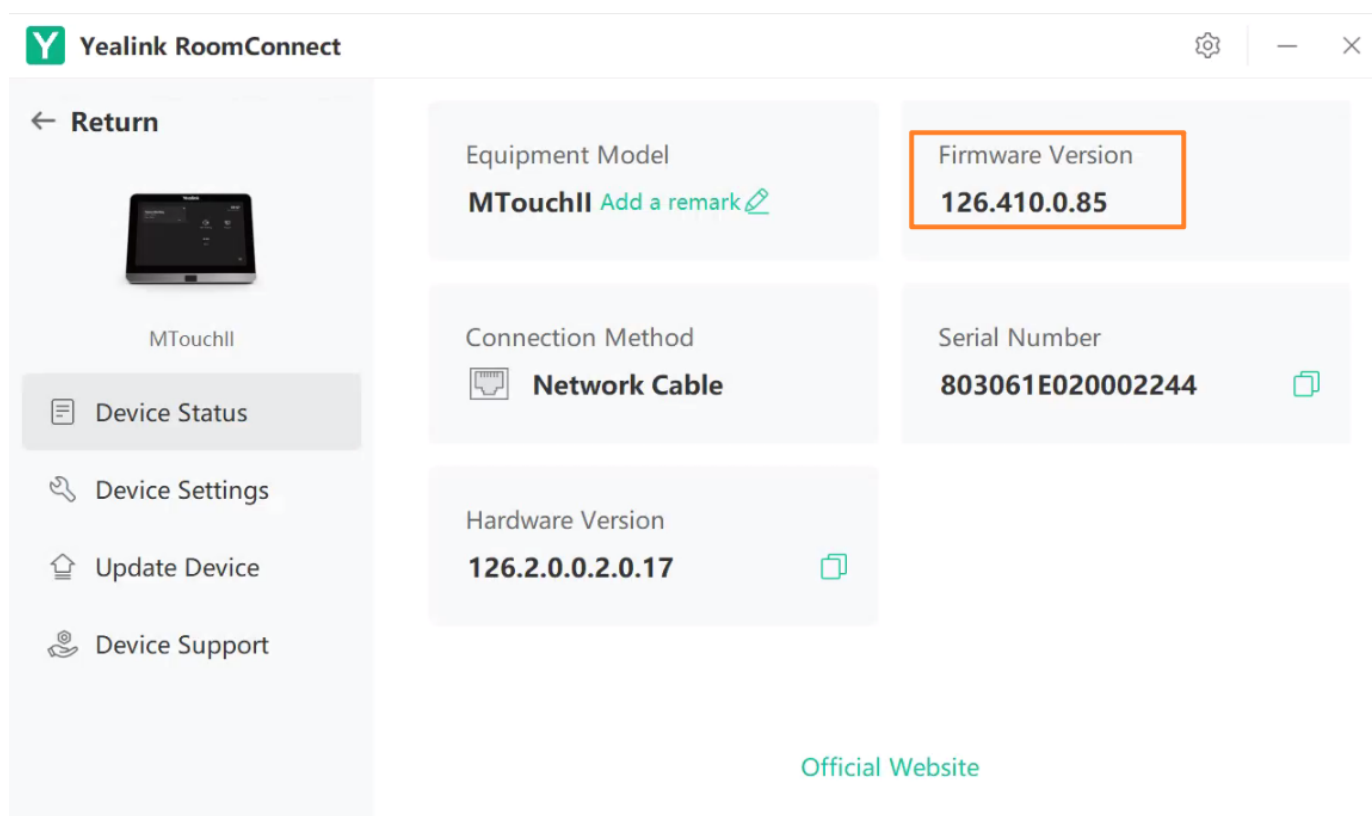

Update ZVC

Update Windows

For more information, refer to [Windows Update](#).

 
Update Zoom Rooms

You can sign in to the Zoom web portal as an admin to update Zoom Rooms. For more information, refer to [Upgrading or downgrading Zoom Rooms](#).

Update Firmware

Update via Yealink RoomConnect

1. In the Admin mode, open Yealink RoomConnect and select a desired device.
2. Select **Update Device** > **Update Manually**.

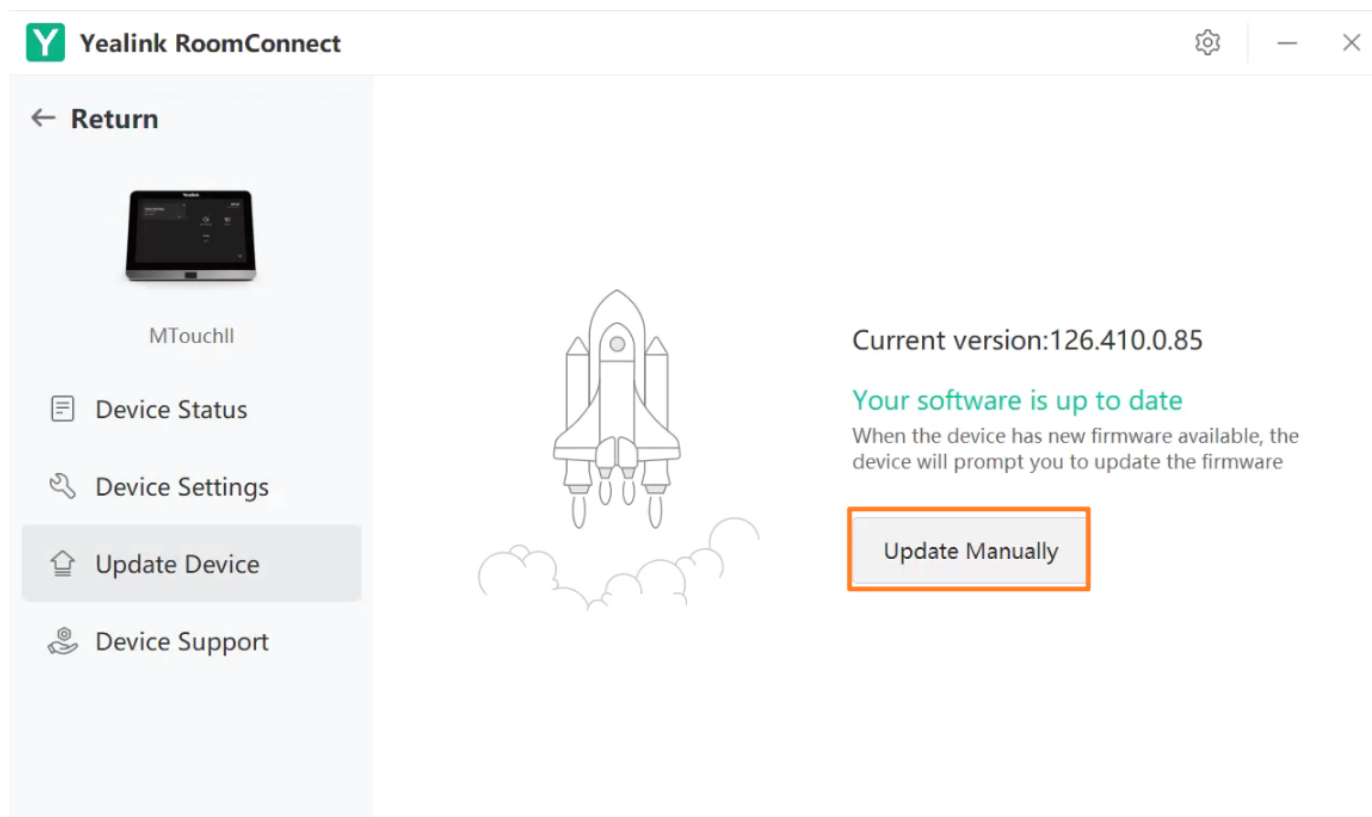

You can also update device firmware in batches through Yealink device management platform. For more information, refer to [Firmware Update](#).

Test Before Using

Before using the meeting room system, we recommend doing the following to ensure regular use.

Description	Related Document
-------------	------------------

Test video: Ensure the local images are usually displayed during the meeting.	Basic Settings
Test audio: Ensure the local audio collection is normal during the meeting.	Audio Diagnostics
Test meeting: Ensure you can enter the meeting properly.	Instant Meeting Join Meeting
Test screen sharing: Ensure you can use the screen sharing properly during the meeting.	Share Content via Cable Share Content via Yealink Wireless Presentation Pod