



Hardware Interface

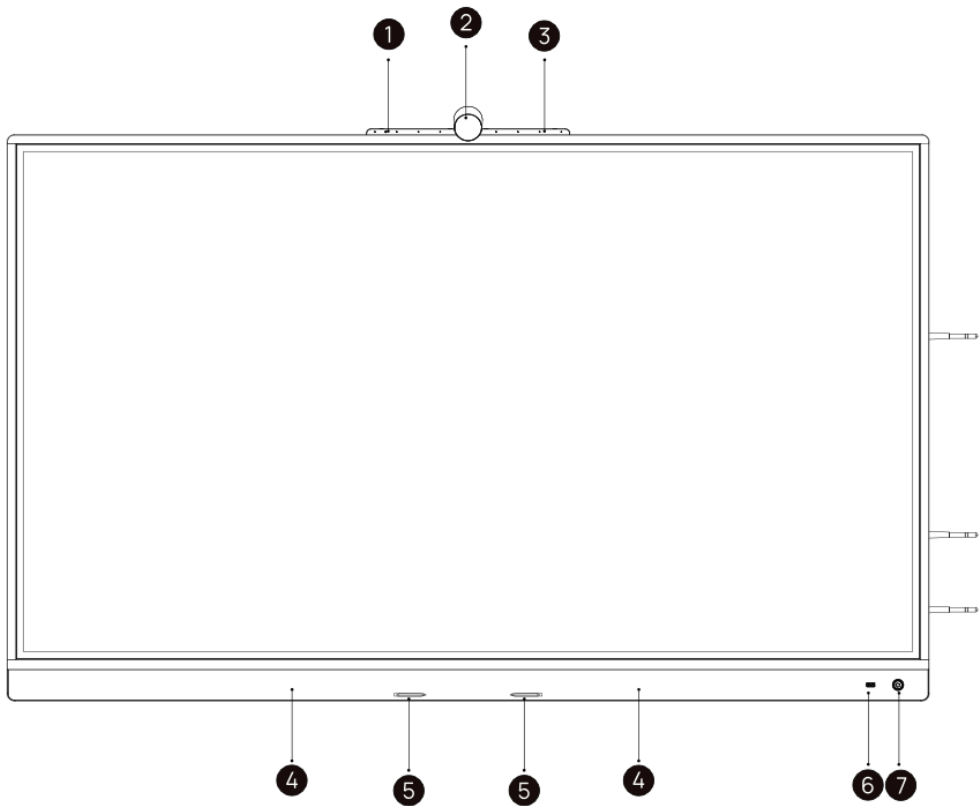


Front

No.	Name	Description
1	Indicator Light	Displays the device status.
2	Camera Lens	Built-in Camera
3	Microphone Array	Built-in multiple microphones
4	Speaker	Built-in speaker
5	Stylus Pen Holder	Magnetically attaches the stylus pen.
6	USB-A Port	- Connect to Yealink Wireless Presentation Pod for screen sharing. - Connect a USB flash drive.
7	Power Button	Brings up the power menu/wakes up the device.

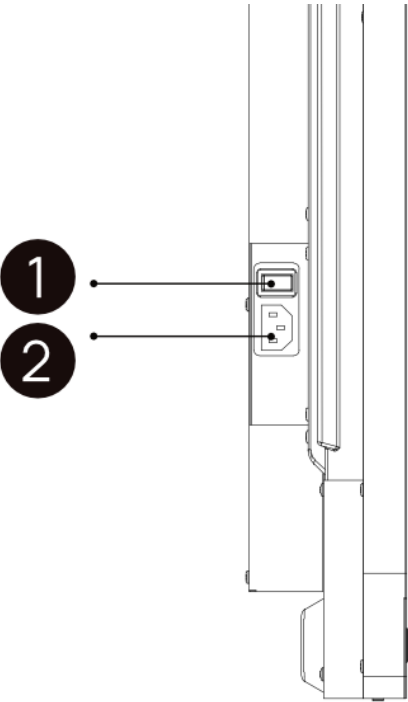

Left Side

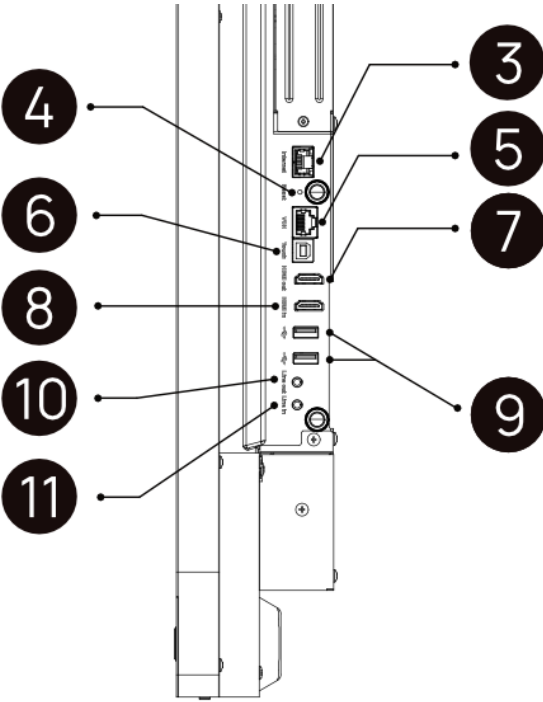

Right Side

No.	Name	Description
1	Power Key	Main Circuit Breaker - "I": Power on - "O": Power off
2	Power Input	Connects to the power supply.
3	Internet Port	Connects to the network.
4	Reset Key	Presses and hold for 5 seconds to restore factory settings.
5	VCH Port	Connects to Yealink accessories.
6	USB-B Touch Output Port	Reverse control is available when both USB-B and HDMI are connected.
7	HDMI out Port	Connects to a projector/external display.
8	HDMI in Port	- Connects to an HDMI-in cable for wired screen sharing; - Connects to the USB-B cable simultaneously to reverse control.
9	USB-A 3.0 Port	- Connects to Yealink Wireless Presentation Pod (WPP20/WPP30) for screen sharing. - Connects a USB flash drive.
10	Line out Port	Sends audio signals out from the device to external audio equipment.
11	Line in Port	Receives audio signals into the device from external sources.