



MVC-BYOD-Extender Deployment

Connection Method

Method 1: Connect to the VCH port of the Yealink UVC Camera/ Yealink SmartVision Camera

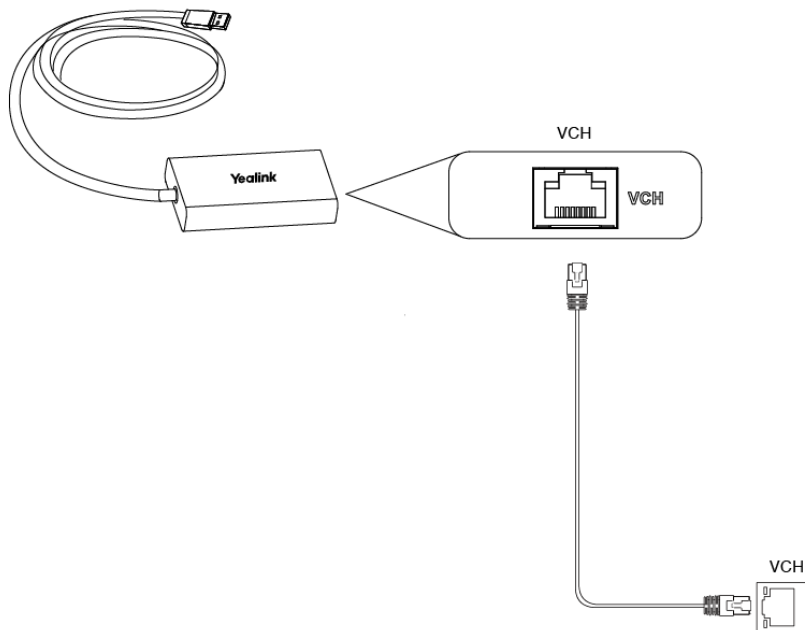


Method 2: Connect via PoE switch

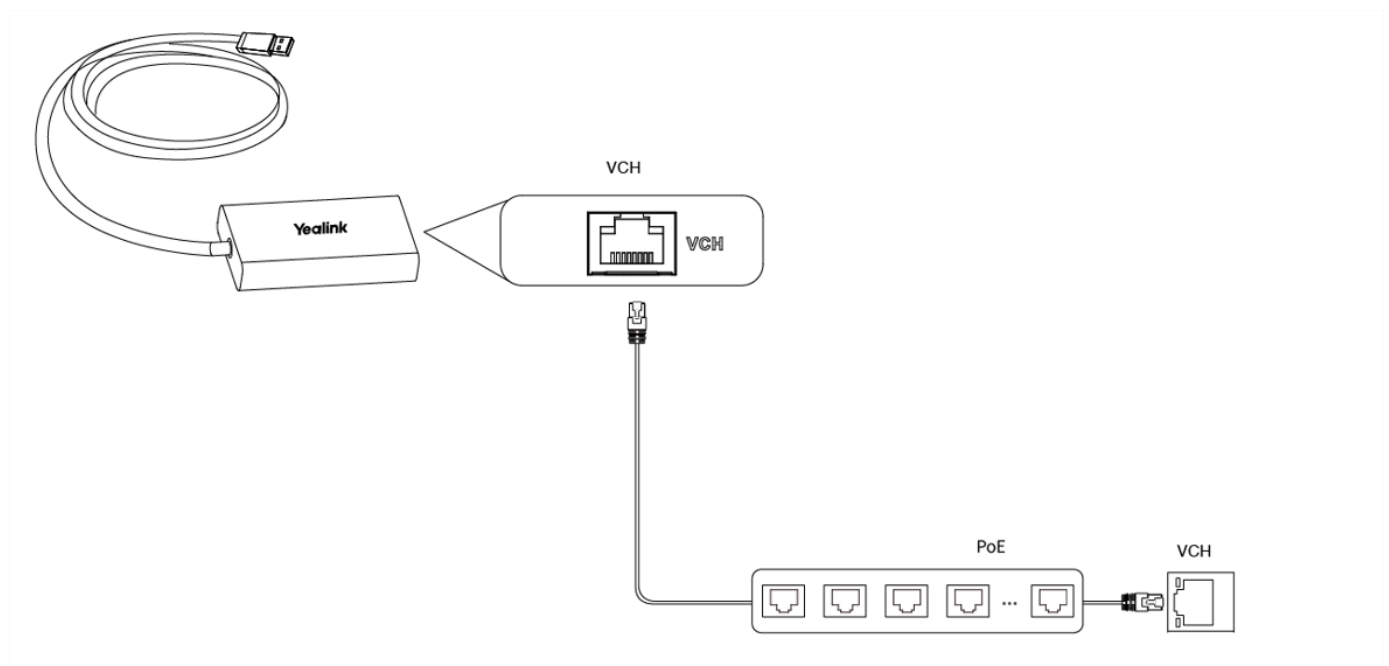

Method 3: Connect via Yealink AVHub

For specific connections, refer to [Yealink AVHub](#).

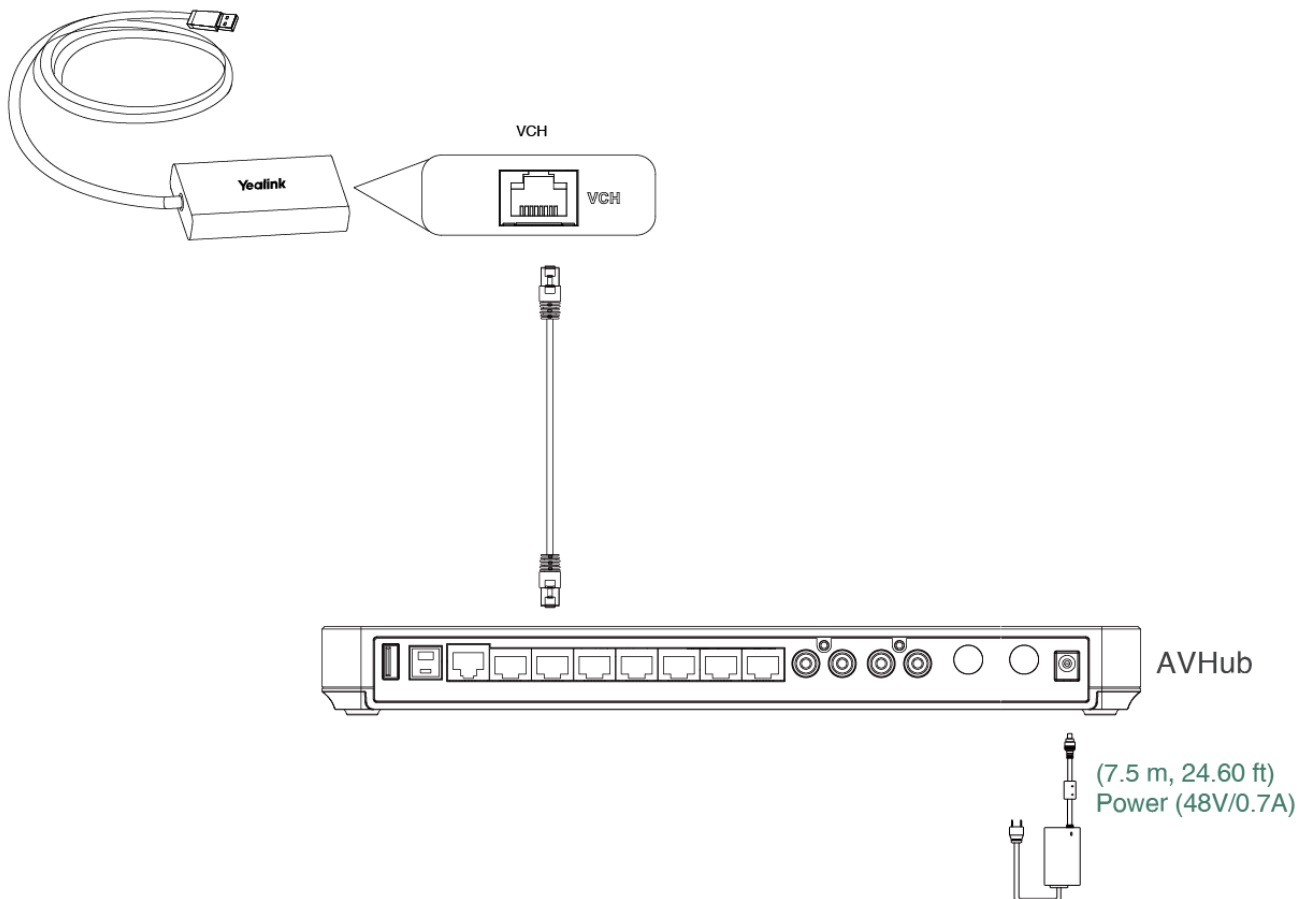

Method 4: Share content via an additional HDMI cable


If you want to share a screen from your PC to your TV, connect an additional HDMI cable to share content.

Deployment

Deployment Method

Method 1

This connection method supports Wired BYOD and Content Sharing.

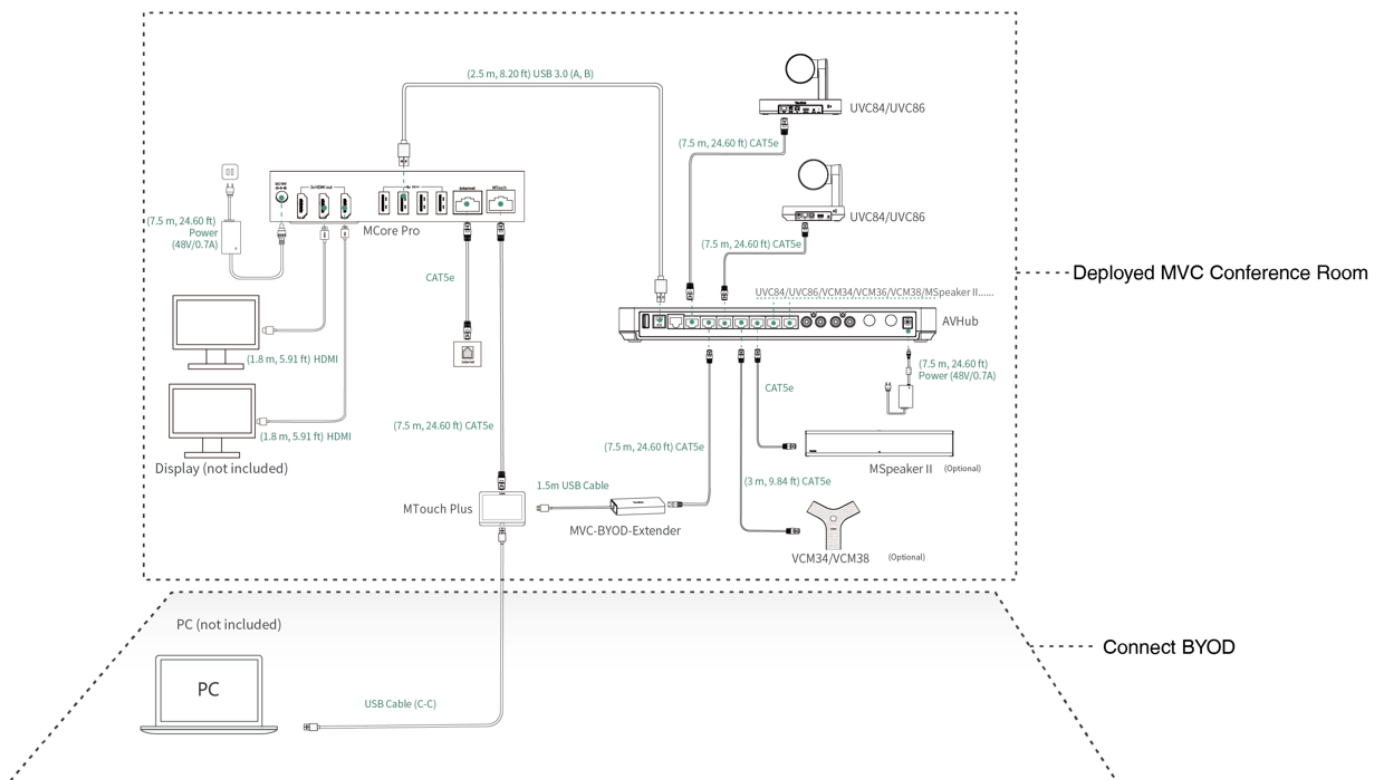

Method 2

This connection method supports Wired BYOD. If you want to share a screen from your PC to your TV, connect an additional HDMI cable to share content.

