

Set Up a Yealink RoomCast E2


Initialize Configuration

When you power on the Yealink RoomCast E2 for the first time or reset it to factory settings, you will enter the setup wizard interface.


Set Up on the Display

You can perform settings after connecting a wired mouse to the USB port of the RoomCast E2.


1. Select the desired language and go to the next step.

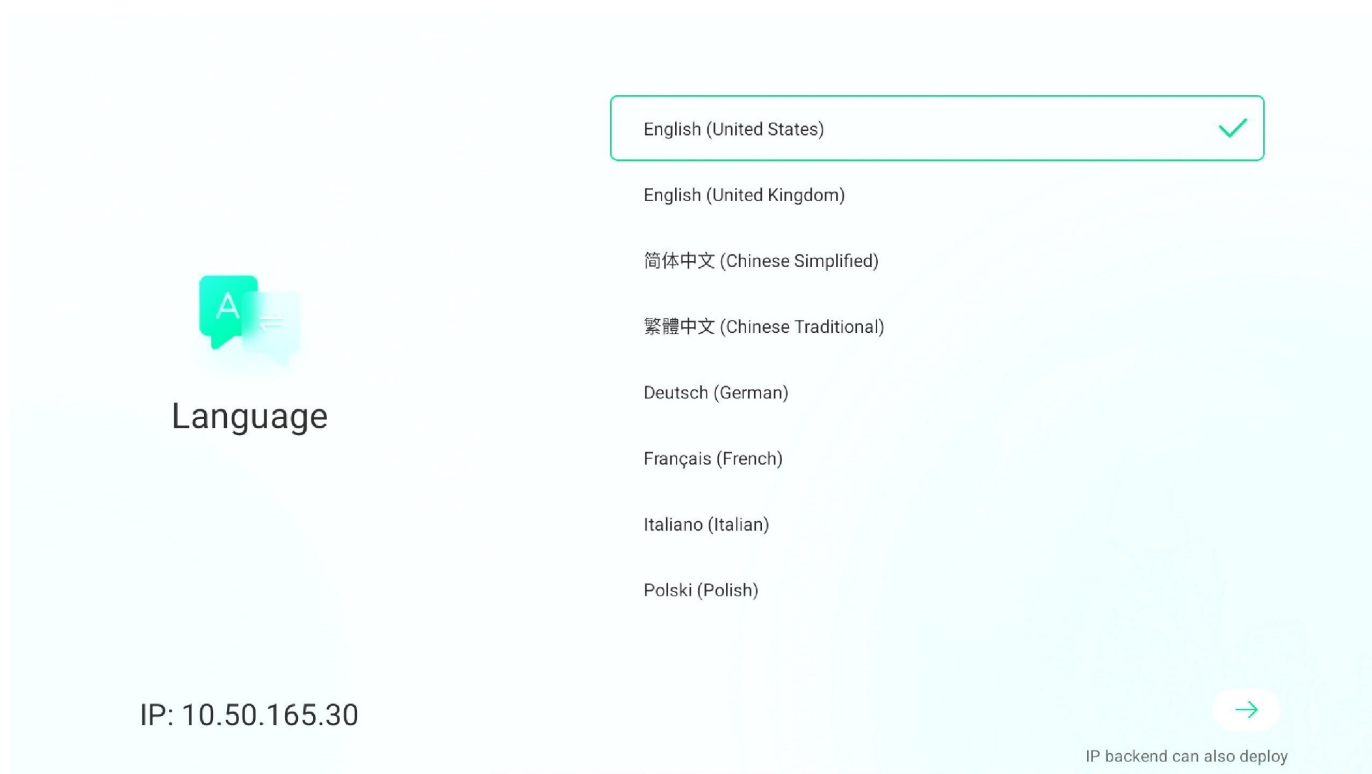

2. Configure a wired or wireless network and go to the next step. Refer to [Advanced Network](#) for advanced network configuration.

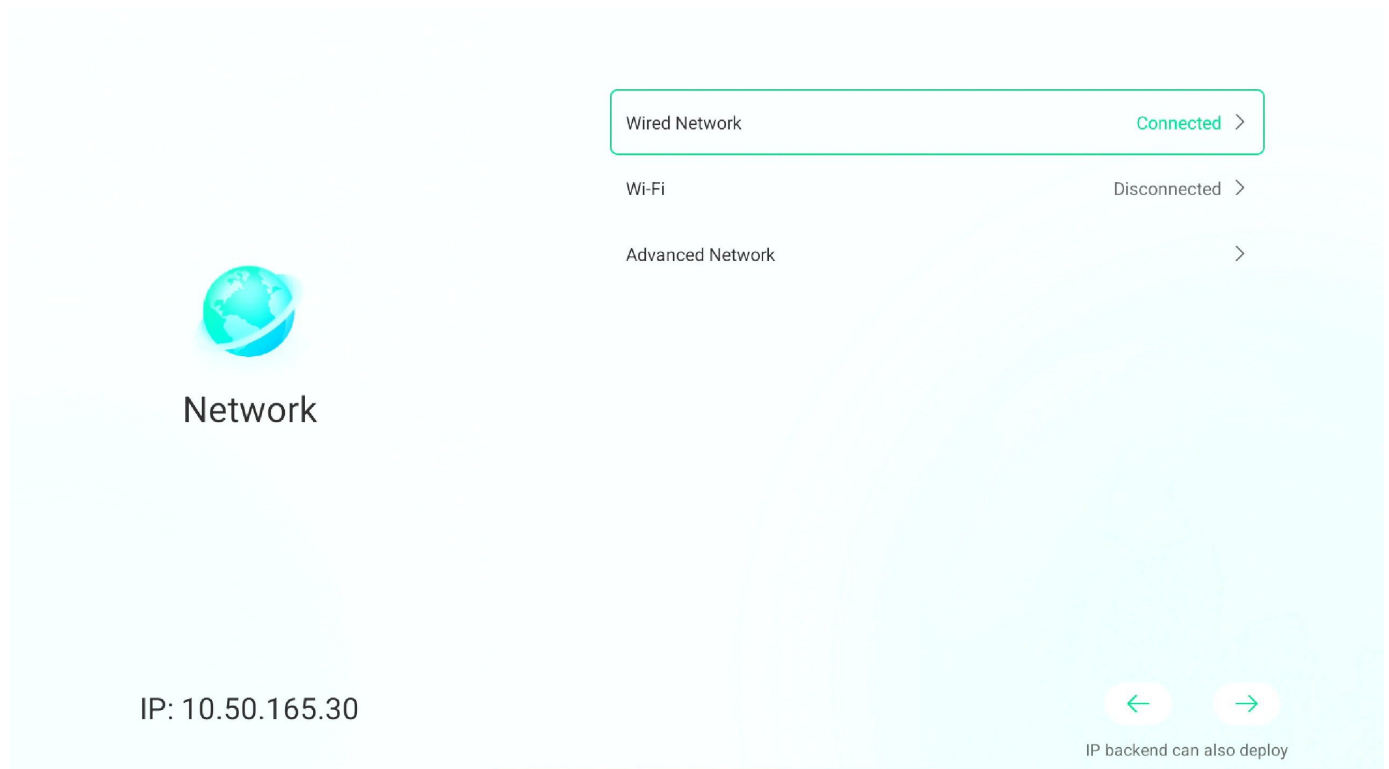

3. Set the date and time, and go to the next step.

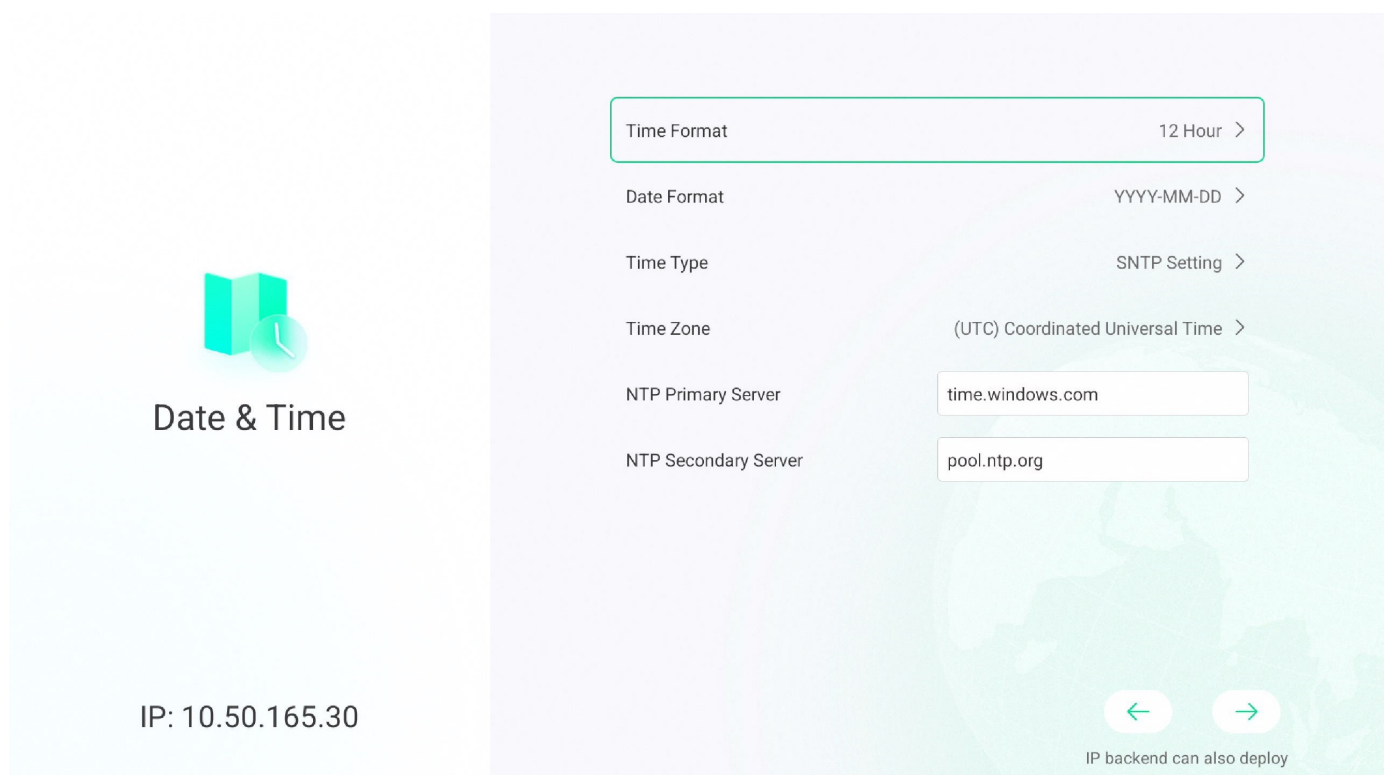


4. Turn on **Yealink Cloud Service** after confirming the end-user license agreement. After turning it on, you can use the device management and auto update features.

- To use the device management, turn on **Cloud Platform Device Management**, tap **Yealink Device Management Platform**, and configure the parameters.
- To keep your software up to date, turn on Auto Update and configure the parameters.



Where to find the Enterprise ID (Deployment ID) on YMCS?
Log in to the YMCS, and go to System > Enterprise Information.

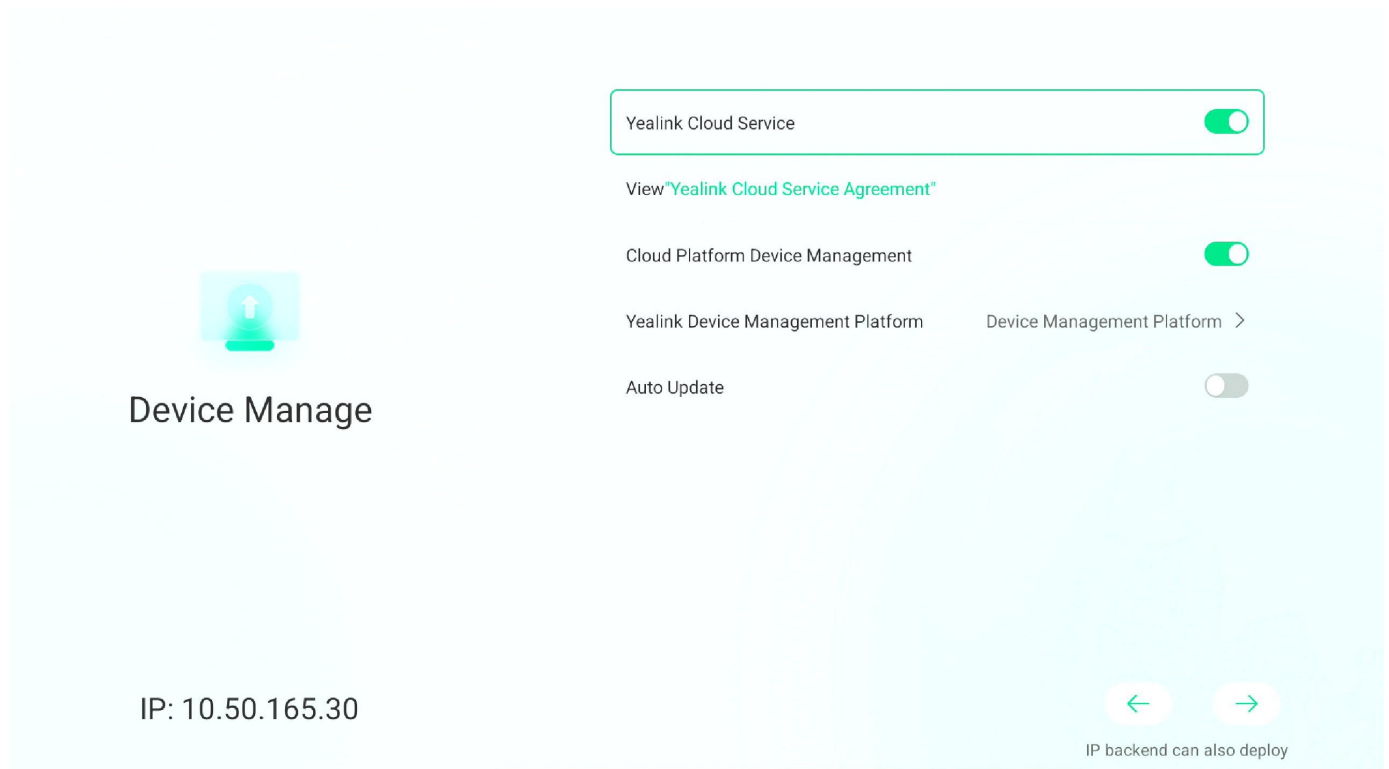


5. Select the desired platform and go to the next step.




You can choose any platform. If you want to switch to another platform, please reset the device to factory and reselect the platform.


If you choose Zoom Rooms, refer to [Register and Sign in Account](#).

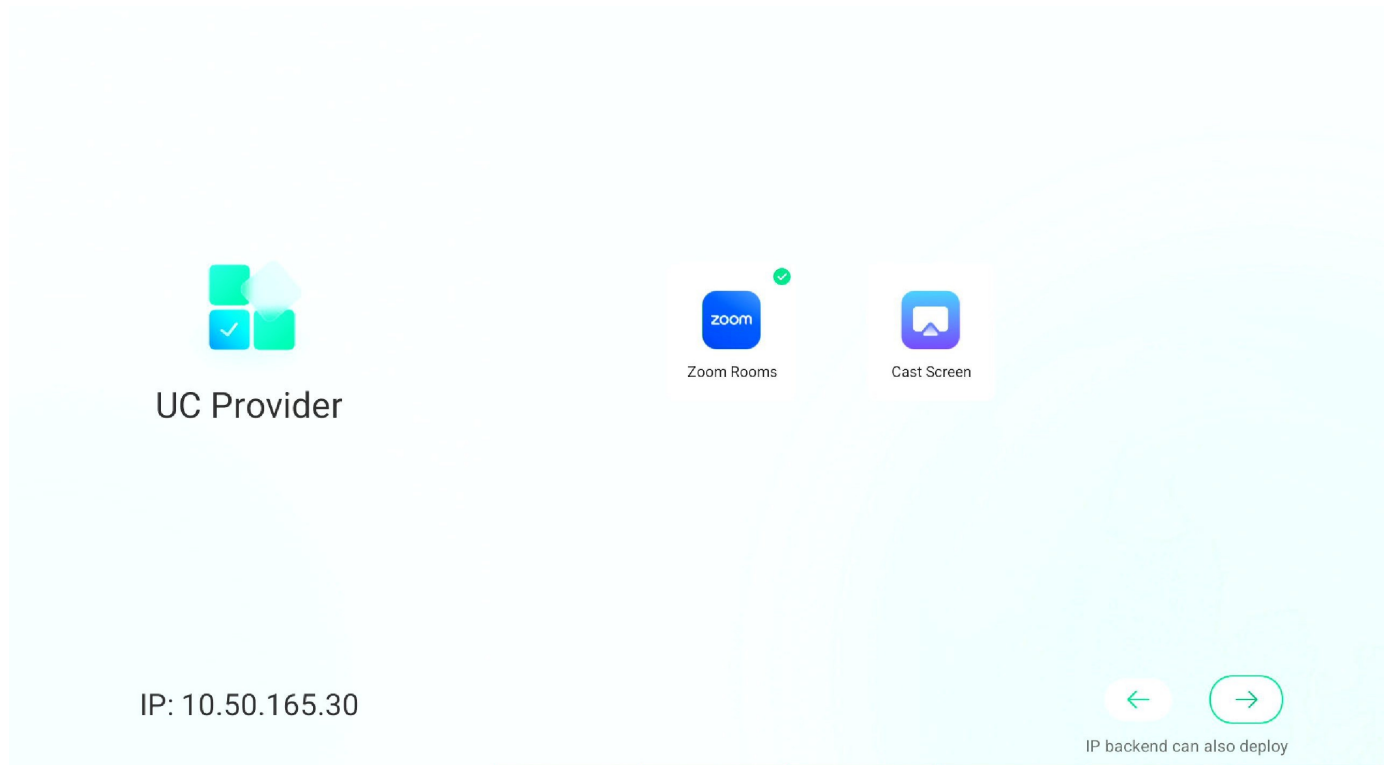

6. Set the admin password and go to the next step. Due to regulatory requirements, it is necessary to change the password.

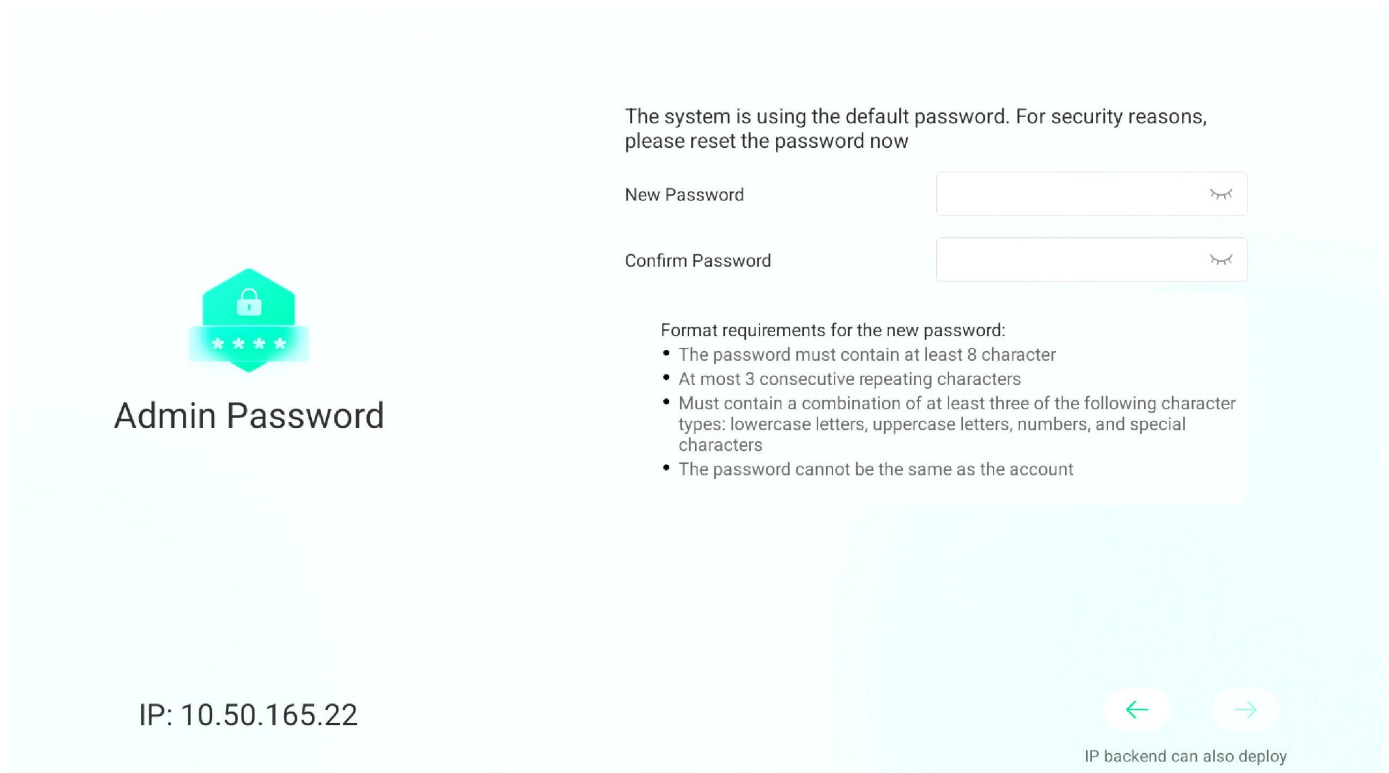

7. Select **Start** to complete the setup wizard.

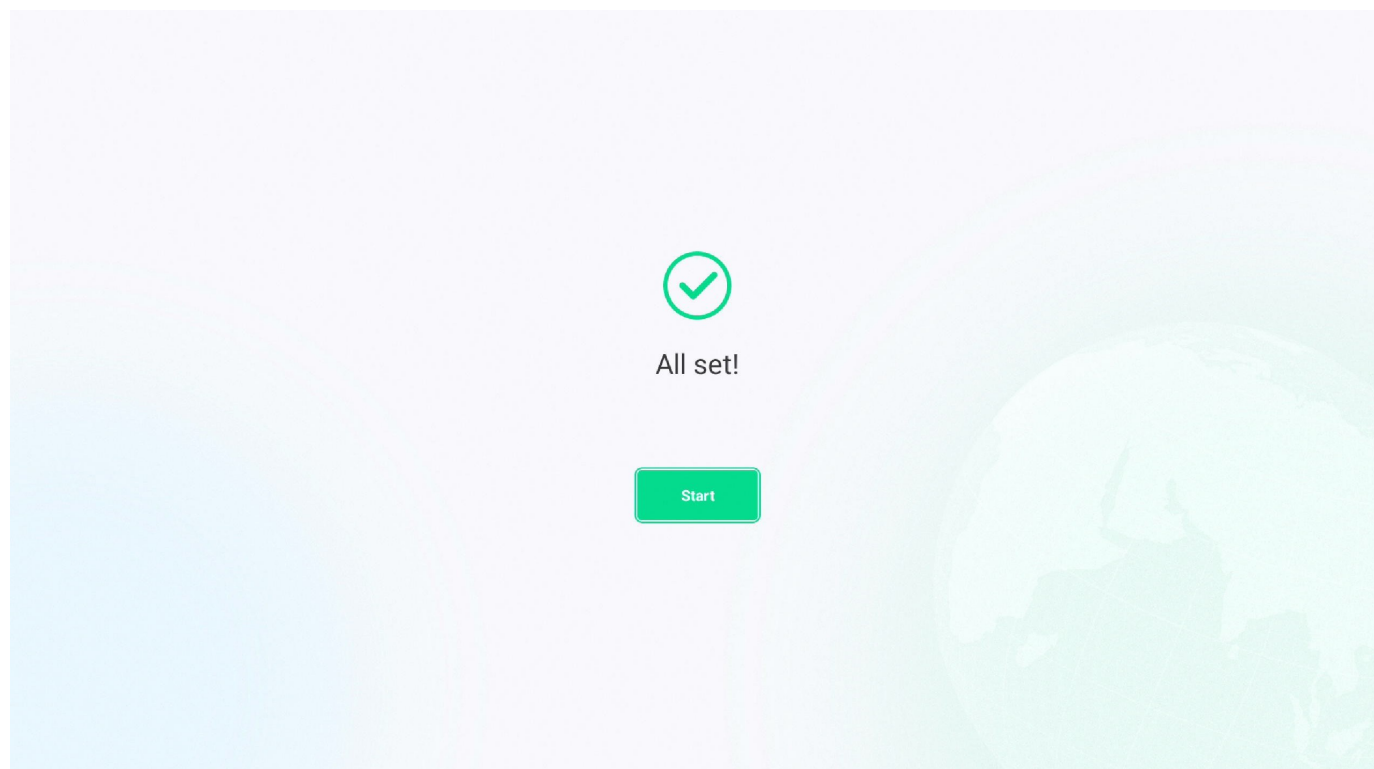

Set Up on the Web User Interface

You can perform settings on the web user interface.

Connect to a wired network

1. Connect the PC to the same LAN.
2. Open a web browser and enter the device IP address (displayed in the upper-right corner of the display) in the address bar. The default administrator username is “admin” and the password is “0000” .
3. Configure the basic settings, network configuration, and system settings on the home page.

Quick Setup

 Personalization

 Time

 Network

 Wi-Fi Hotspot

 Device Management

 
 Platform Selection

 Password

Language

English (United States) ▼

Theme

☒ 

☐ 

* Meeting Room Name/Host Name

RoomCast E2

Display Top Bar

☒

[Next Step](#) 

Connect to a wireless network

1. Connect the PC to the RoomCast E2 wireless AP. The AP name and password are displayed on the display, and the default name is Yealink-XXXXXX.
2. Open a web browser and enter the device IP address (for example, <https://192.168.144.1>) in the address bar. The default administrator username is “admin” and the password is “0000” .
3. Configure the basic settings, network configuration, and system settings on the home page.

Quick Setup

 Personalization

 Time

 Network

 Wi-Fi Hotspot

 Device Management

 
 Platform Selection

 Password

Language

English (United States) ▼

Theme

☒ 

☐ 

* Meeting Room Name/Host Name

RoomCast E2

Display Top Bar

☒

[Next Step](#) 

! If you do not connect to a wired network, you can connect to the wireless network after accessing the web user interface through the methods mentioned above.