

Pair VCM36-W with Yealink MeetingBoard

Introduction

Yealink VCM36-W is a cutting-edge wireless video conferencing microphone designed to meet diverse meeting room requirements. Equipped with a built-in 3-microphone array, the VCM36-W offers a 20-foot (6-meter) 360° voice pickup range. Its advanced echo cancellation and noise suppression technology effectively reduces ambient noise by up to 90 dB, ensuring superior audio quality during full-duplex calls.

The VCM36-W delivers comprehensive audio coverage suitable for conference rooms of all sizes. With simple one-step pairing, it is easy to set up and offers up to 12 hours of battery life in conference mode and 7 days in standby mode.


The VCM36-W comes with a wireless charging dock, allowing the microphone to be recharged conveniently. Its portable design enables users to adjust its placement as needed during meetings, providing unparalleled flexibility and convenience.

Before you Begin


- For the compatibility of VCM36-W and Yealink MeetingBoard, refer to [Rooms Accessories Compatibility Lists](#).
- For more information about the VCM36-W, refer to [Yealink VCM36-W Quick Start Guide](#).
- For the MeetingBoard series, you need to upgrade the firmware version to 155.15.0.46 or later.
- Pairing with Yealink MeetingBoard needs to enable the Wireless AP. On the Yealink MeetingBoard screen, tap the sidebar menu button, tap **Settings** > **Network** > **Wireless AP**, and enable **Wireless AP**.

Connect VCM36-W to Yealink MeetingBoard

1. Connect the VCM36-W to the USB-A port of Yealink MeetingBoard.

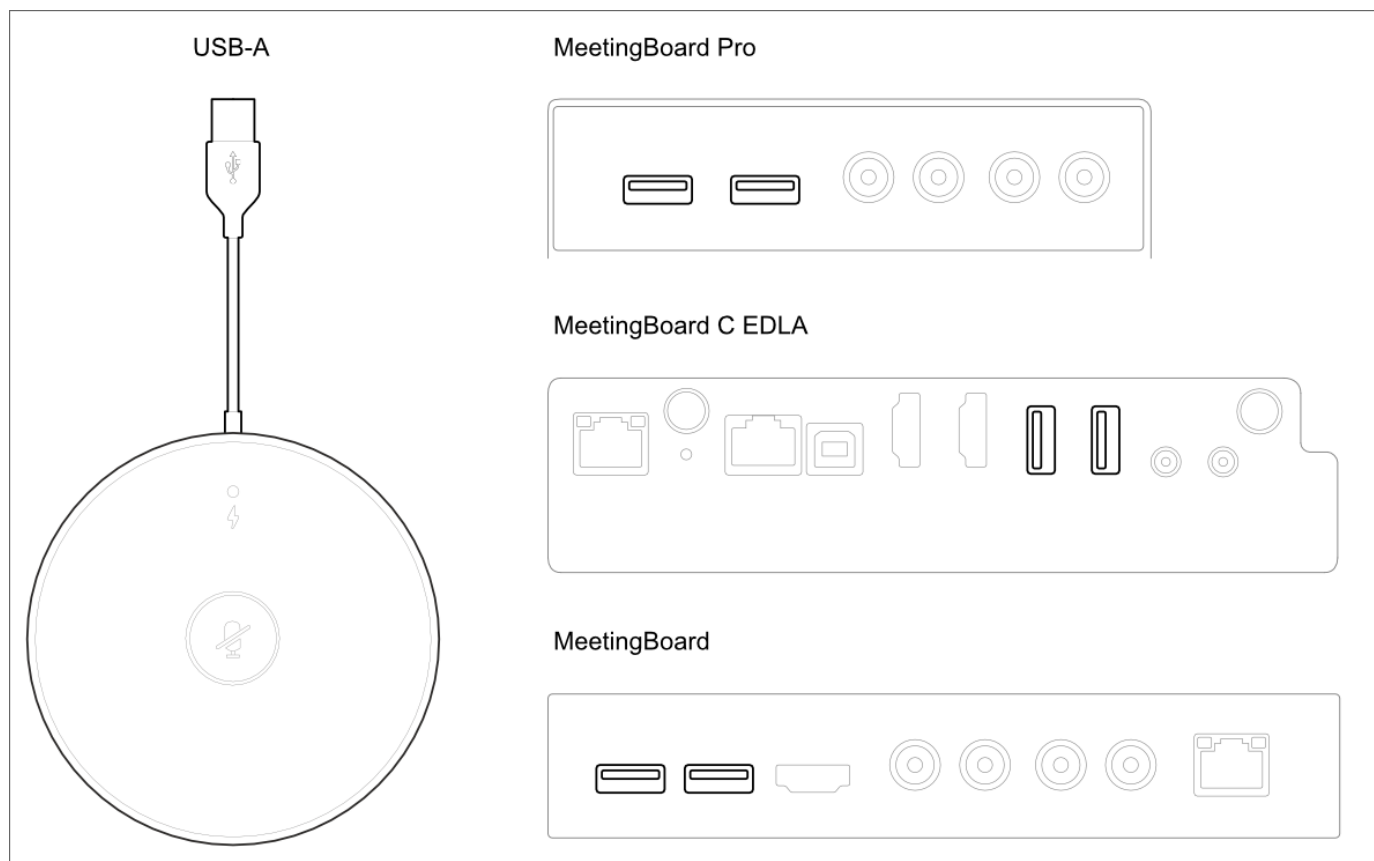


2. Unplug the VCM36-W from Yealink MeetingBoard when the screen shows "VCM36-W pairing successful".
3. On the Yealink MeetingBoard screen, tap the sidebar menu button, and tap **Settings > Audio > Wireless Microphone**.
4. Select the wireless microphone you want to find and tap **Find**. The Mute button on the VCM36-W will now flash red and green alternately.

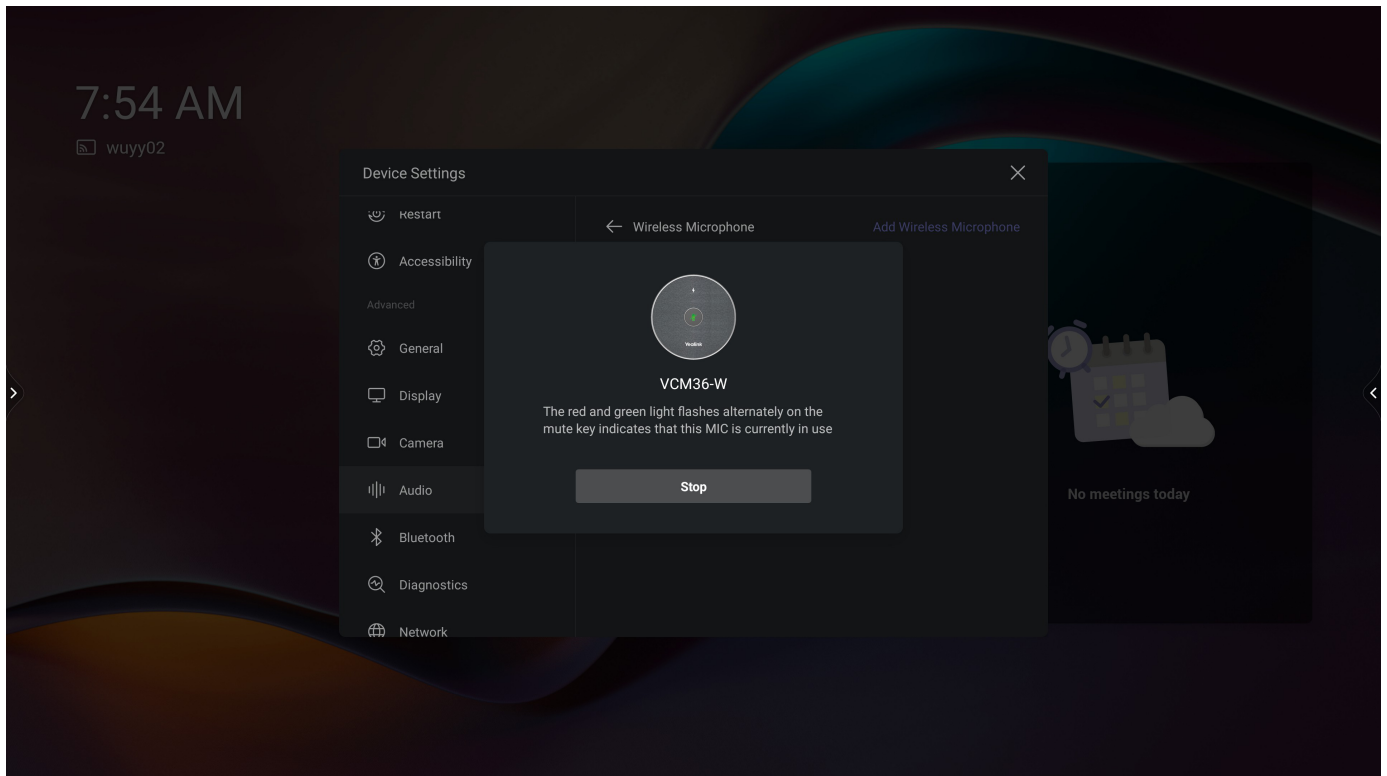

Unbind VCM36-W

1. On the Yealink MeetingBoard screen, tap the sidebar menu button, and tap **Settings > Audio > Wireless Microphone**.
2. Select a wireless microphone, then tap **Unbind**.

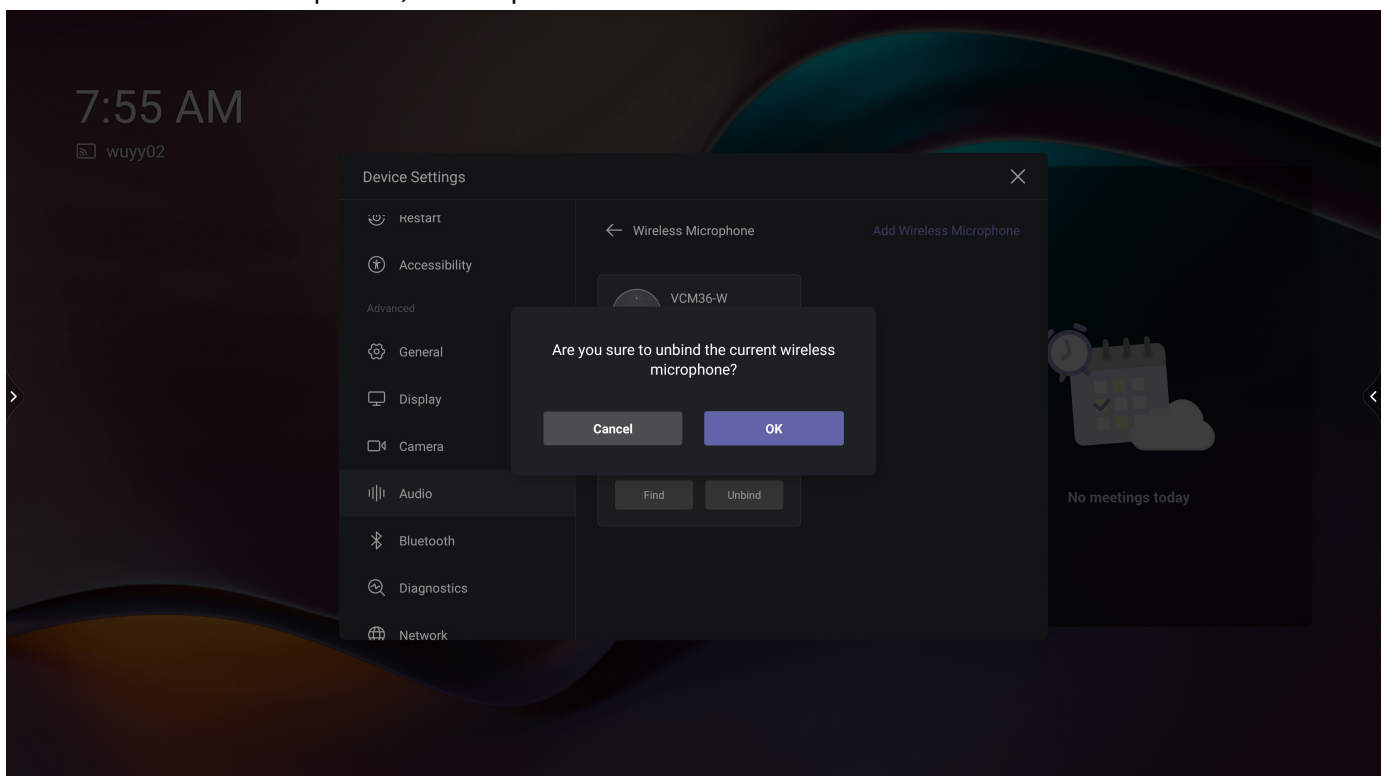

Update VCM36-W



Ensure the VCM36-W is powered sufficiently before upgrading.

- After pairing the VCM36-W to the Yealink MeetingBoard, the built-in firmware will be obtained from the Yealink MeetingBoard.

FAQ

Can VCM36-W and the built-in microphone of MeetingBoard pick up sound at the same time?

The VCM36-W is used as the expansion microphone. When you have both the expansion microphone and the built-in microphone, both the built-in microphone and the expansion microphone can pick up sound.

How to reset the VCM36-W microphone?

The VCM36-W microphone does not support reset.