




# PanaCast U30

## Screen Mount

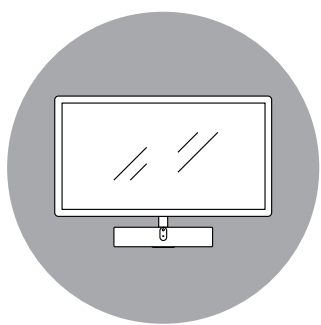


**Install below screen**

Start from page 1 →

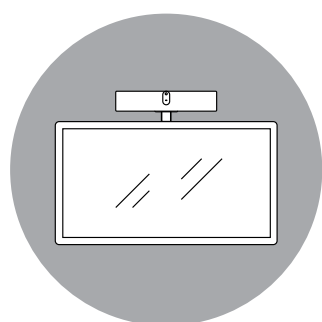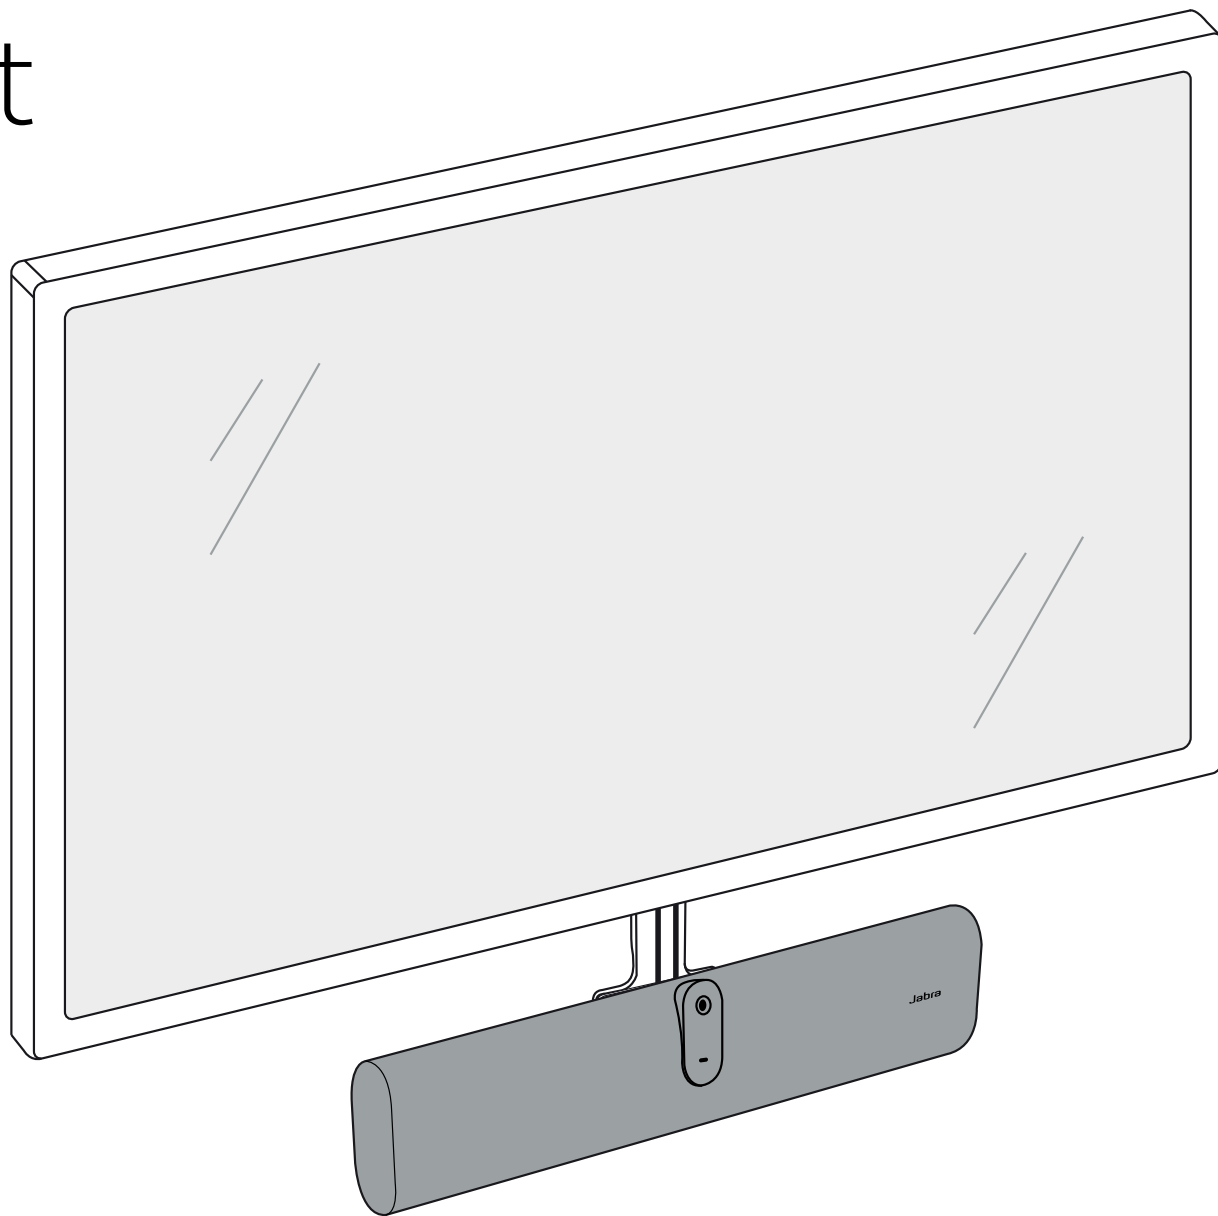


**Install above screen**


Start from page 8 →

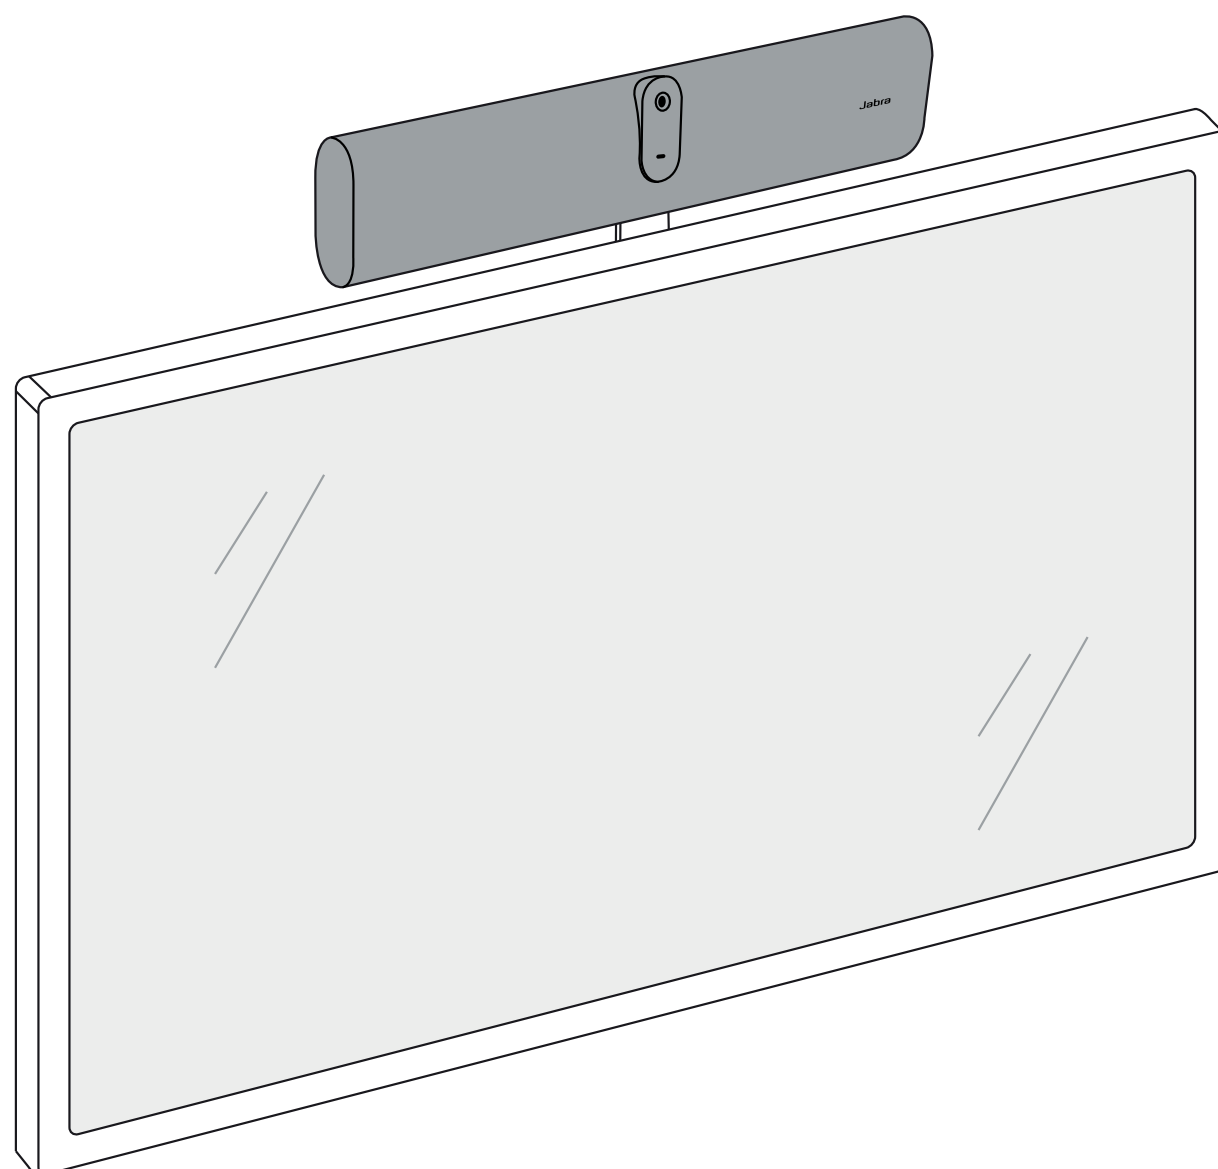


Screen Mount horizontal section

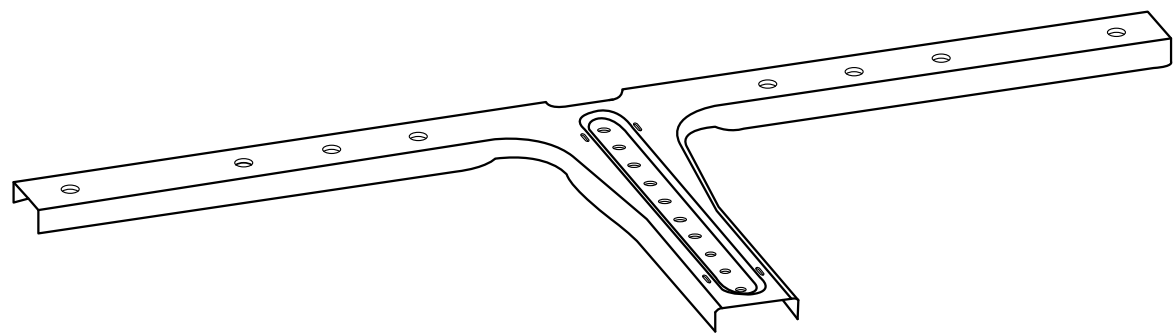


Screen Mount vertical section

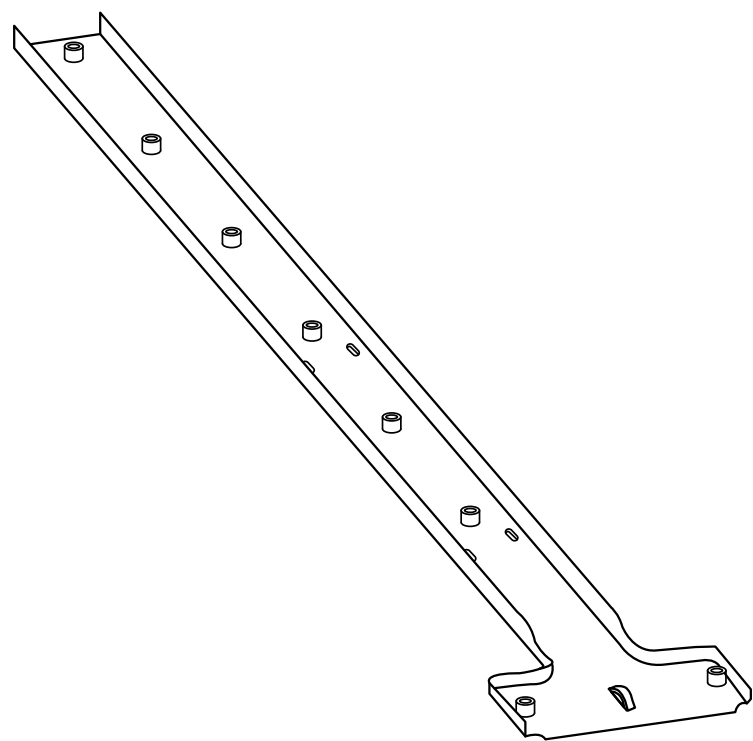


Screws

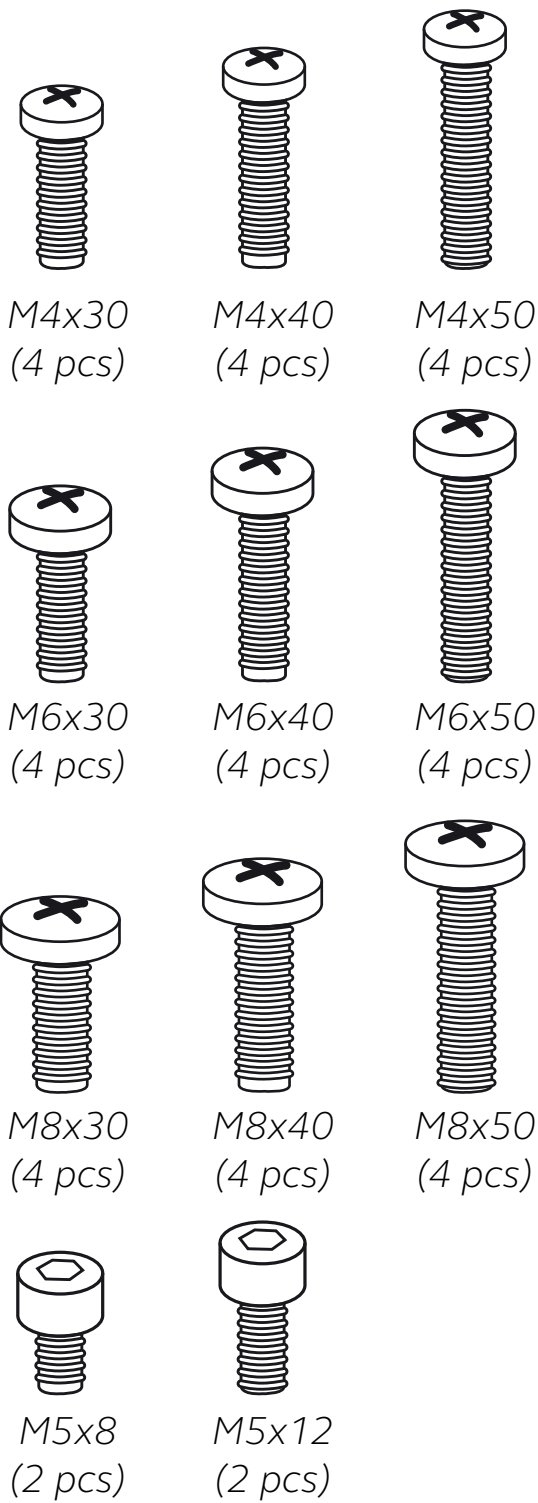

Spacers

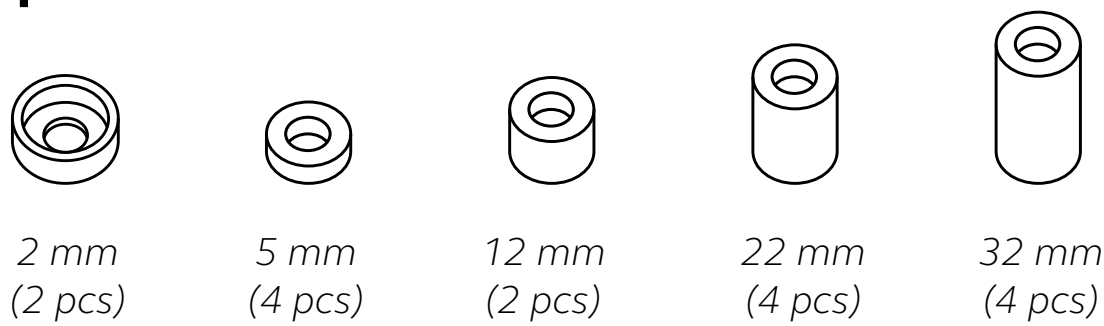


Washers

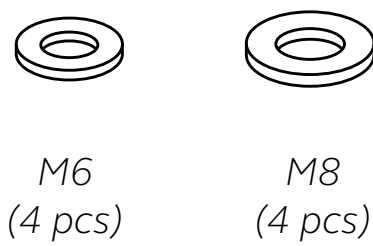


Protective pads




Tools needed (not supplied in the pack)

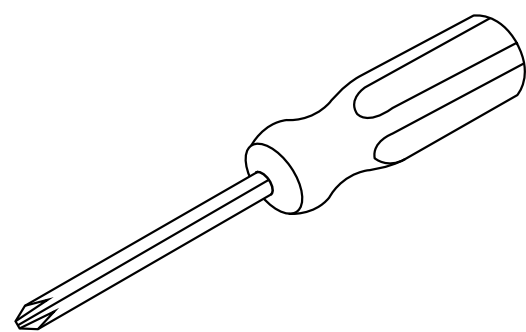

Phillips head screwdriver

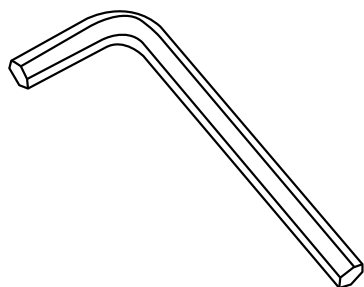



4 mm hex key

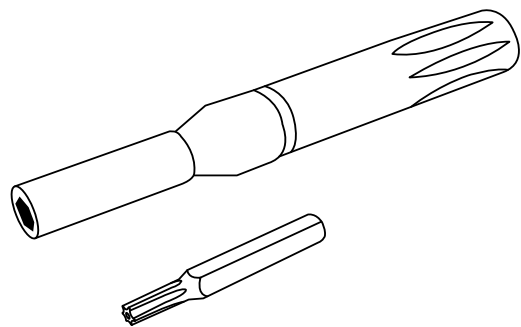

Screwdriver (T10)


1

If the screen is already wall-mounted, remove it from the wall.

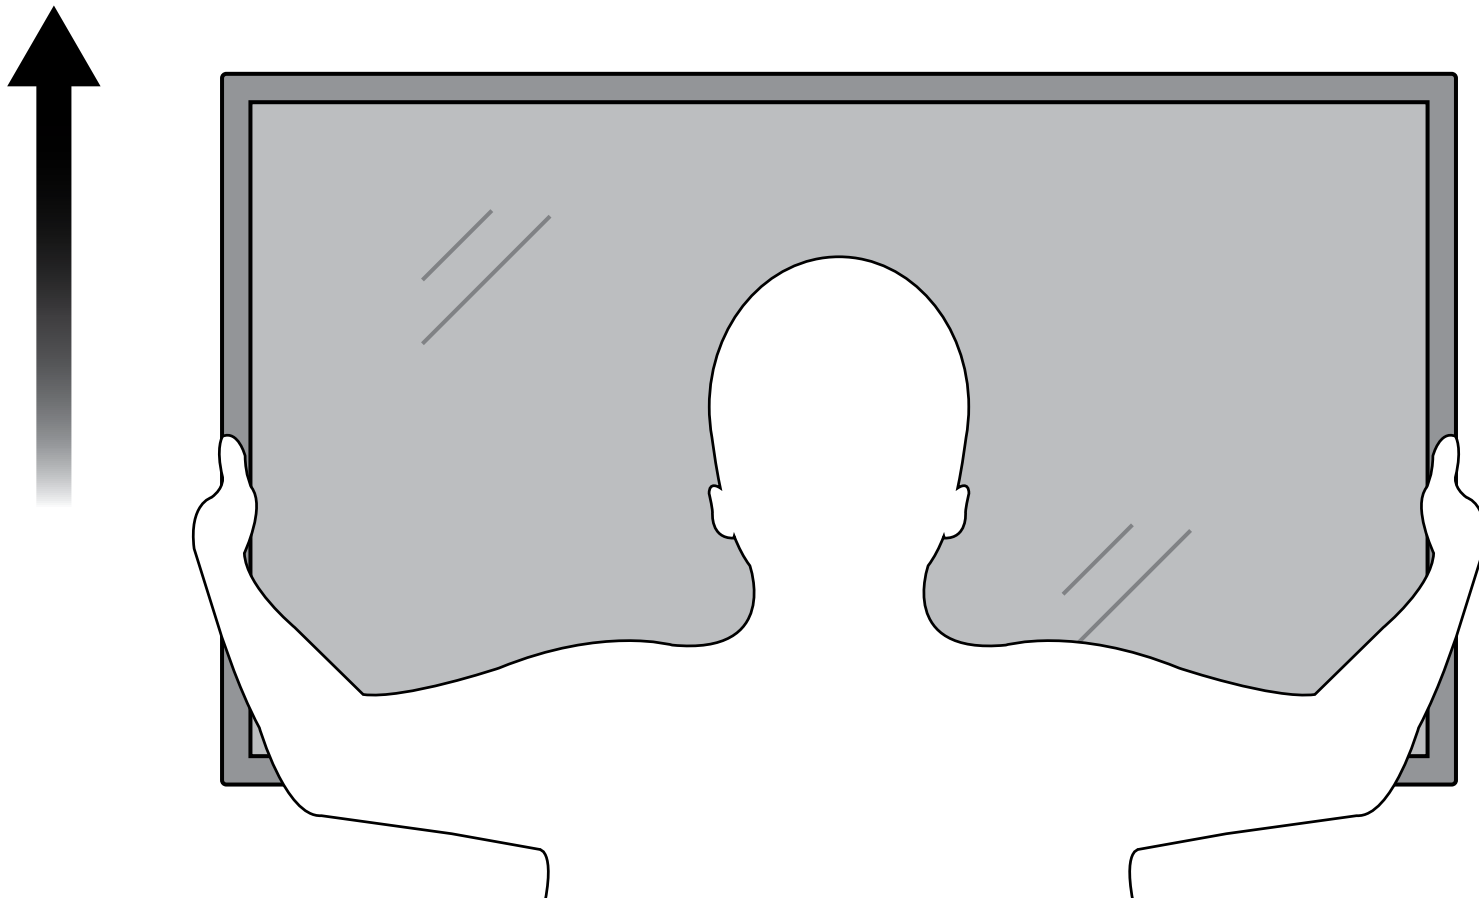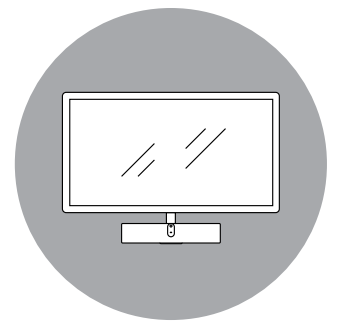



2

Detach the existing **VESA mount** from your screen.

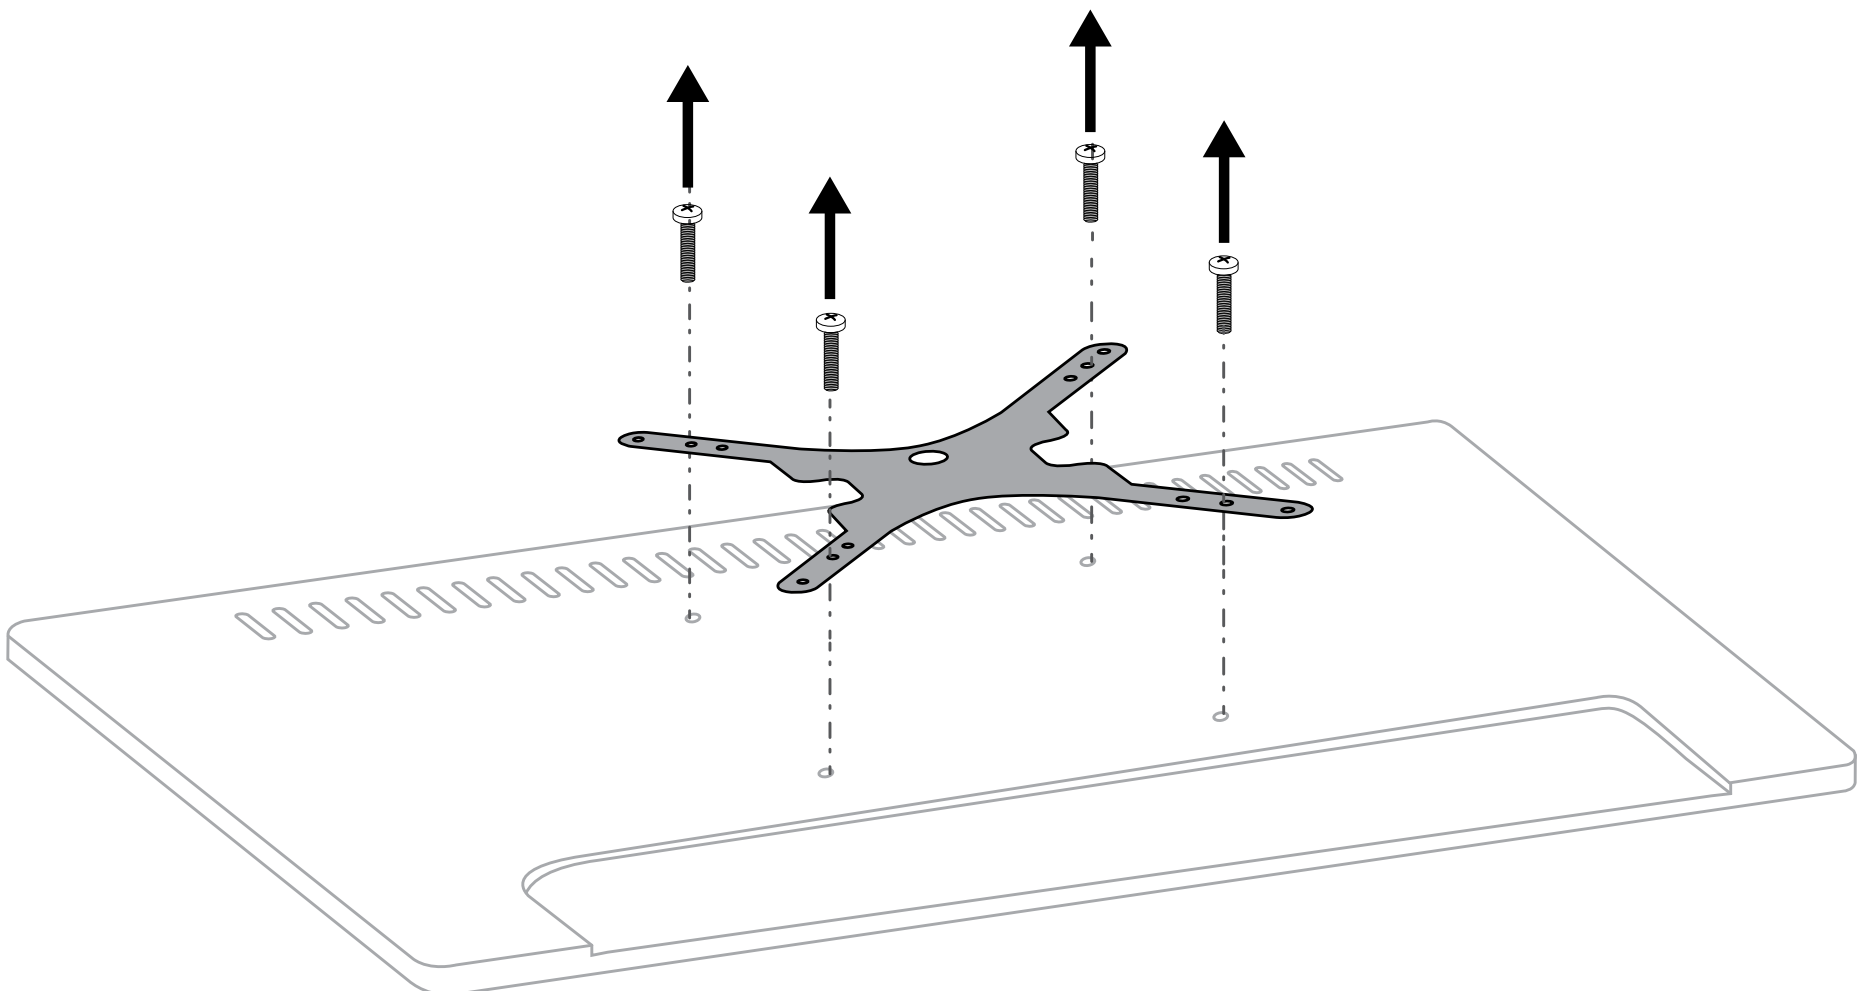



3

Measure the distance between the VESA mount hole and the bottom of the screen. This distance is **X**.

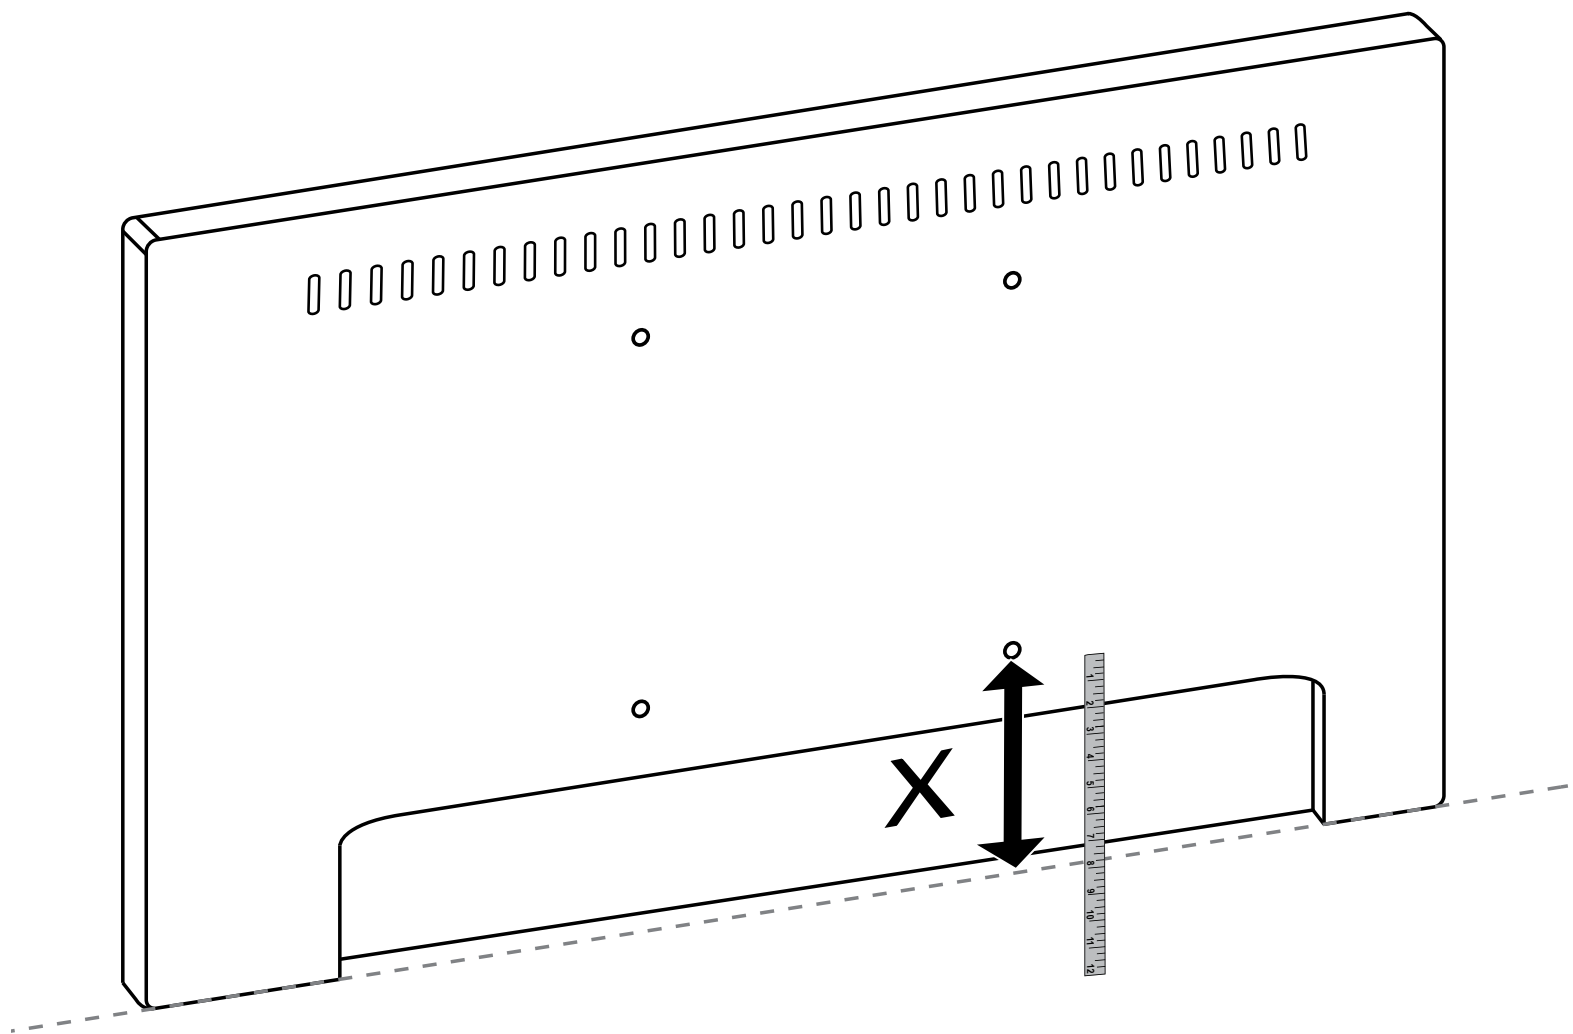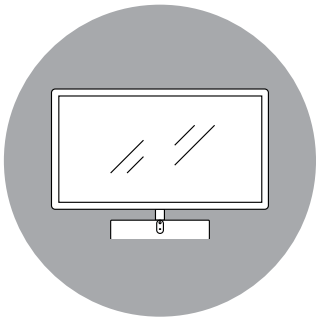





4

Assemble the Screen Mount and ensure that the distance illustrated is approx **X + 9 cm or X + 3.5 inches**.

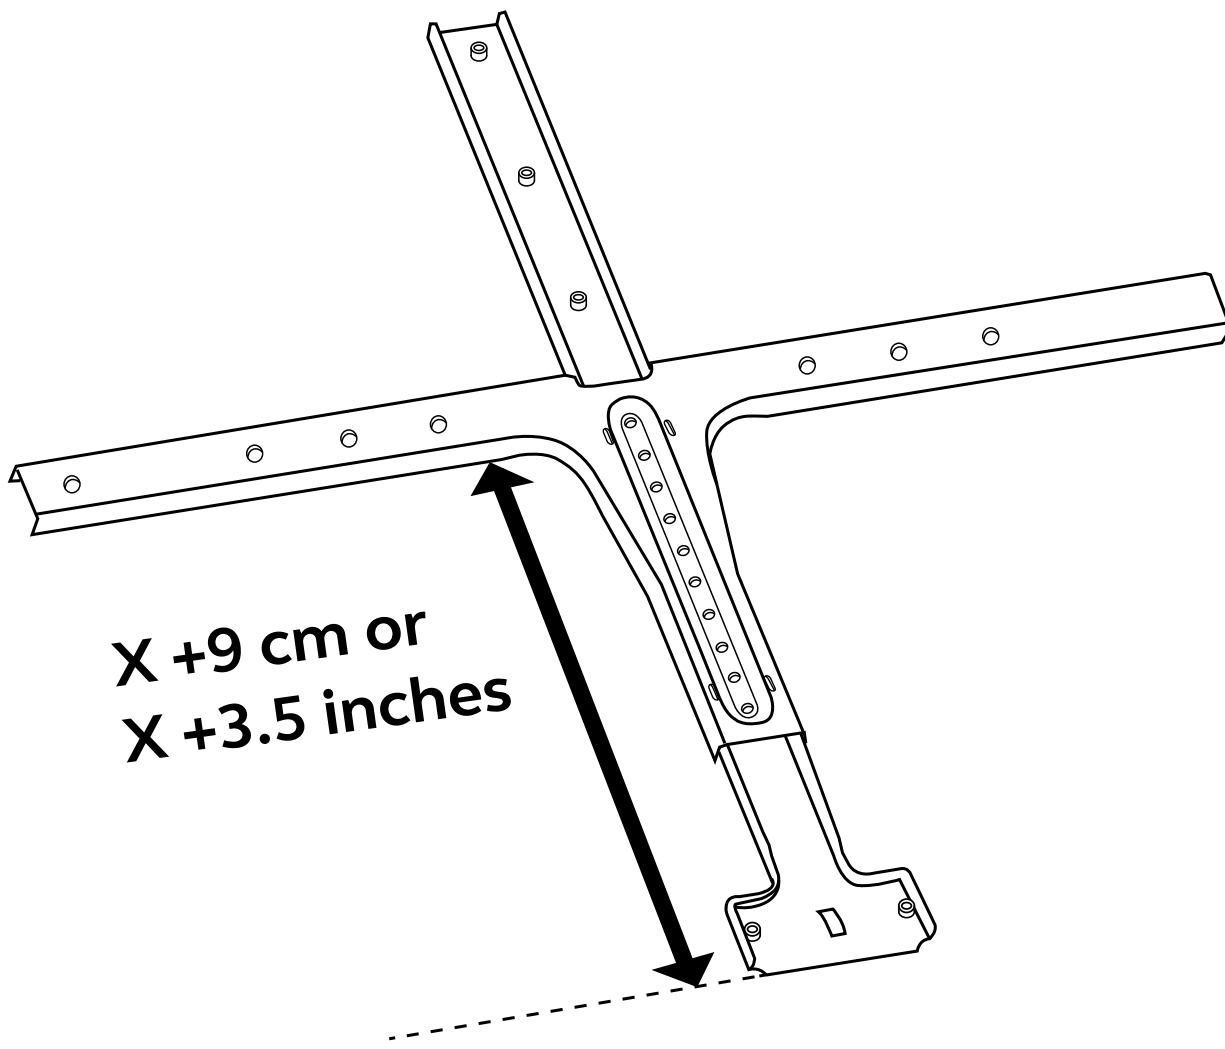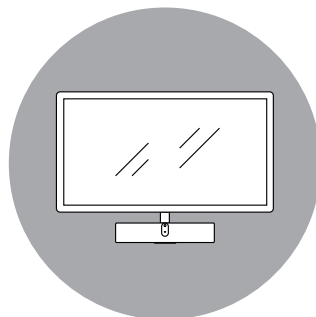



5

Screw the horizontal and vertical sections together using the supplied **M5x8 screws** and a **4 mm hex key**.

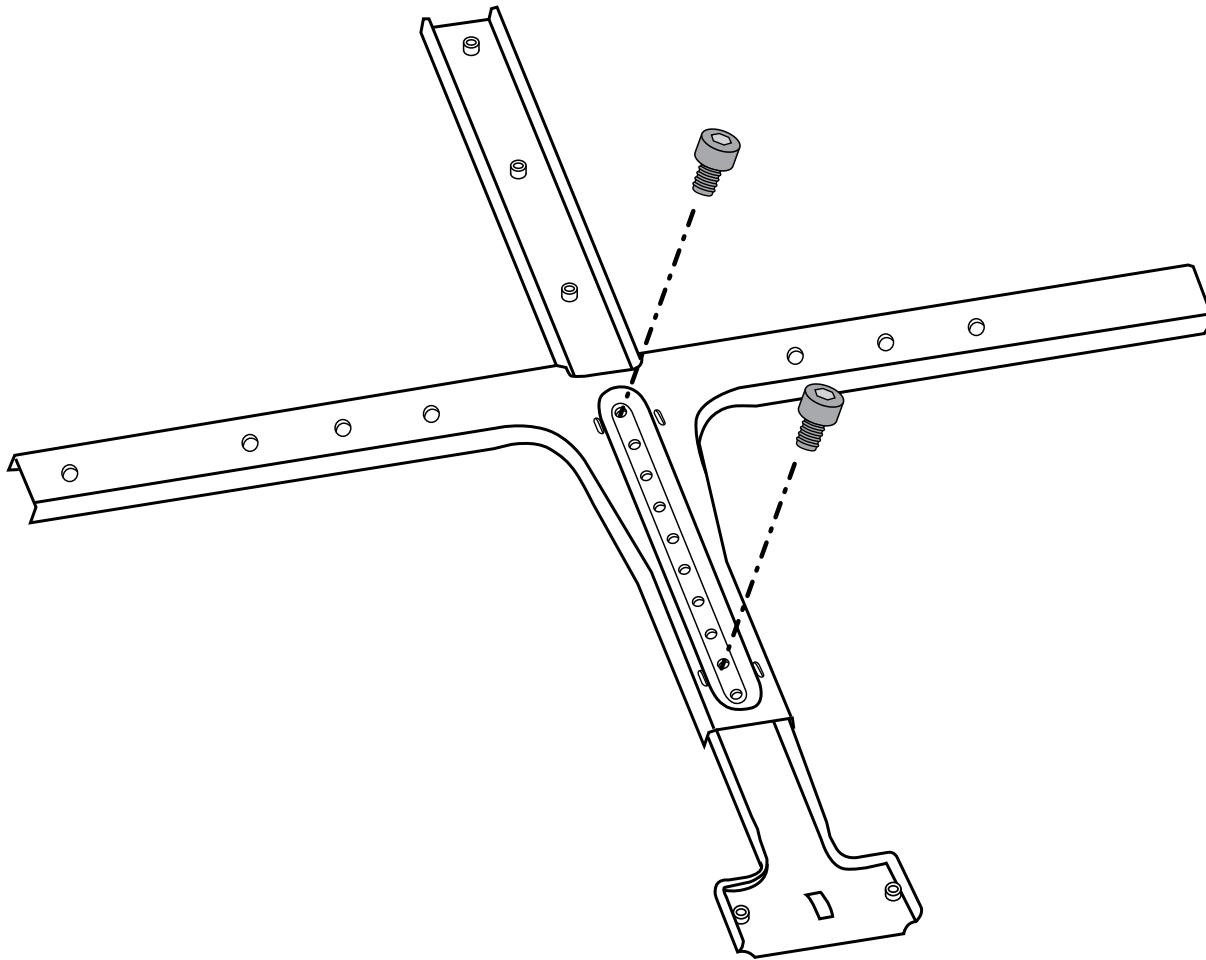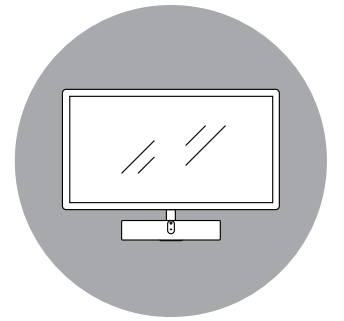**M5x8****M5x12**


6

Stick the adhesive **protective pads** to the back of the Screen Mount.





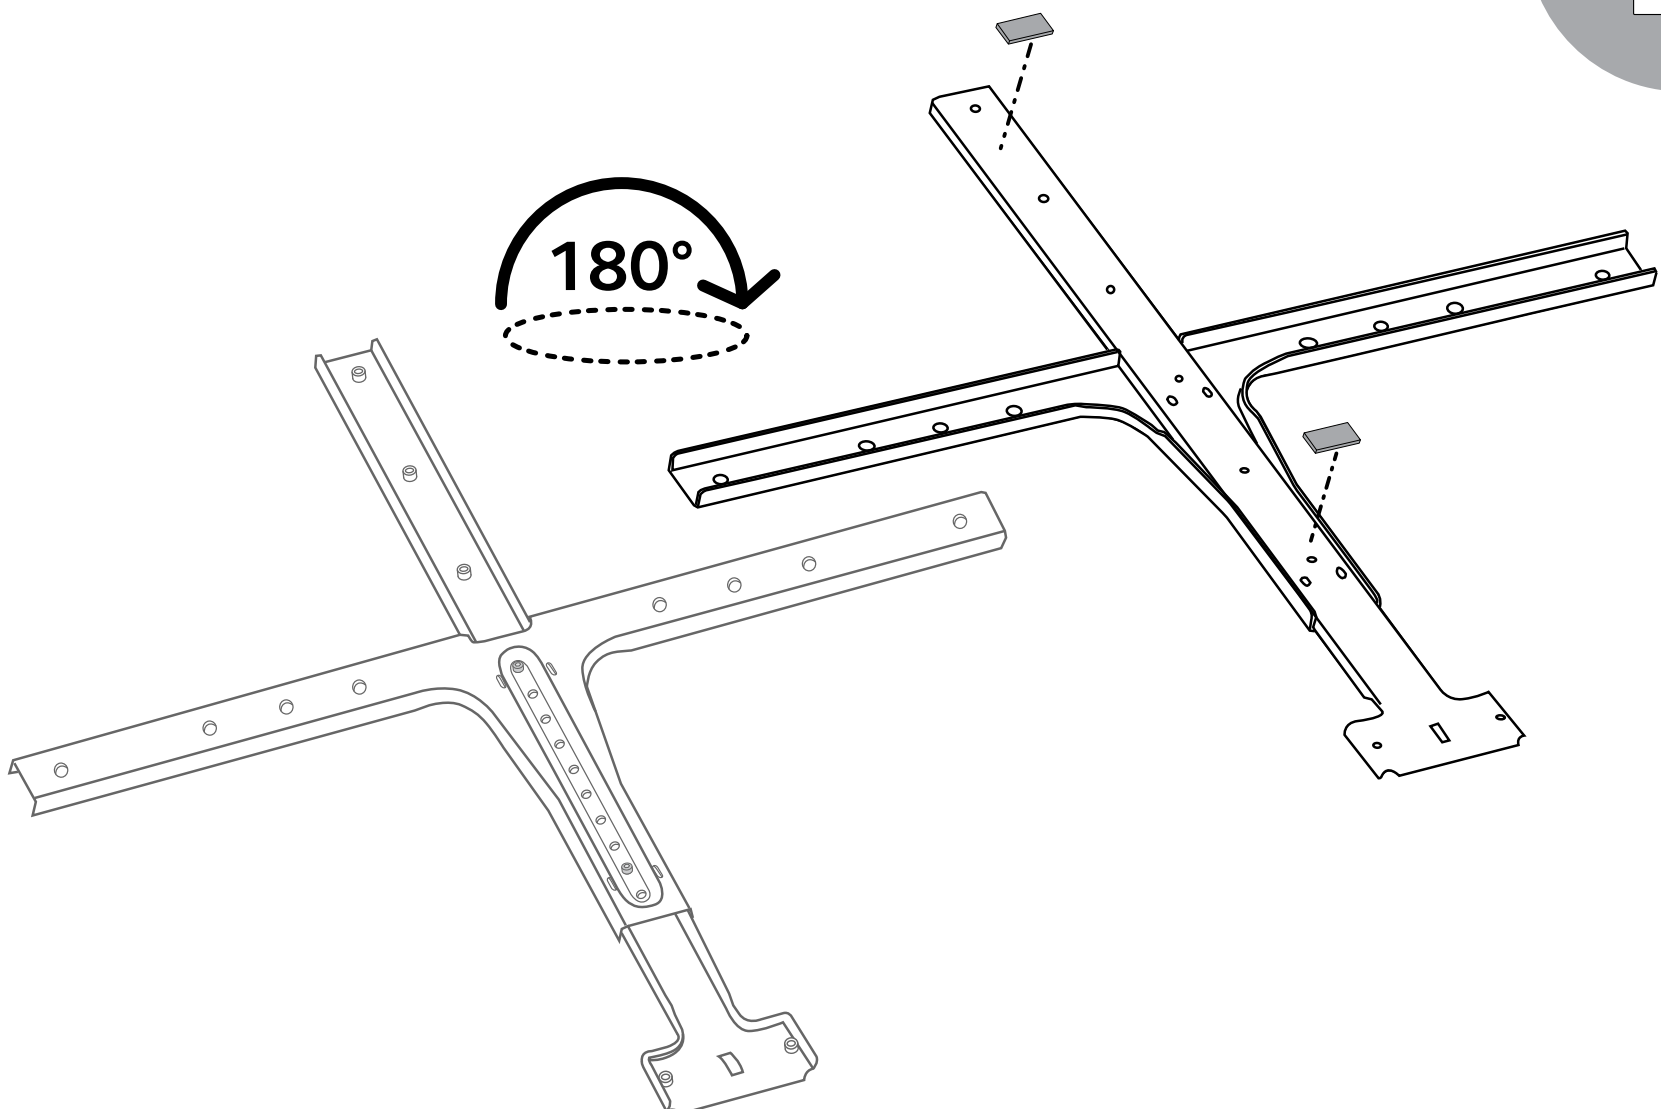
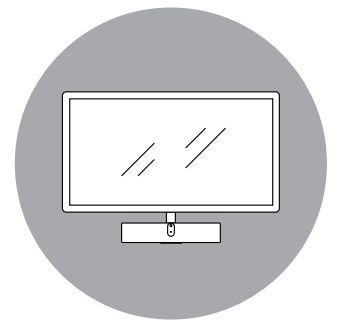


7

Select the screws, washers and spacers that best fit the contours of your screen.

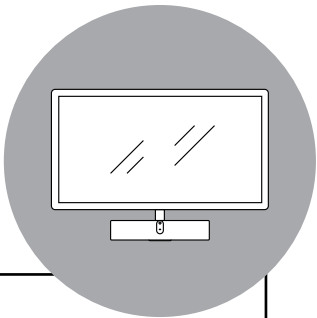

### Screws

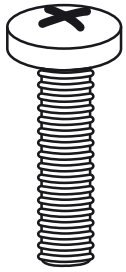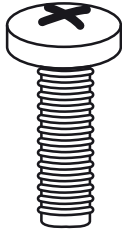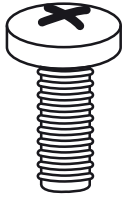

M4x30  
(4 pcs)

M4x40  
(4 pcs)

M4x50  
(4 pcs)

M6x30  
(4 pcs)

M6x40  
(4 pcs)





M6x50  
(4 pcs)

M8x30  
(4 pcs)

M8x40  
(4 pcs)

M8x50  
(4 pcs)

### Spacers



2 mm  
(2 pcs)

5 mm  
(4 pcs)

12 mm  
(2 pcs)

22 mm  
(4 pcs)

32 mm  
(4 pcs)

### Washers





M6  
(4 pcs)

M8  
(4 pcs)



8

Screw the Screen Mount and the VESA mount (not supplied) to the screen as illustrated, using the ideal spacer length for the uppermost screws.

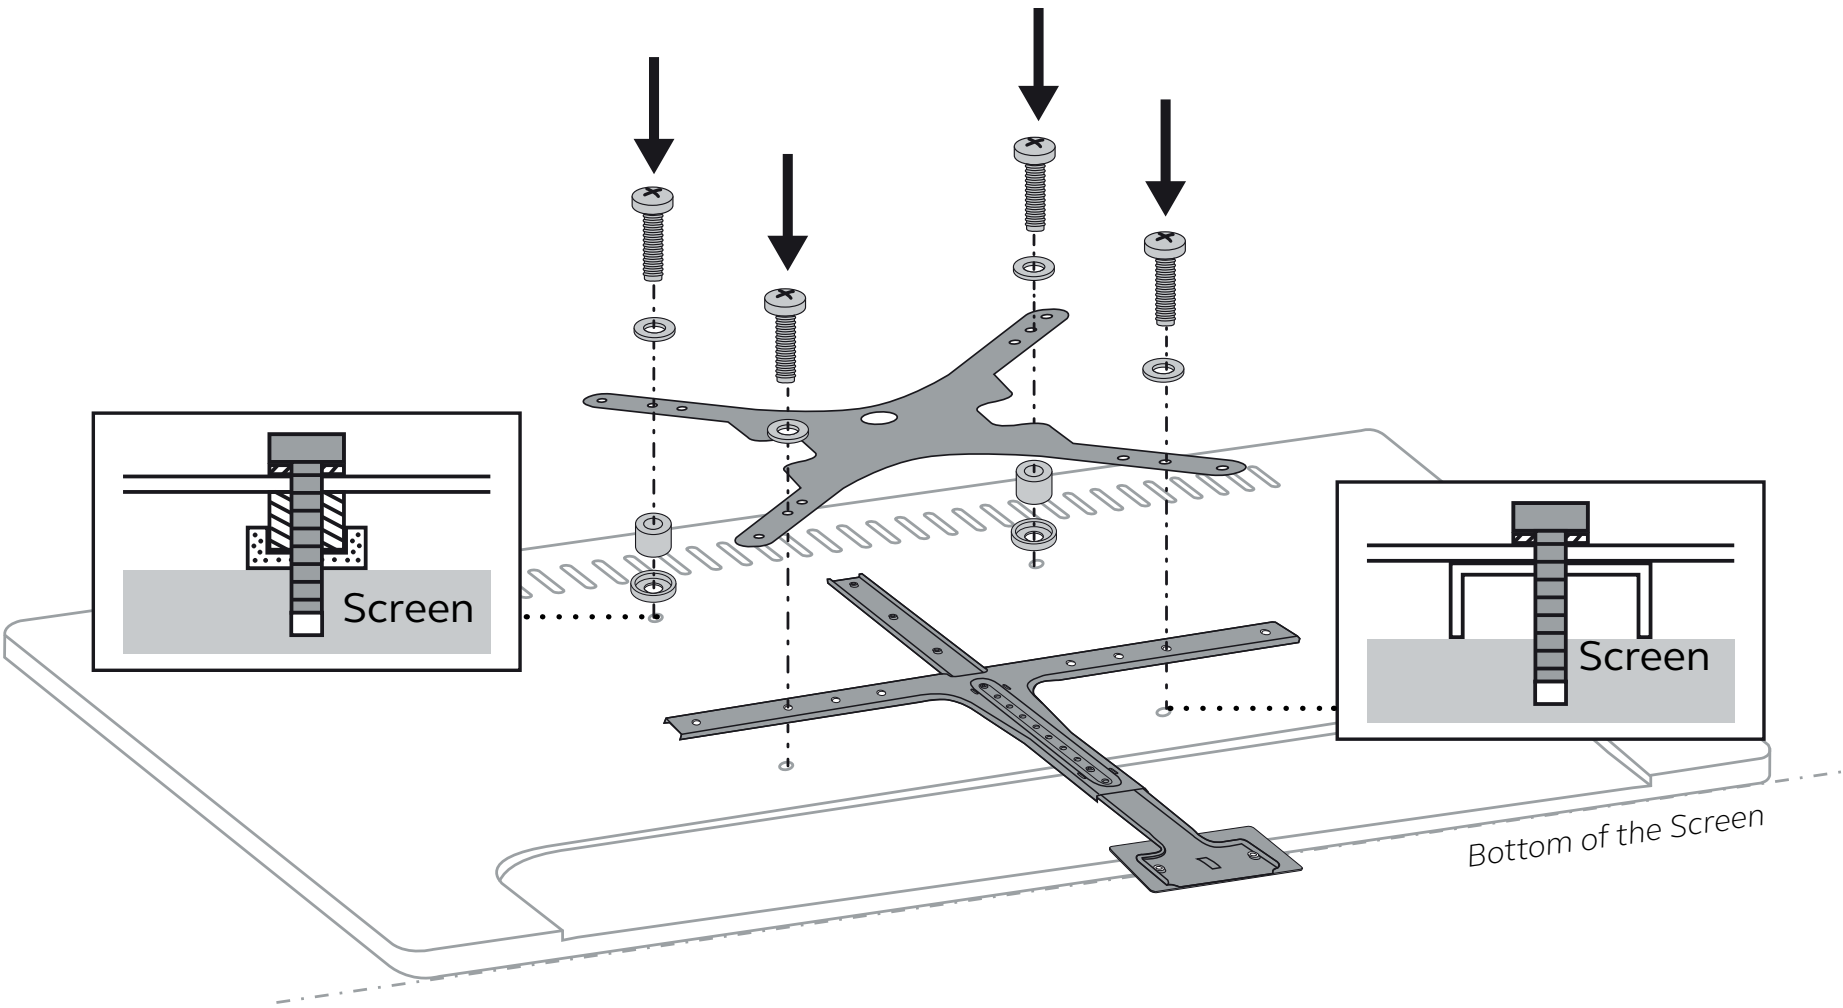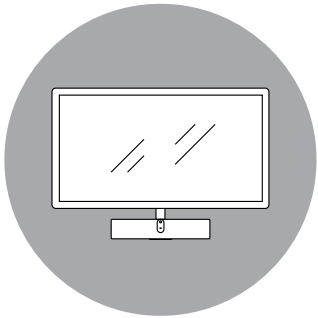



9

Screw the **adjustable mounting bracket** of the video bar to the Screen Mount using the M5x12 screws and a 4mm hex key.

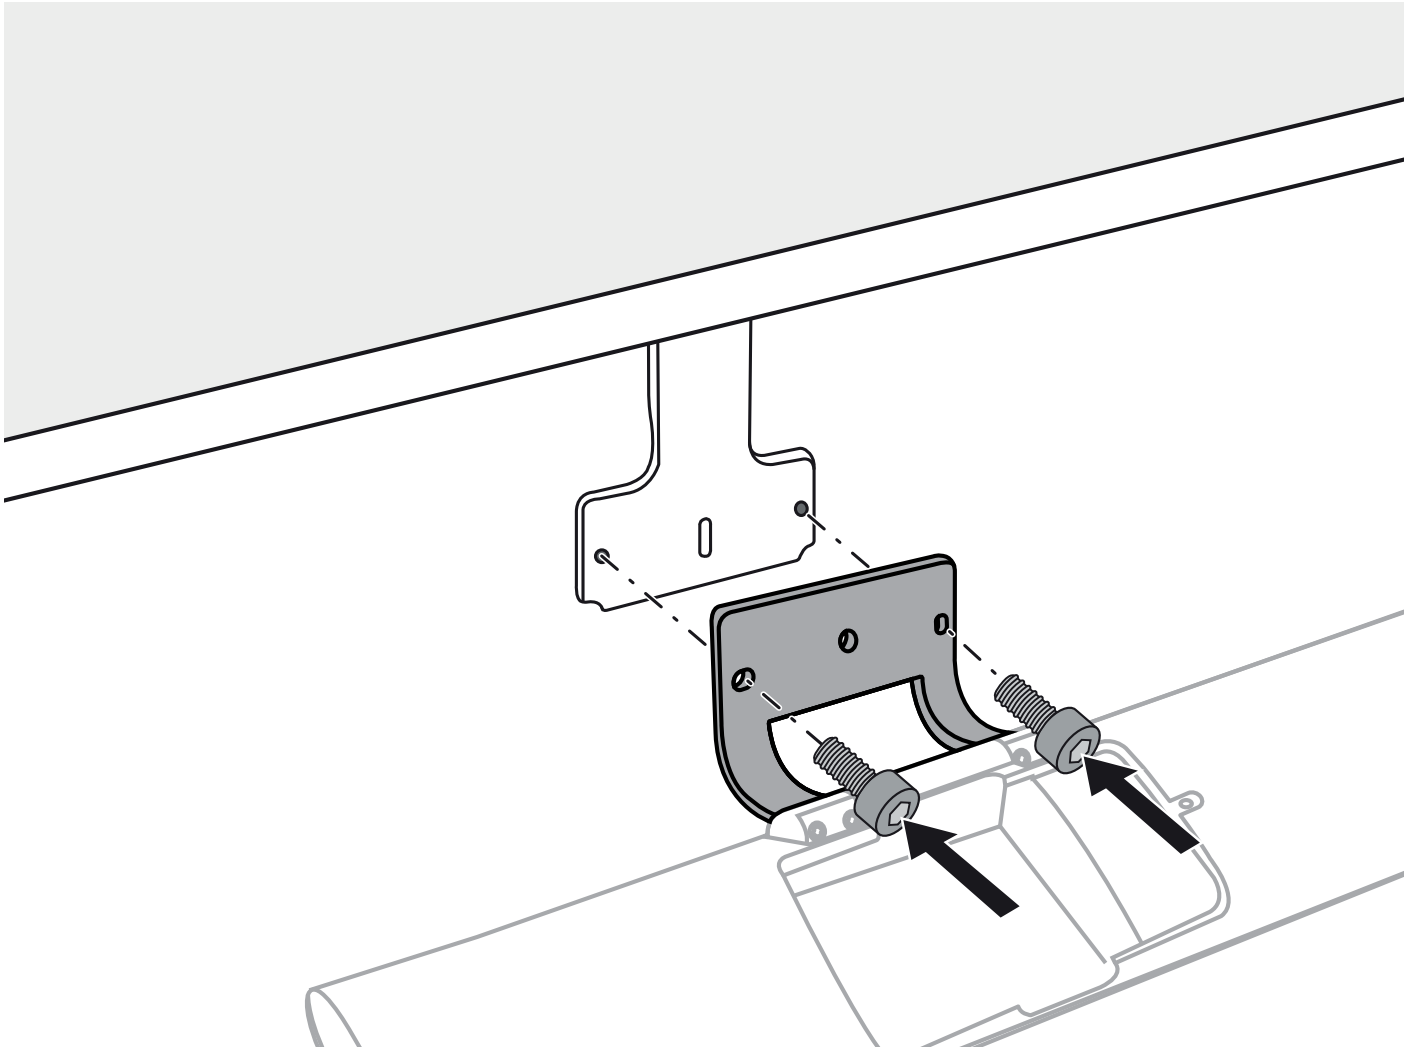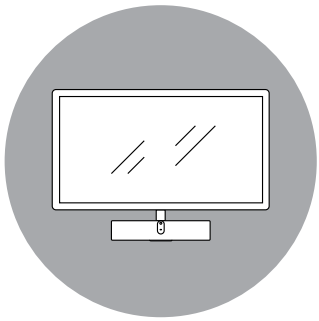



10

Connect the relevant cables to the video bar.

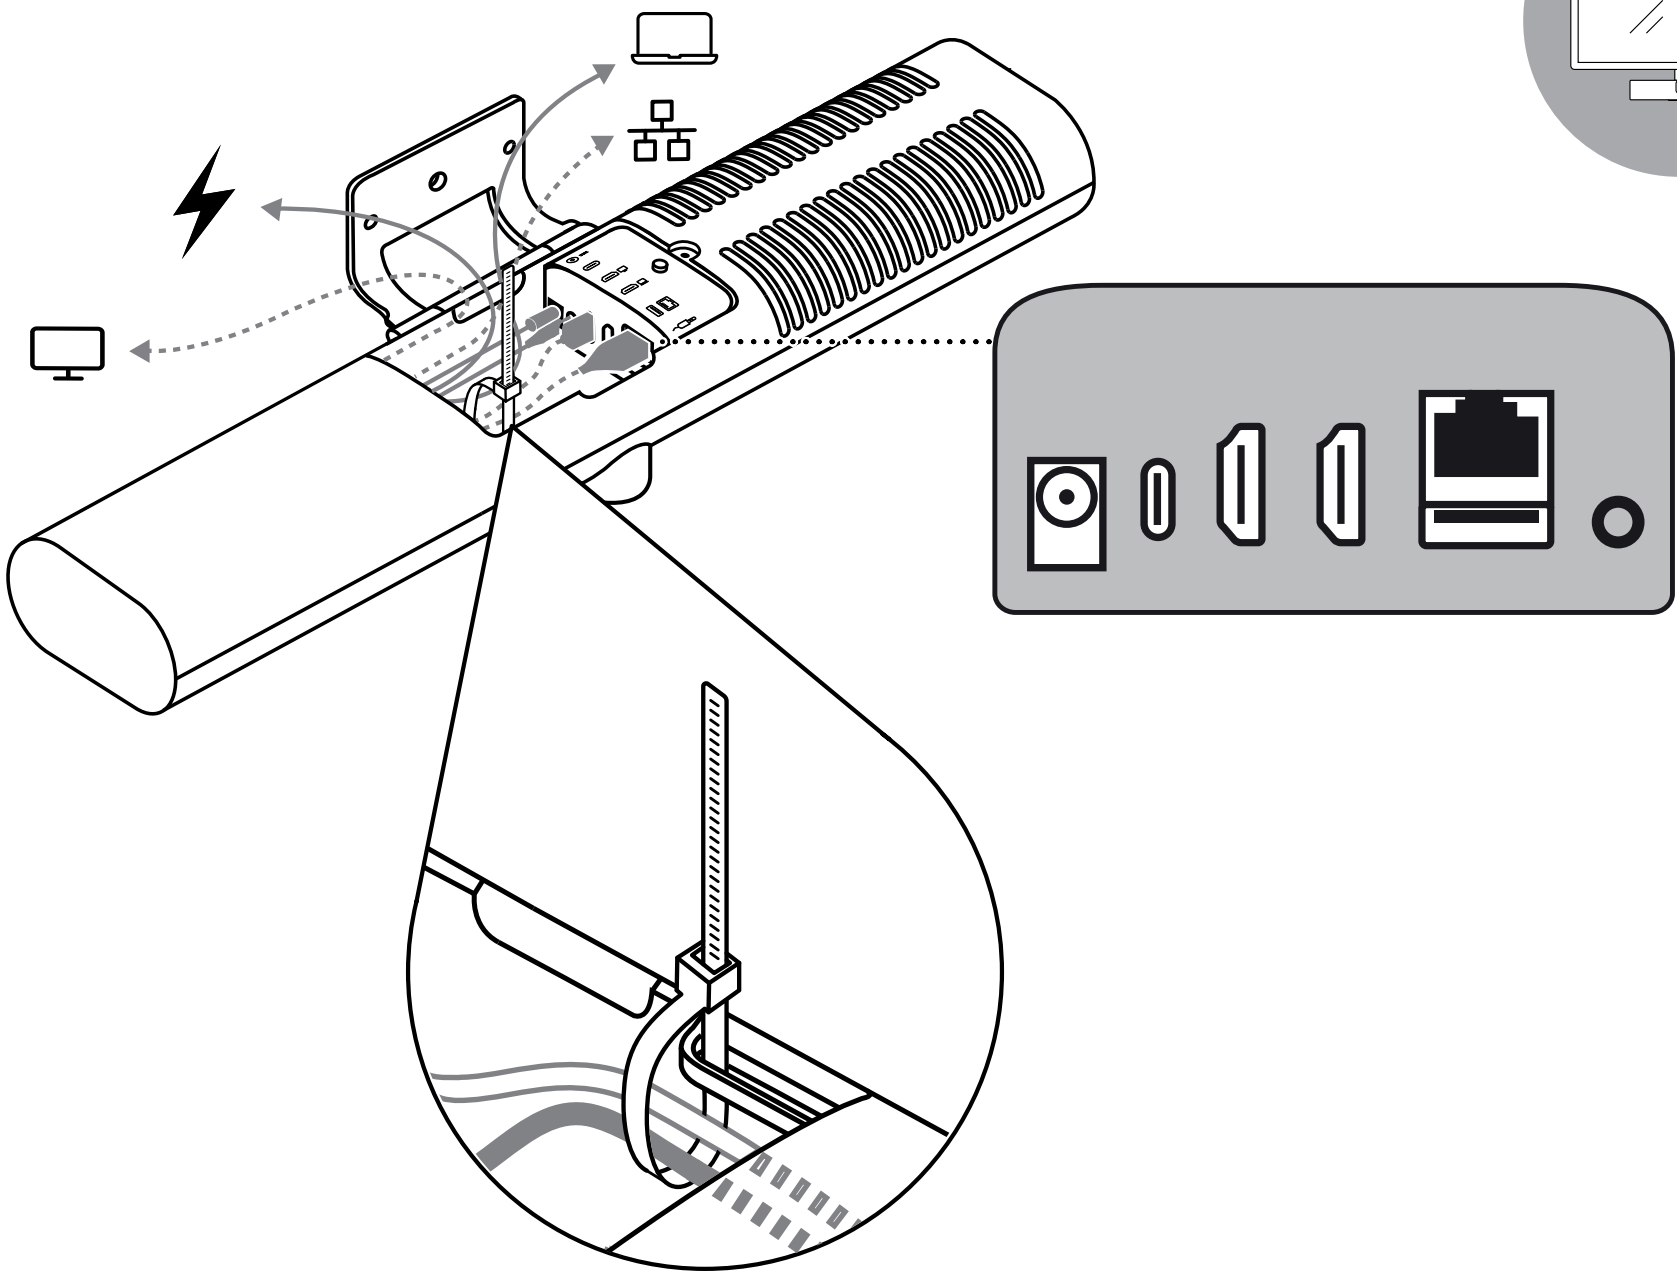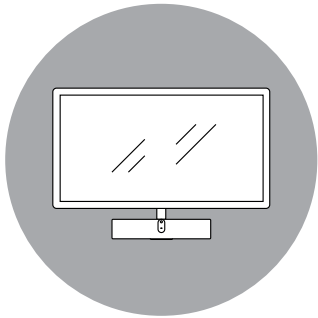



11


Screw the **cable compartment cover** to the video bar.

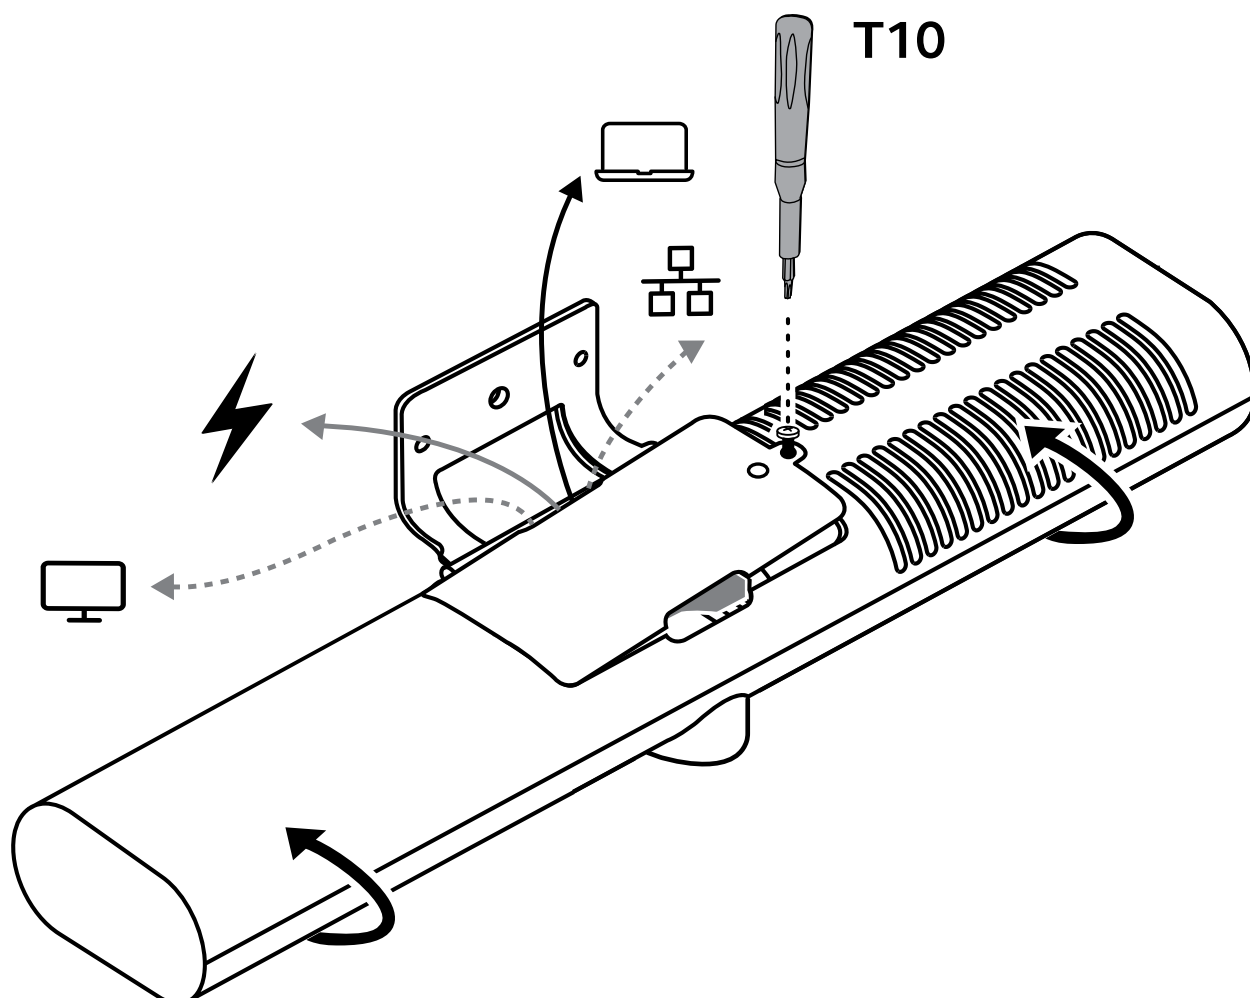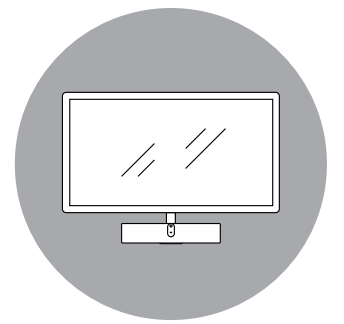

12



Rotate the PanaCast U30 into its final position and angle the camera to point at eye-level.

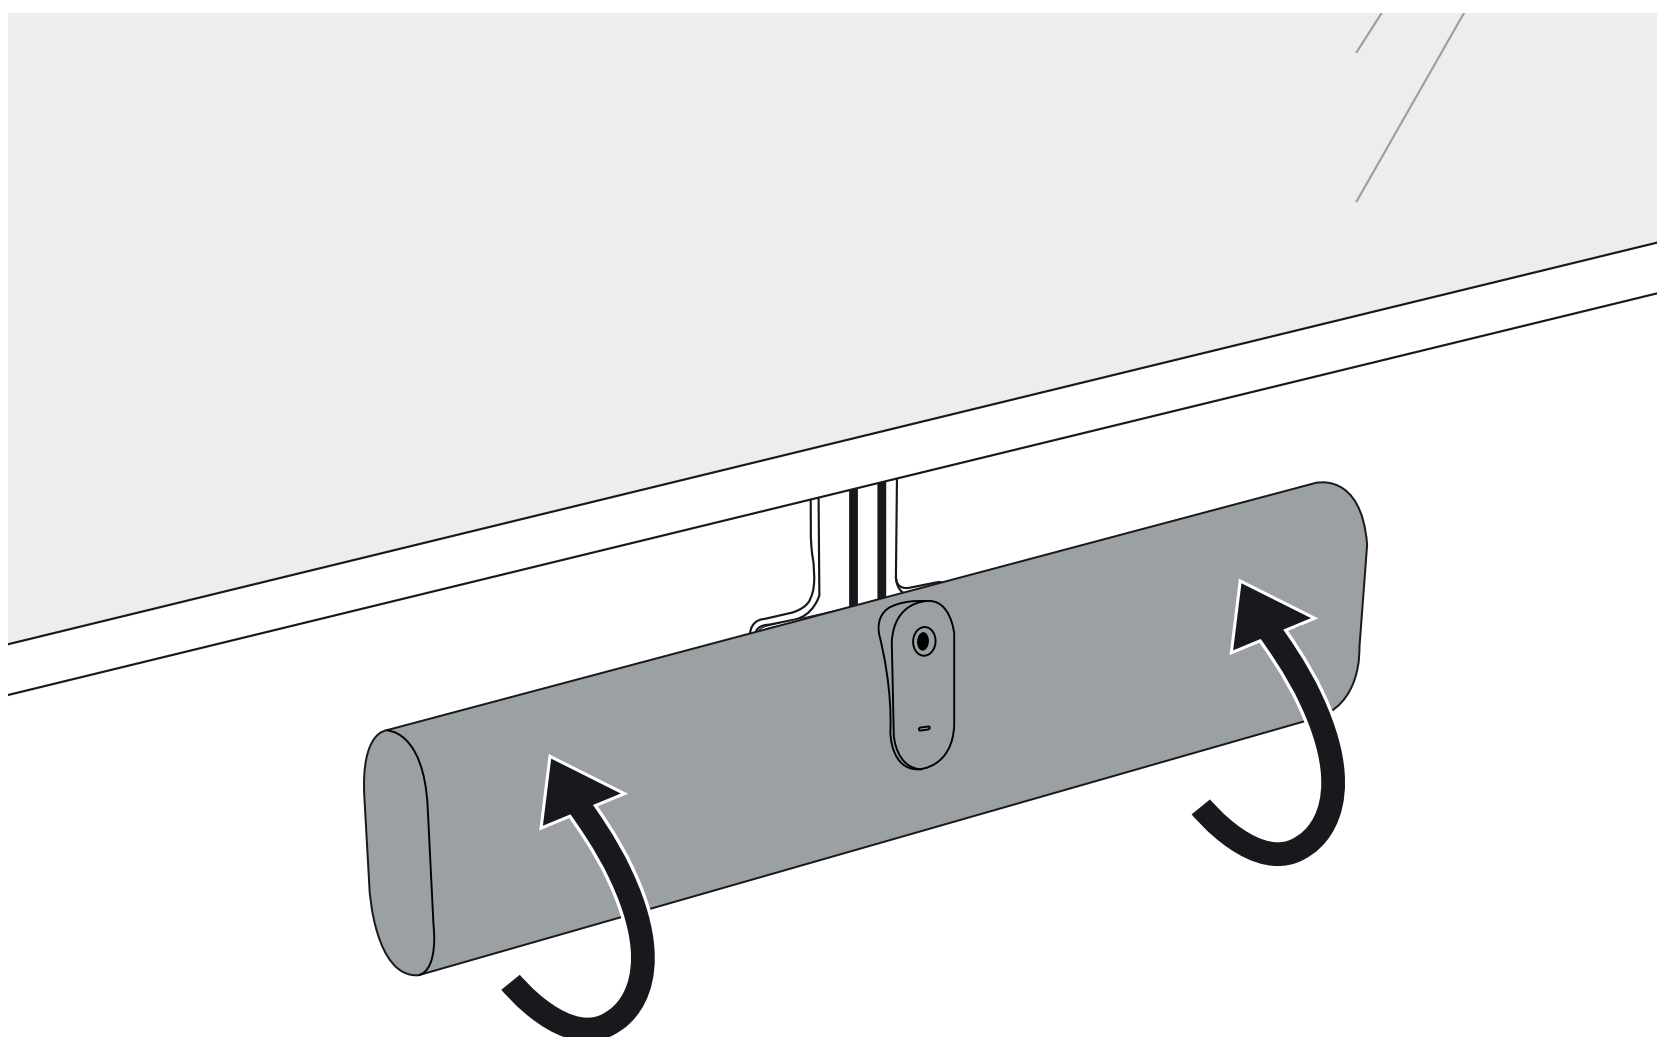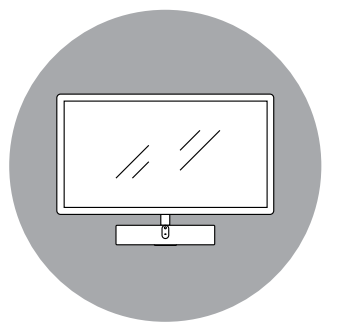

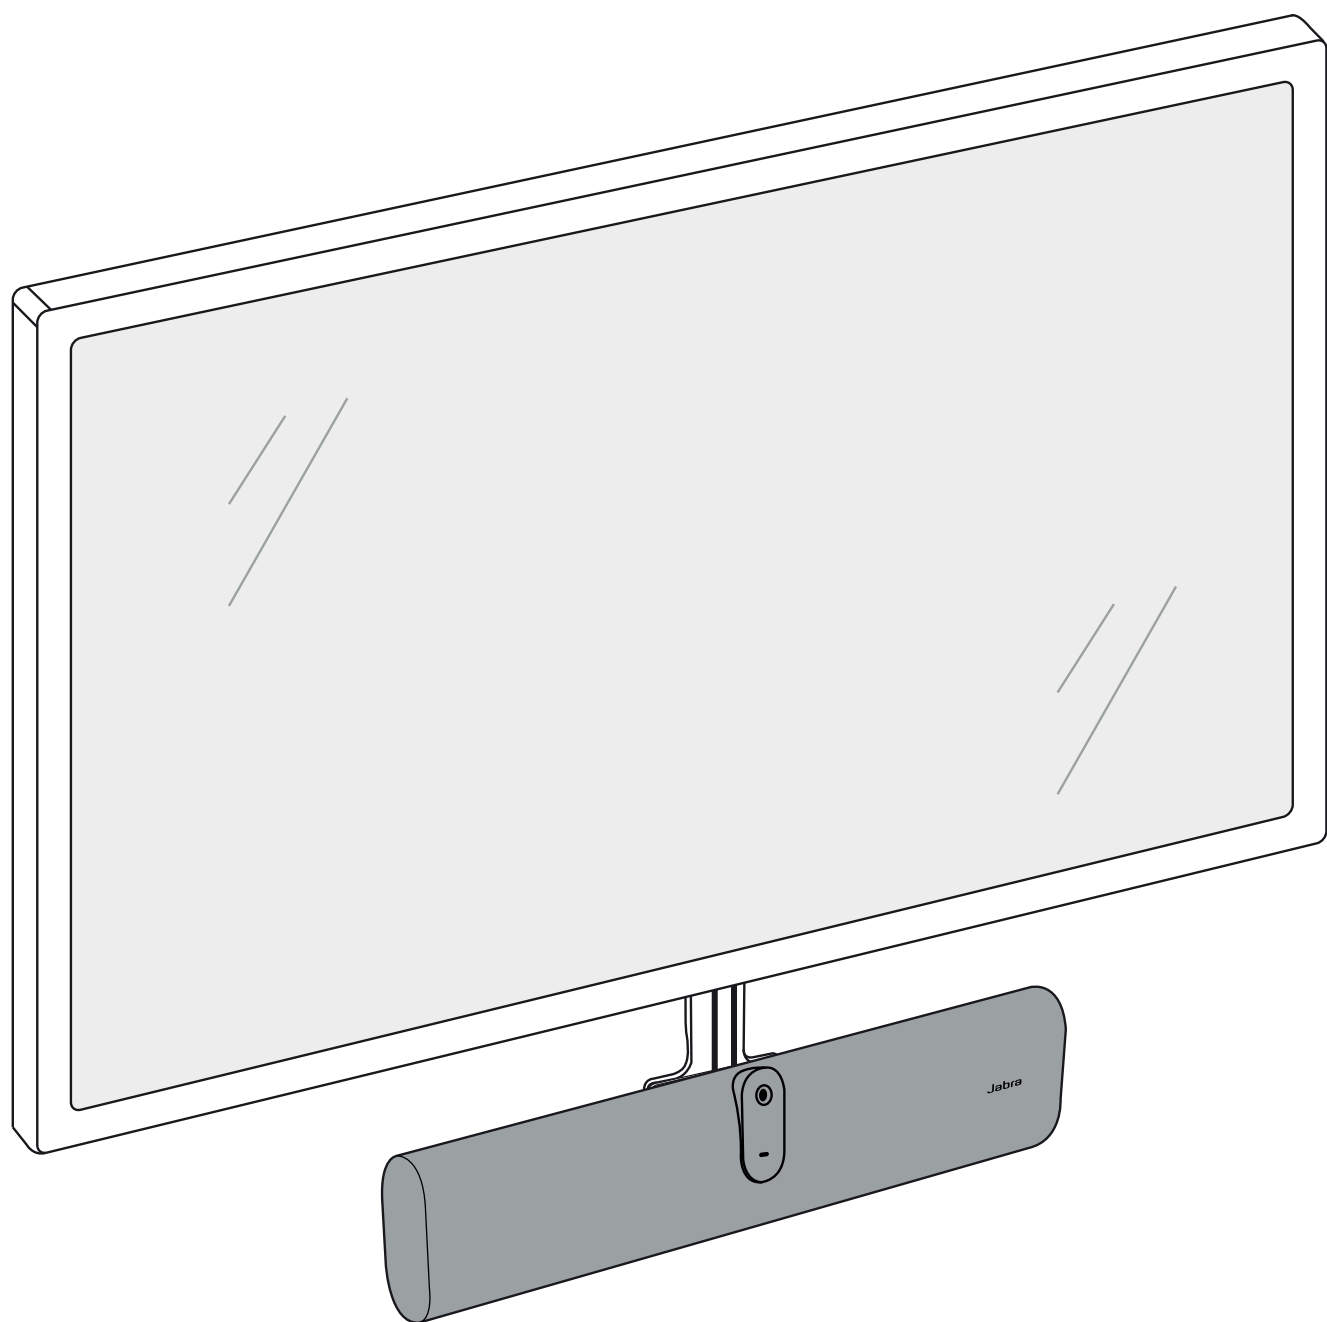


1

If the screen is already wall-mounted, remove it from the wall.

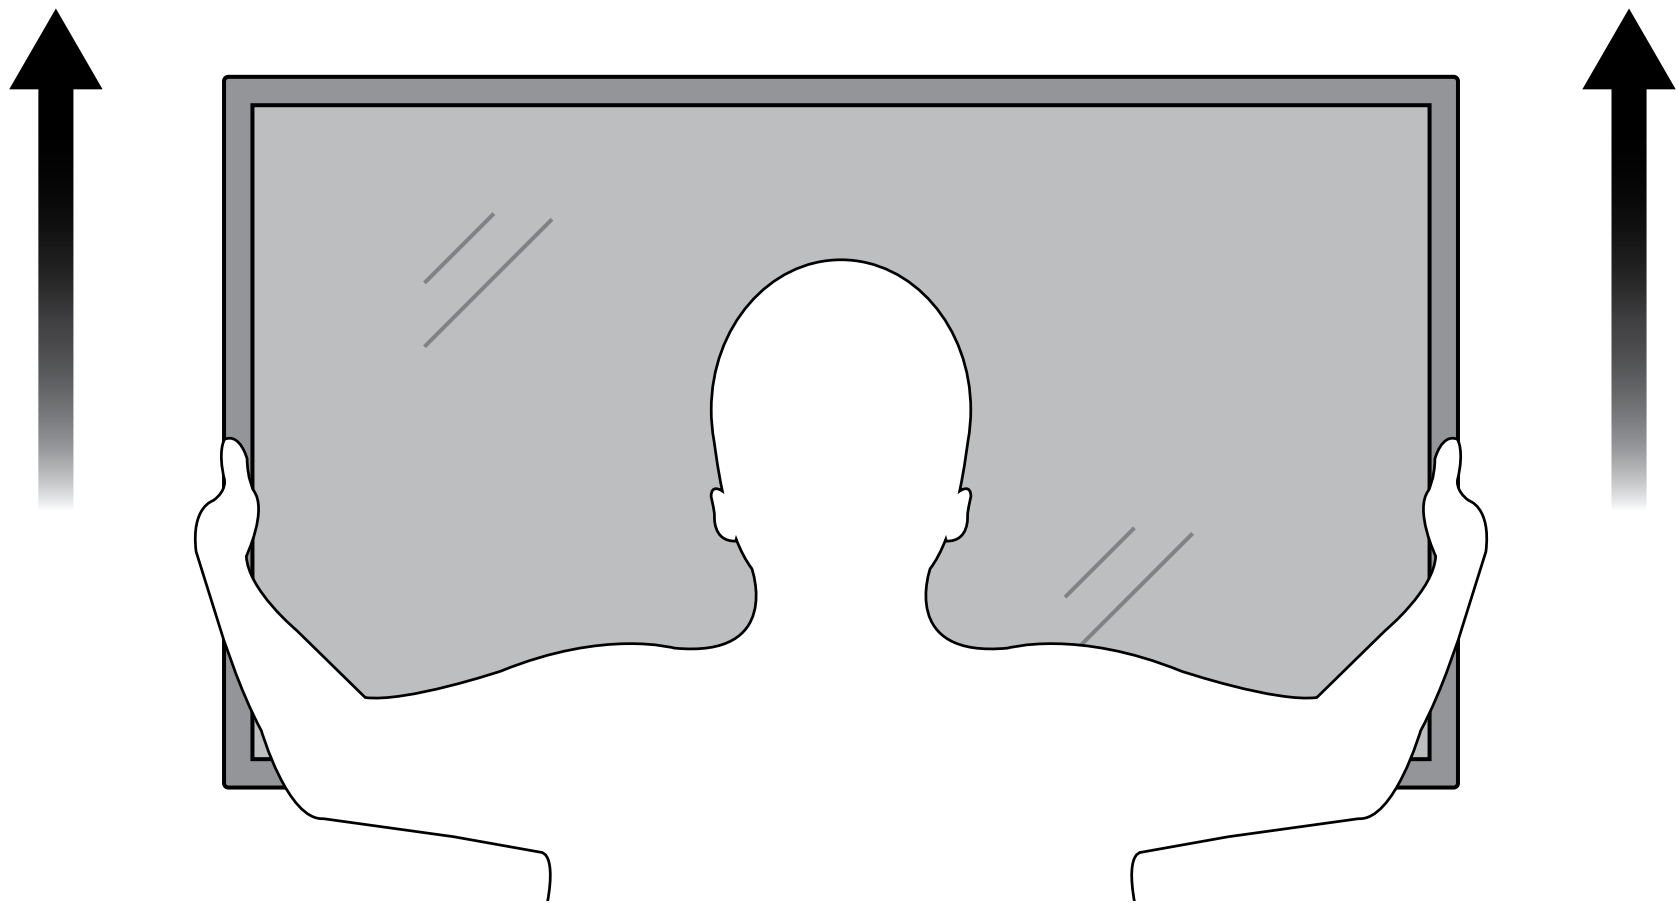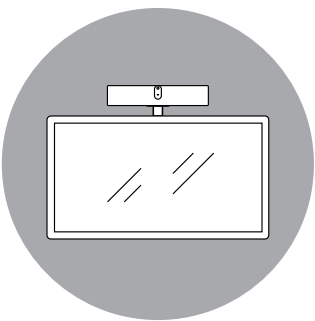



2

Detach the existing **VESA mount** from your screen.

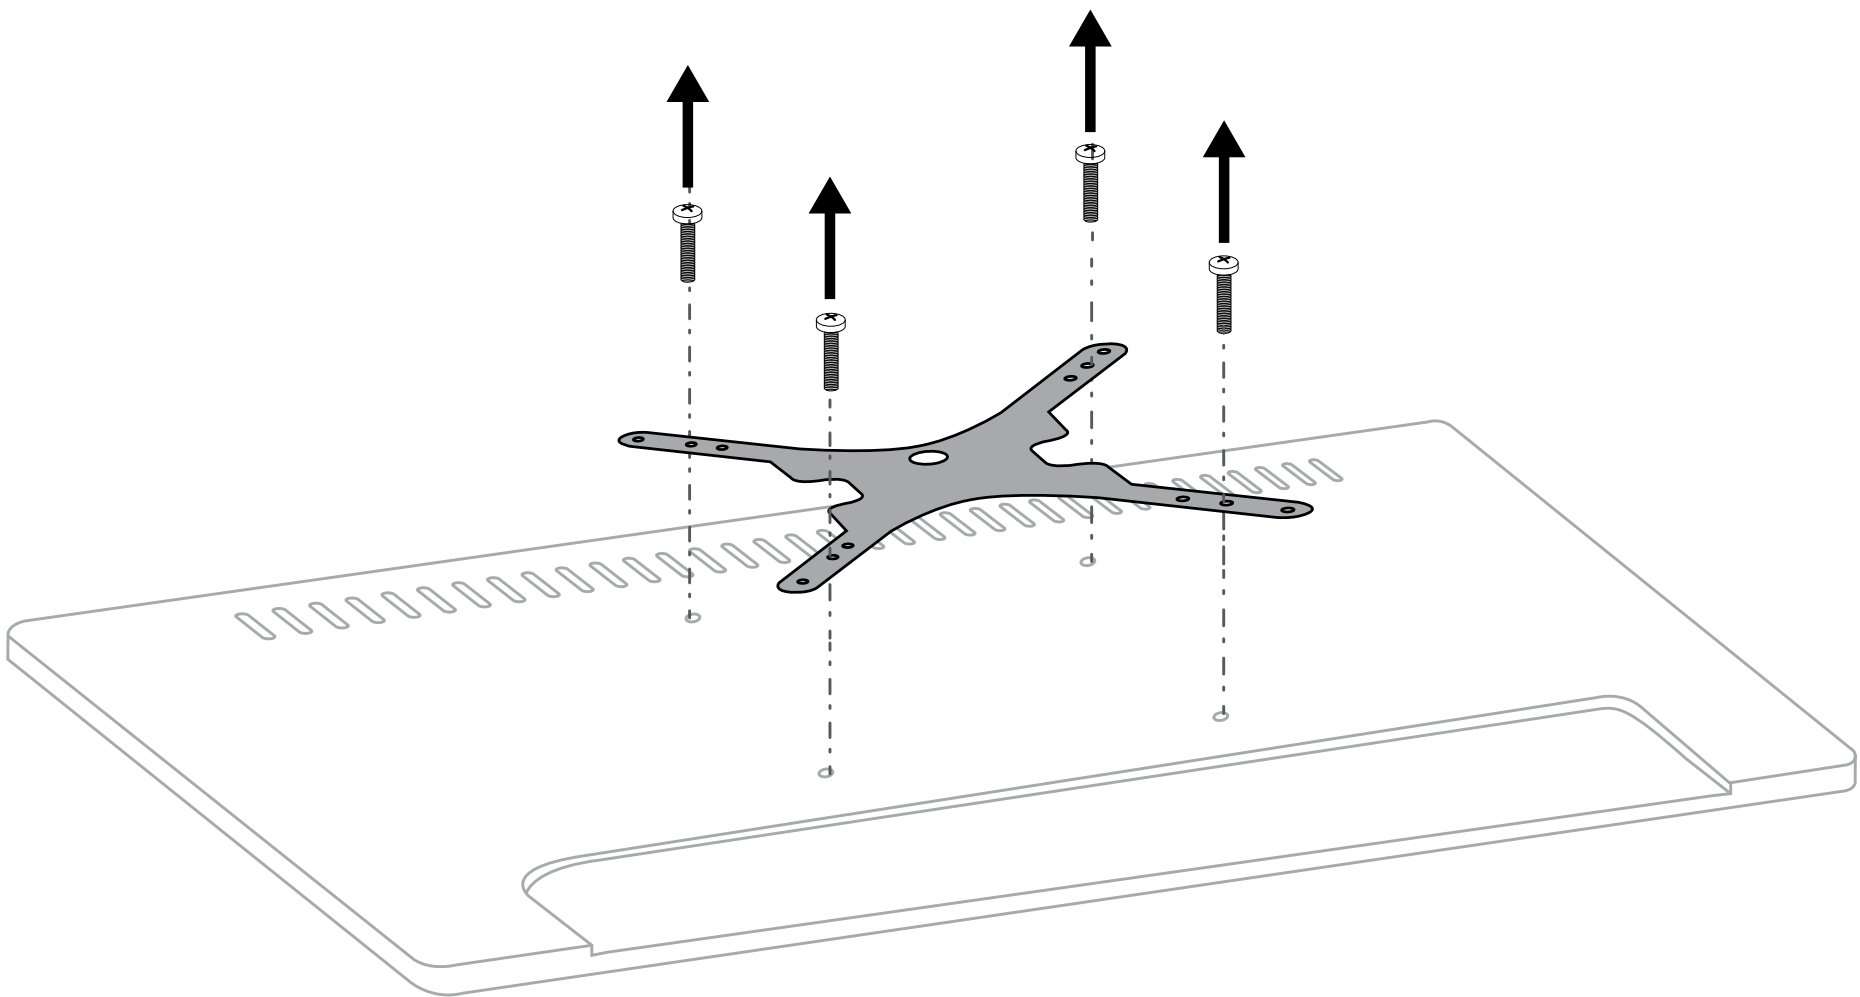



3

Measure the distance between the VESA mount hole and the top of the screen. This distance is **X**.

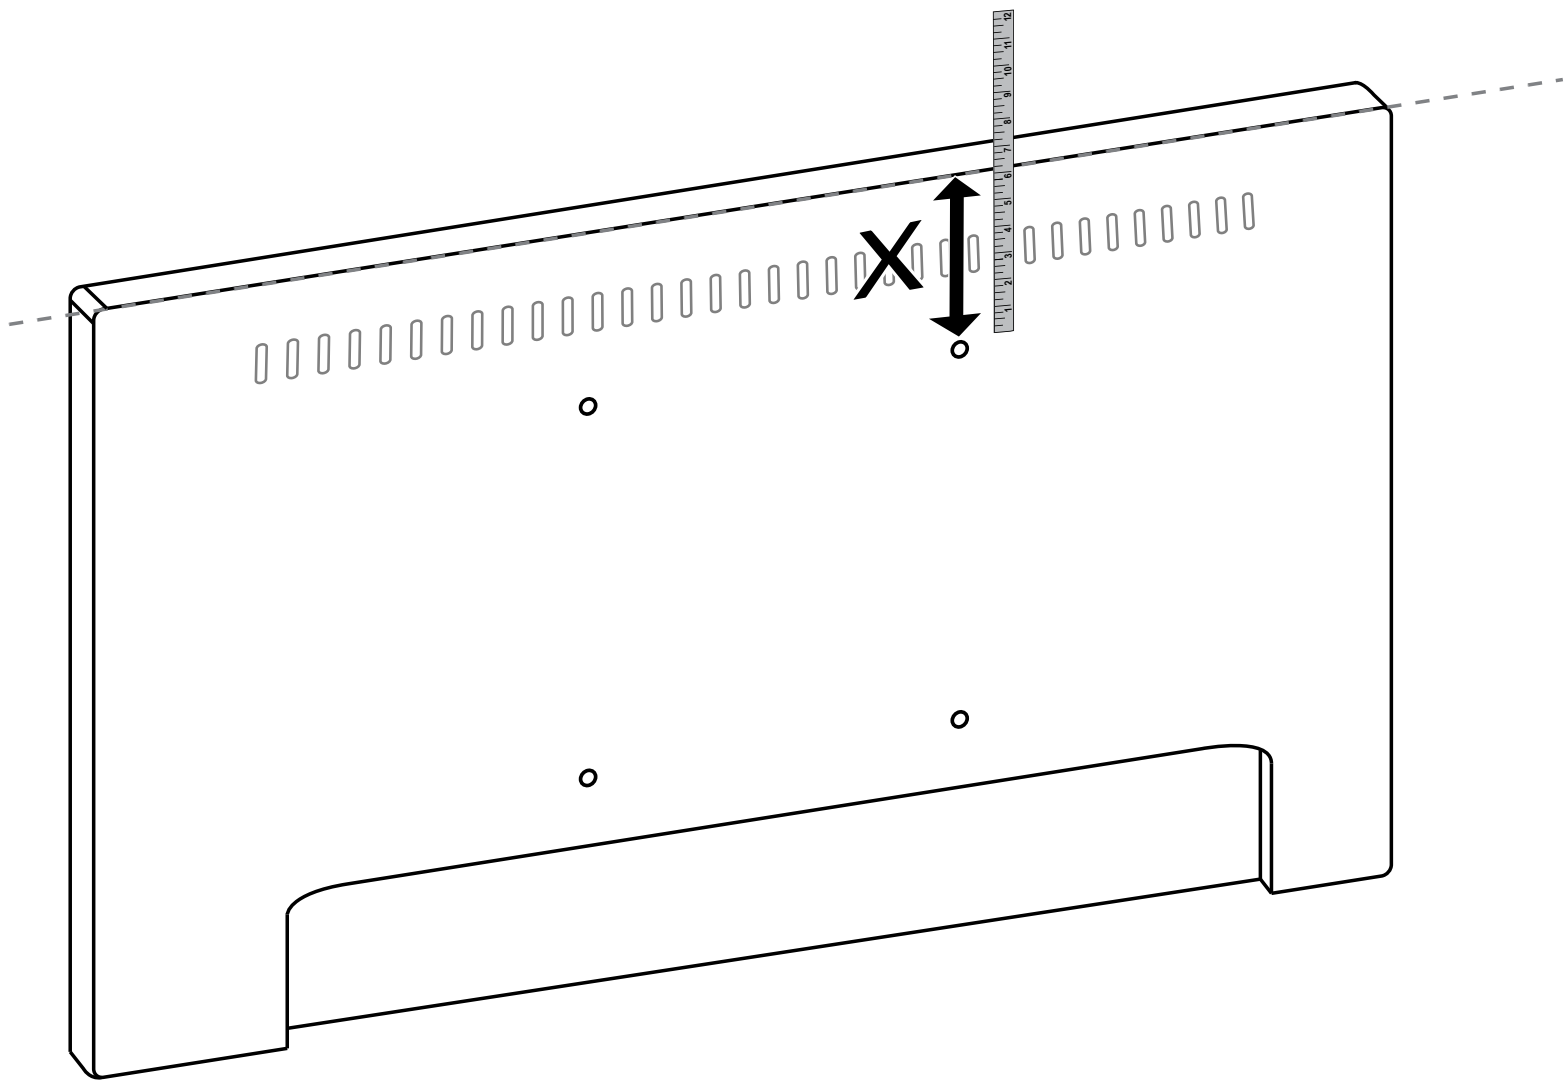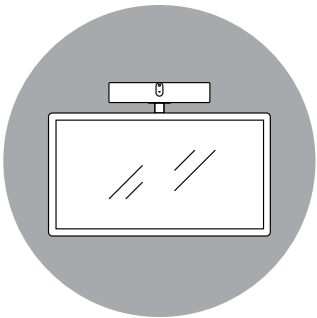





4

Assemble the Screen Mount and ensure that the distance illustrated is approx **X + 9 cm or X + 3.5 inches**.

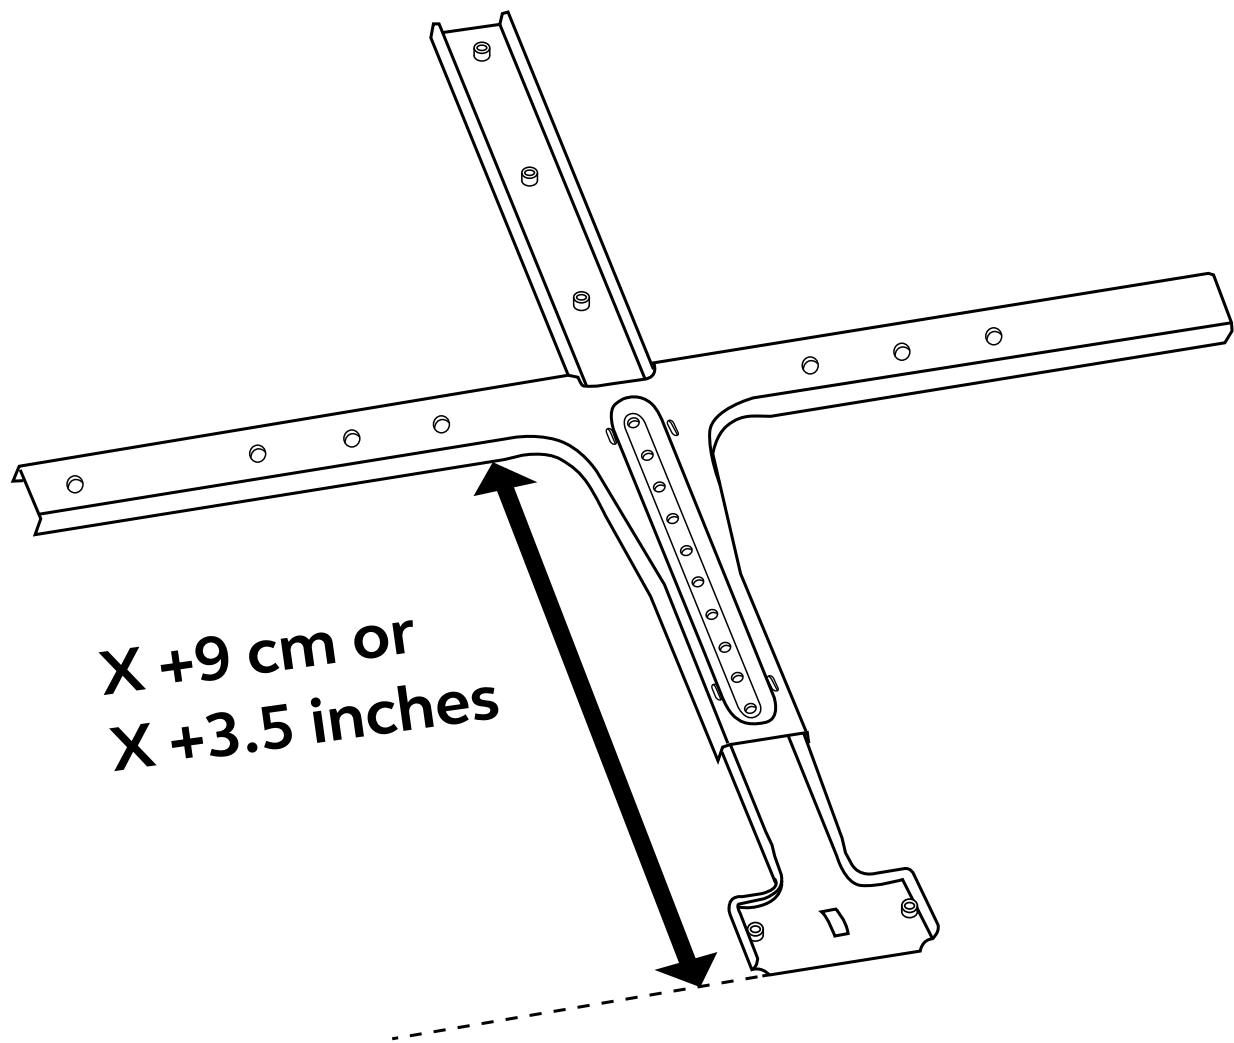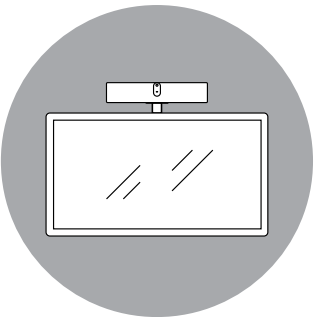



5

Screw the horizontal and vertical sections together using the supplied **M5x8 screws** and a **4 mm hex key**.

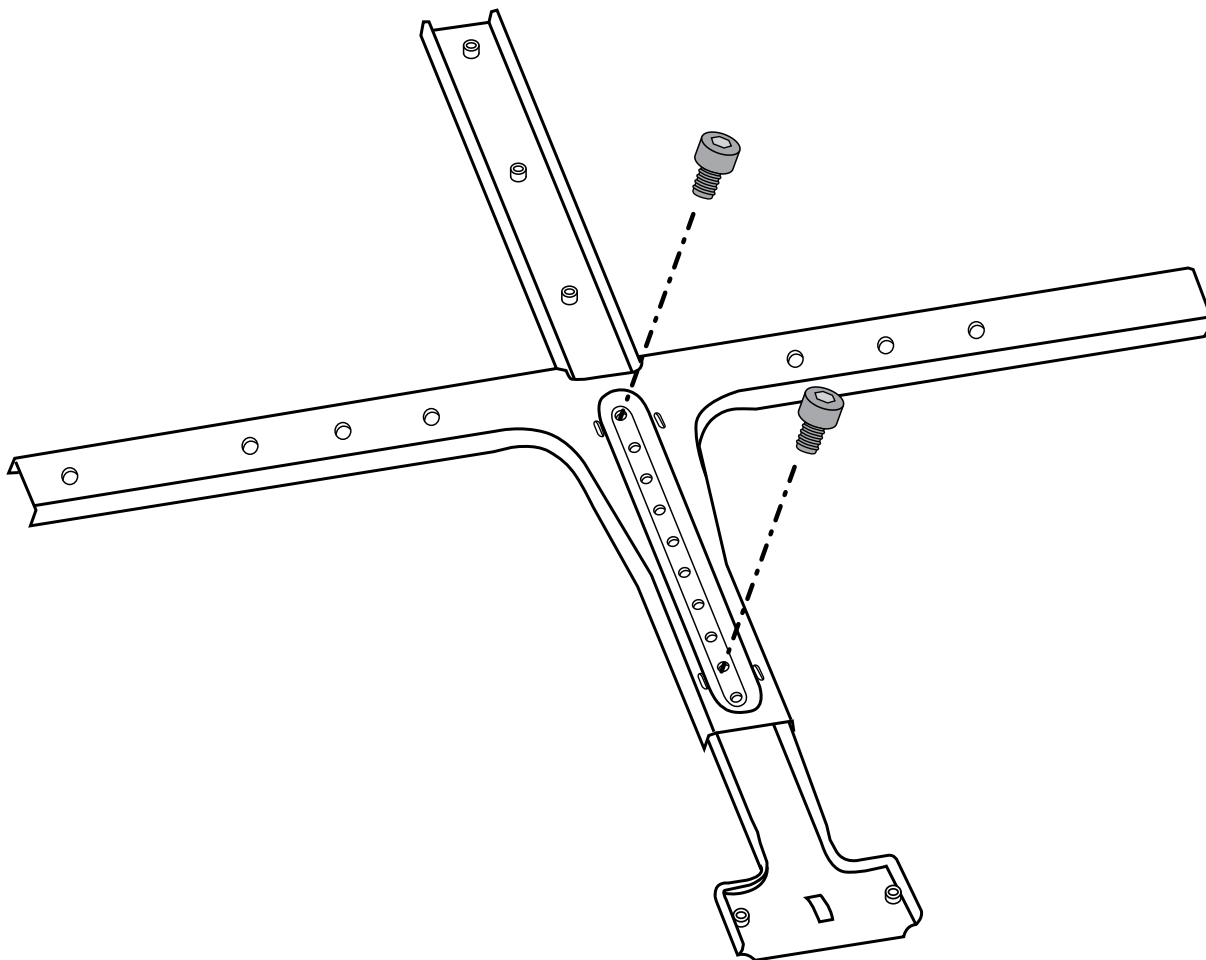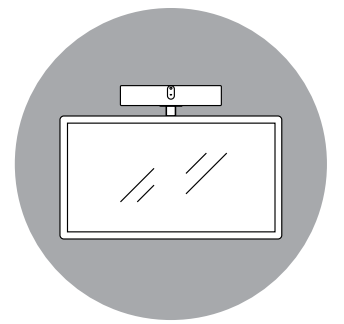**M5x8****M5x12**


6

Stick the adhesive **protective pads** to the back of the Screen Mount.




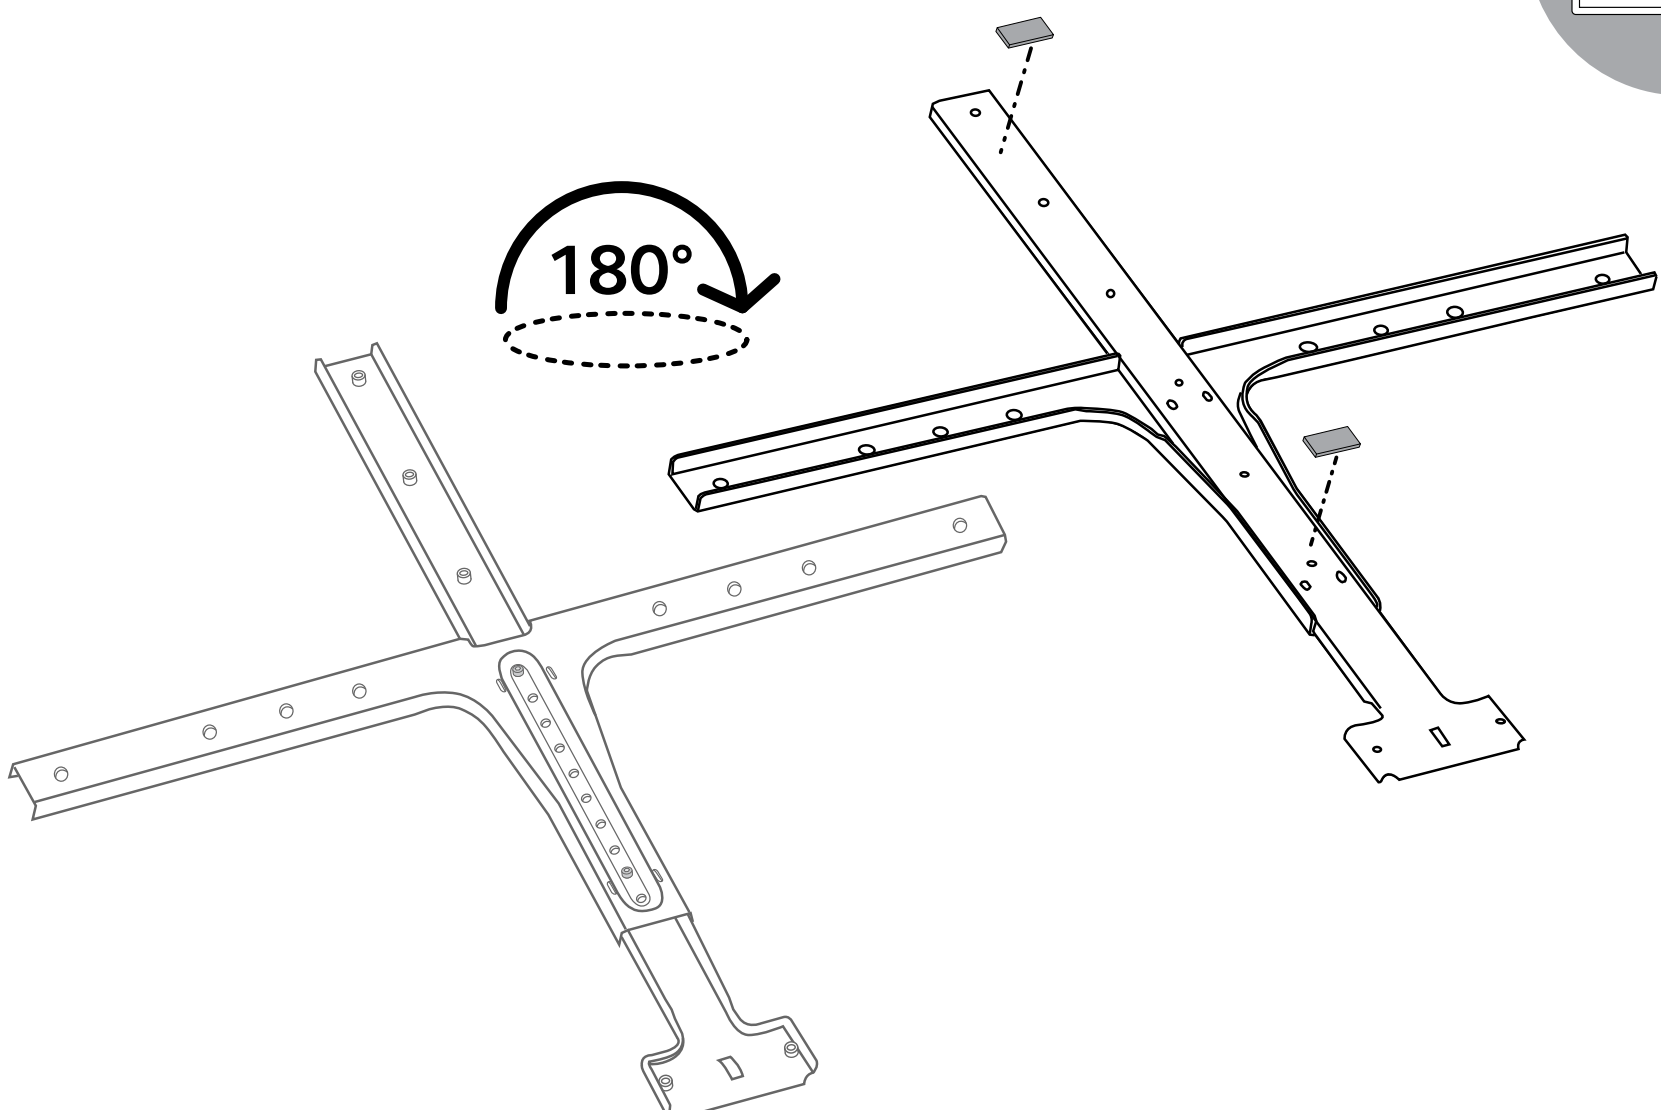
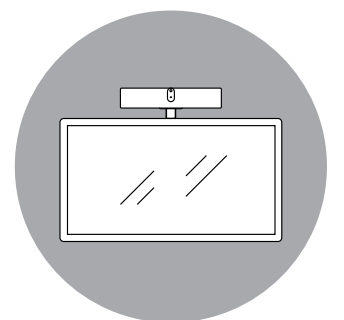


7

Select the screws, washers and spacers that best fit the contours of your screen.

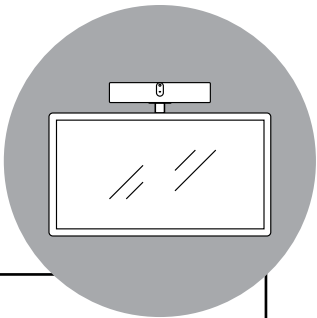

### Screws

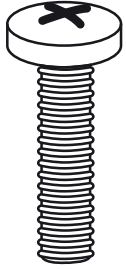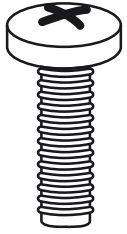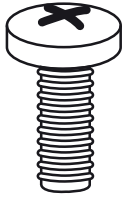

M4x30  
(4 pcs)

M4x40  
(4 pcs)

M4x50  
(4 pcs)

M6x30  
(4 pcs)

M6x40  
(4 pcs)




M6x50  
(4 pcs)

M8x30  
(4 pcs)

M8x40  
(4 pcs)

M8x50  
(4 pcs)

### Spacers



2 mm  
(2 pcs)

5 mm  
(4 pcs)

12 mm  
(2 pcs)

22 mm  
(4 pcs)

32 mm  
(4 pcs)

### Washers





M6  
(4 pcs)

M8  
(4 pcs)



8

Screw the Screen Mount and the VESA mount (not supplied) to the screen as illustrated, using the ideal spacer length for the uppermost screws.

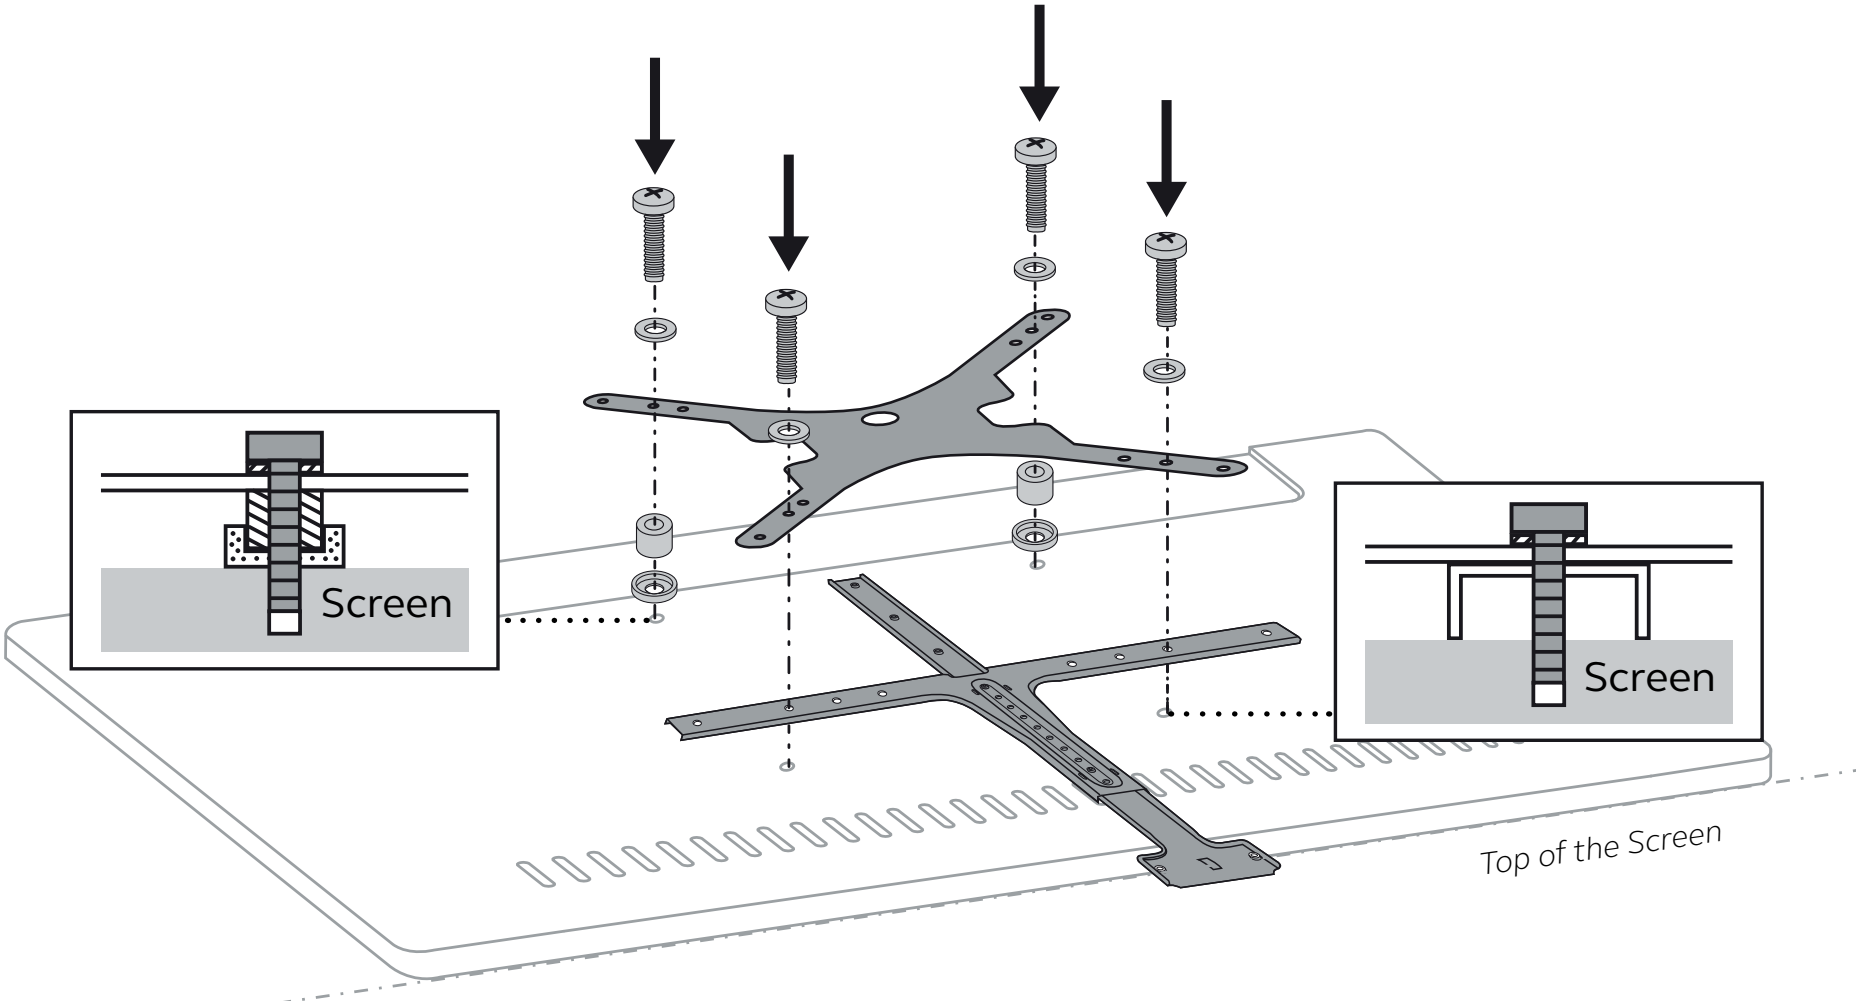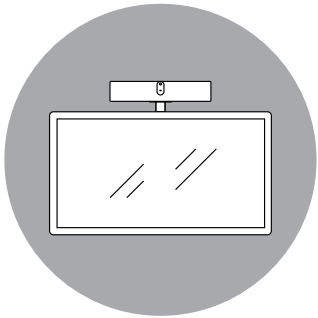



9

Screw the **adjustable mounting bracket** of the video bar to the Screen Mount using the M5x12 screws and a 4mm hex key.

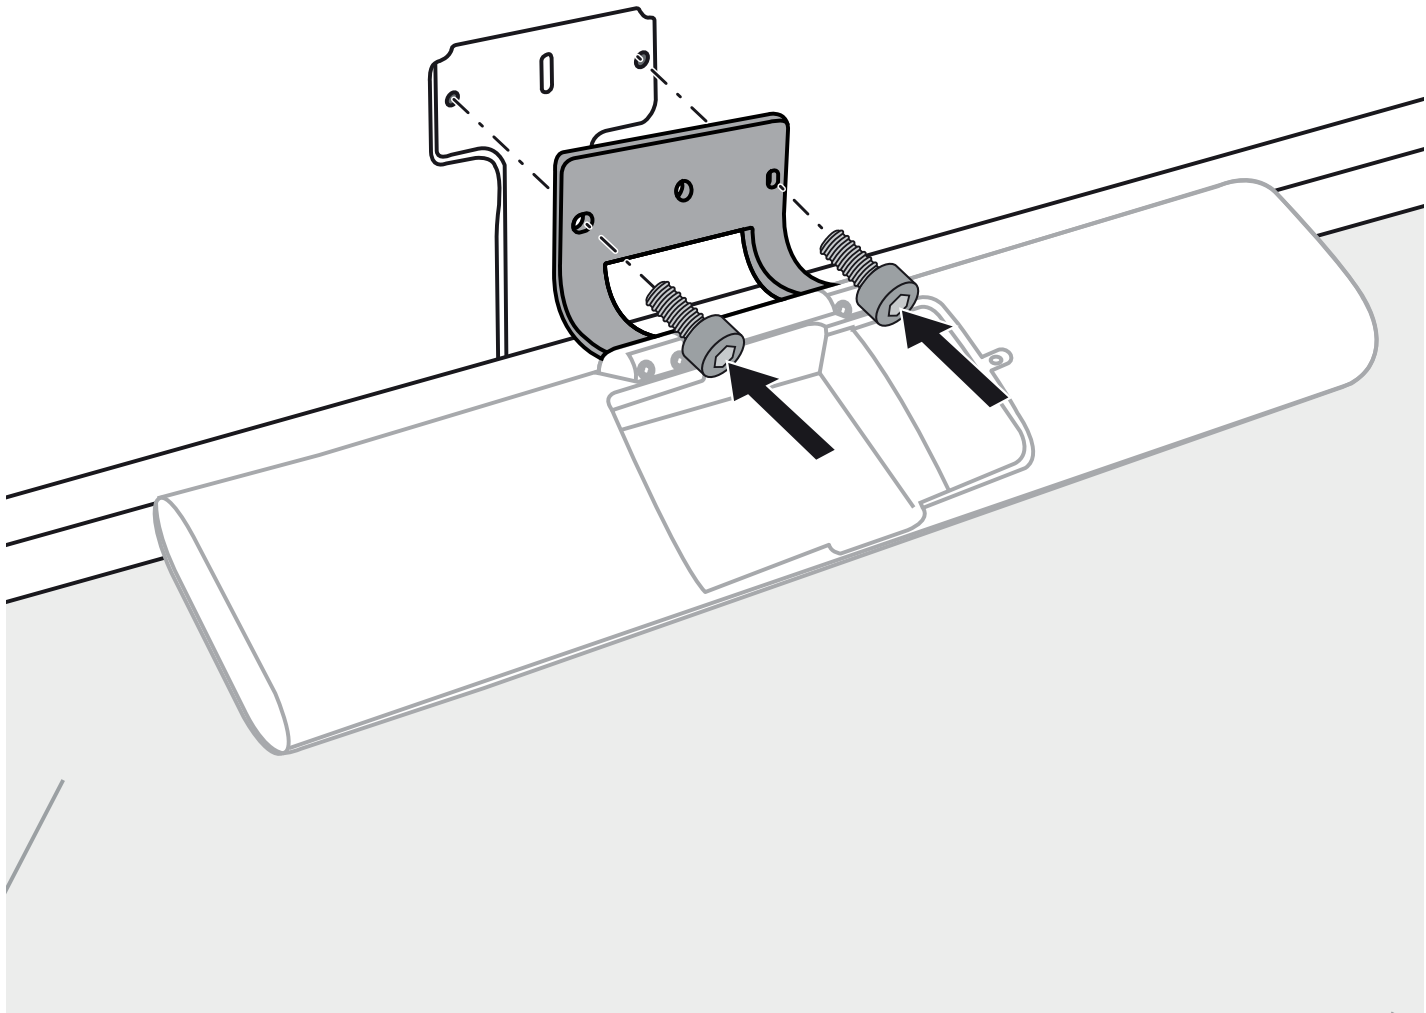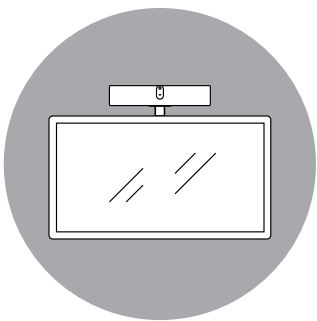



10

Connect the relevant cables to the video bar.

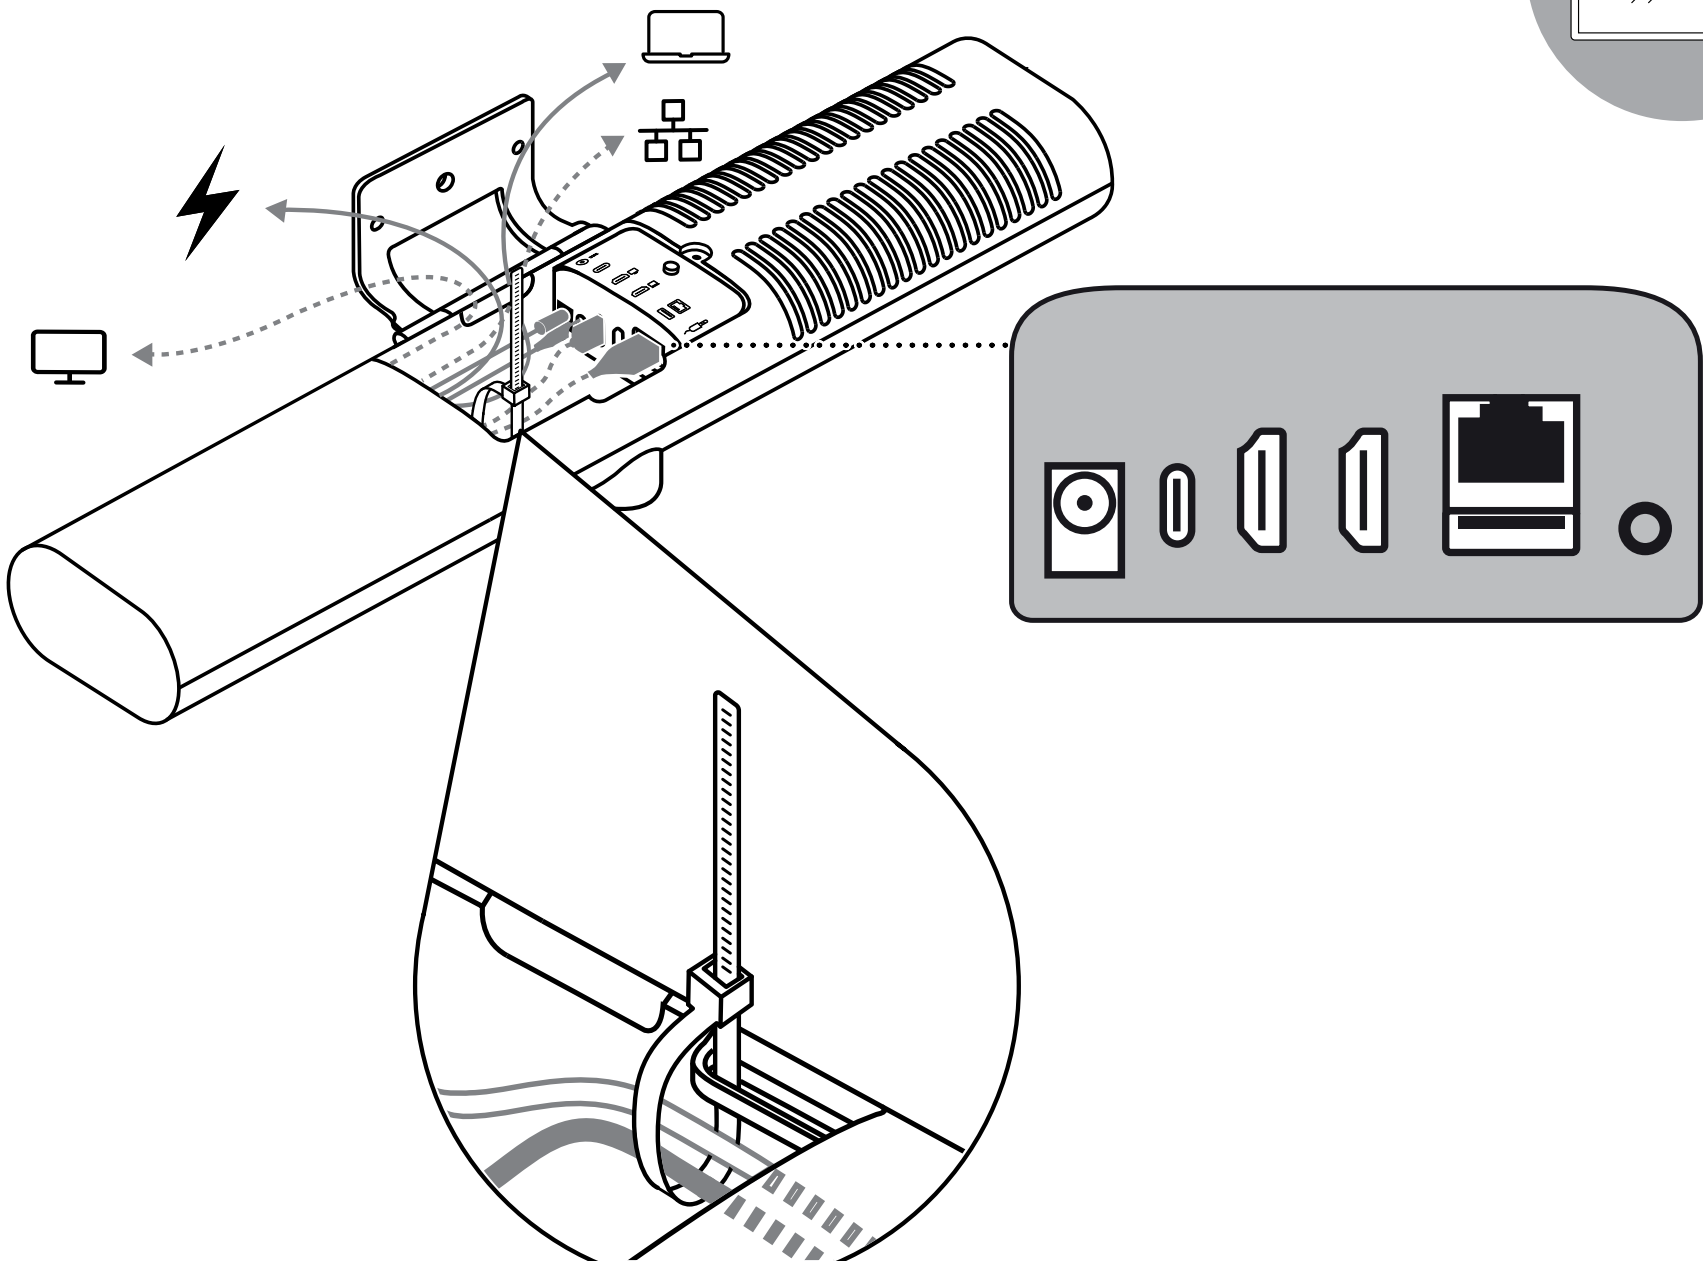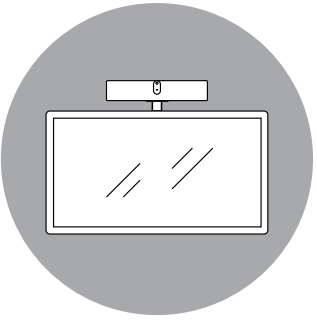

11

Screw the **cable compartment cover** to the video bar.

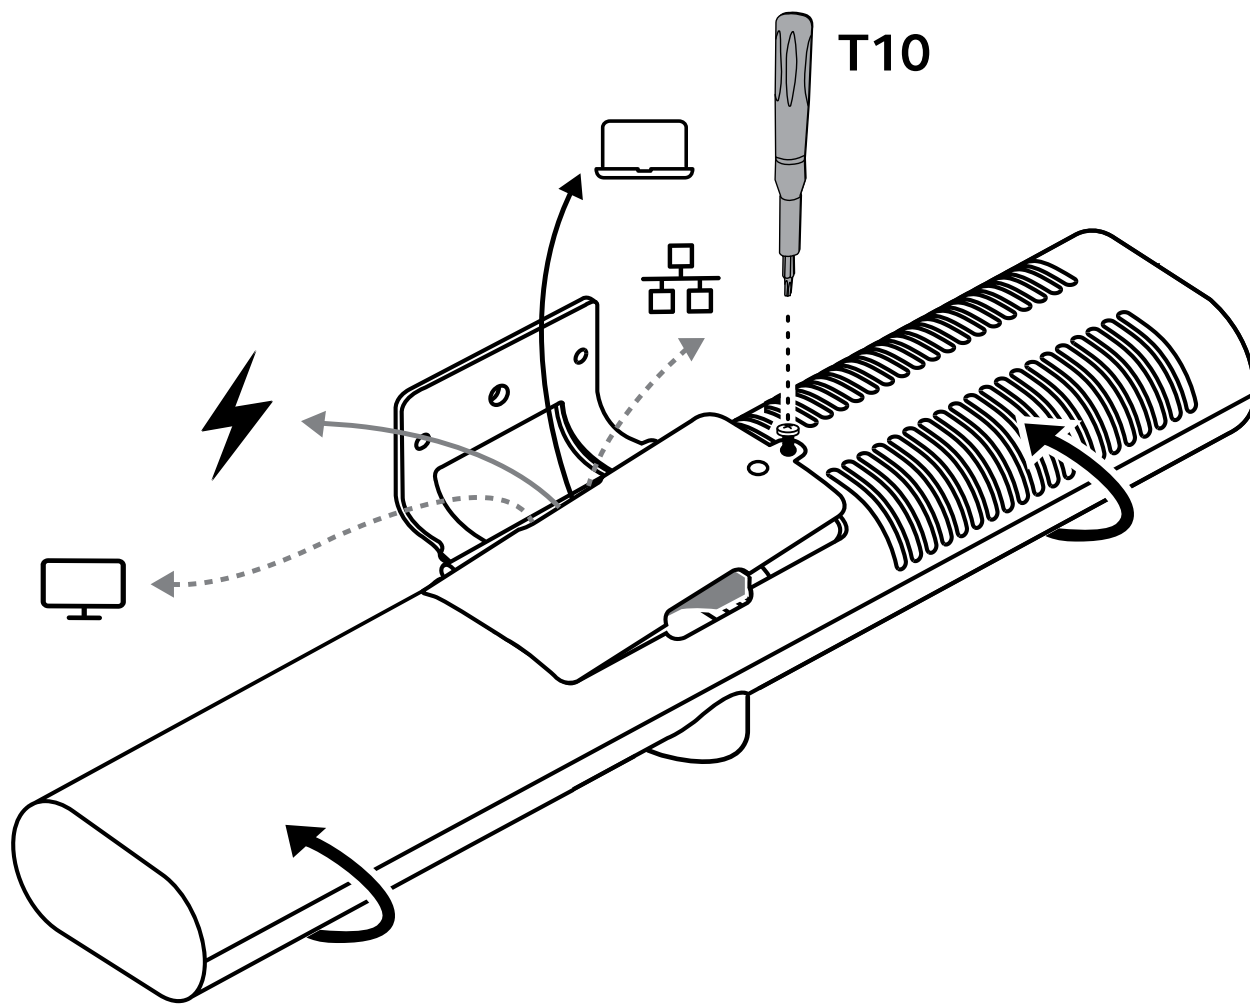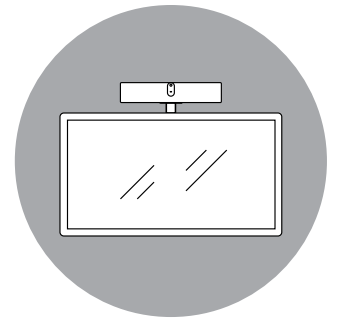

12

Rotate the PanaCast U30 into its final position and angle the camera to point at eye-level.

