

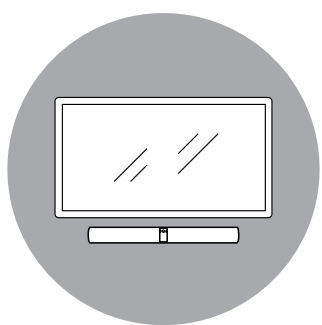


PanaCast 55 VBS


Wall Mount

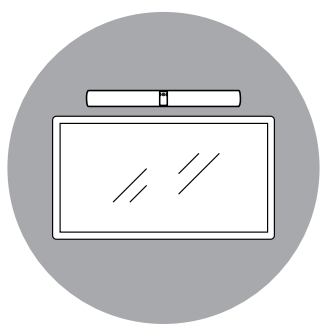


Install below screen
Start from page 1 →

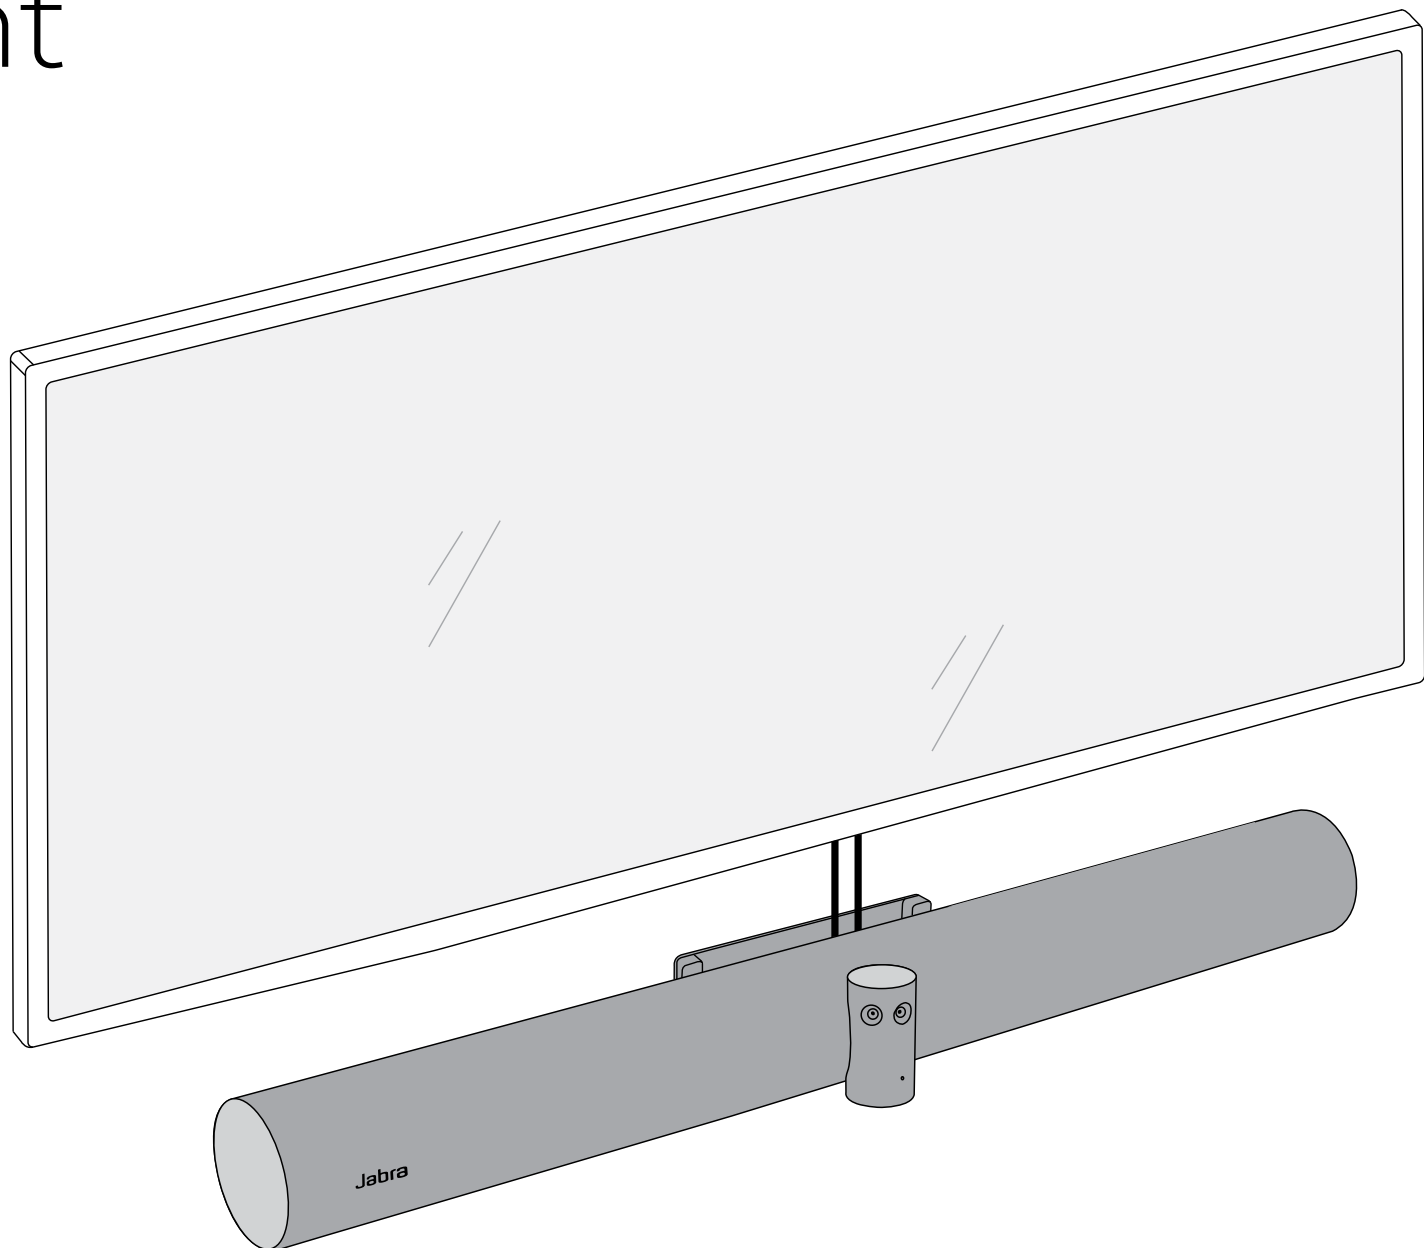

Install above screen
Start from page 5 →

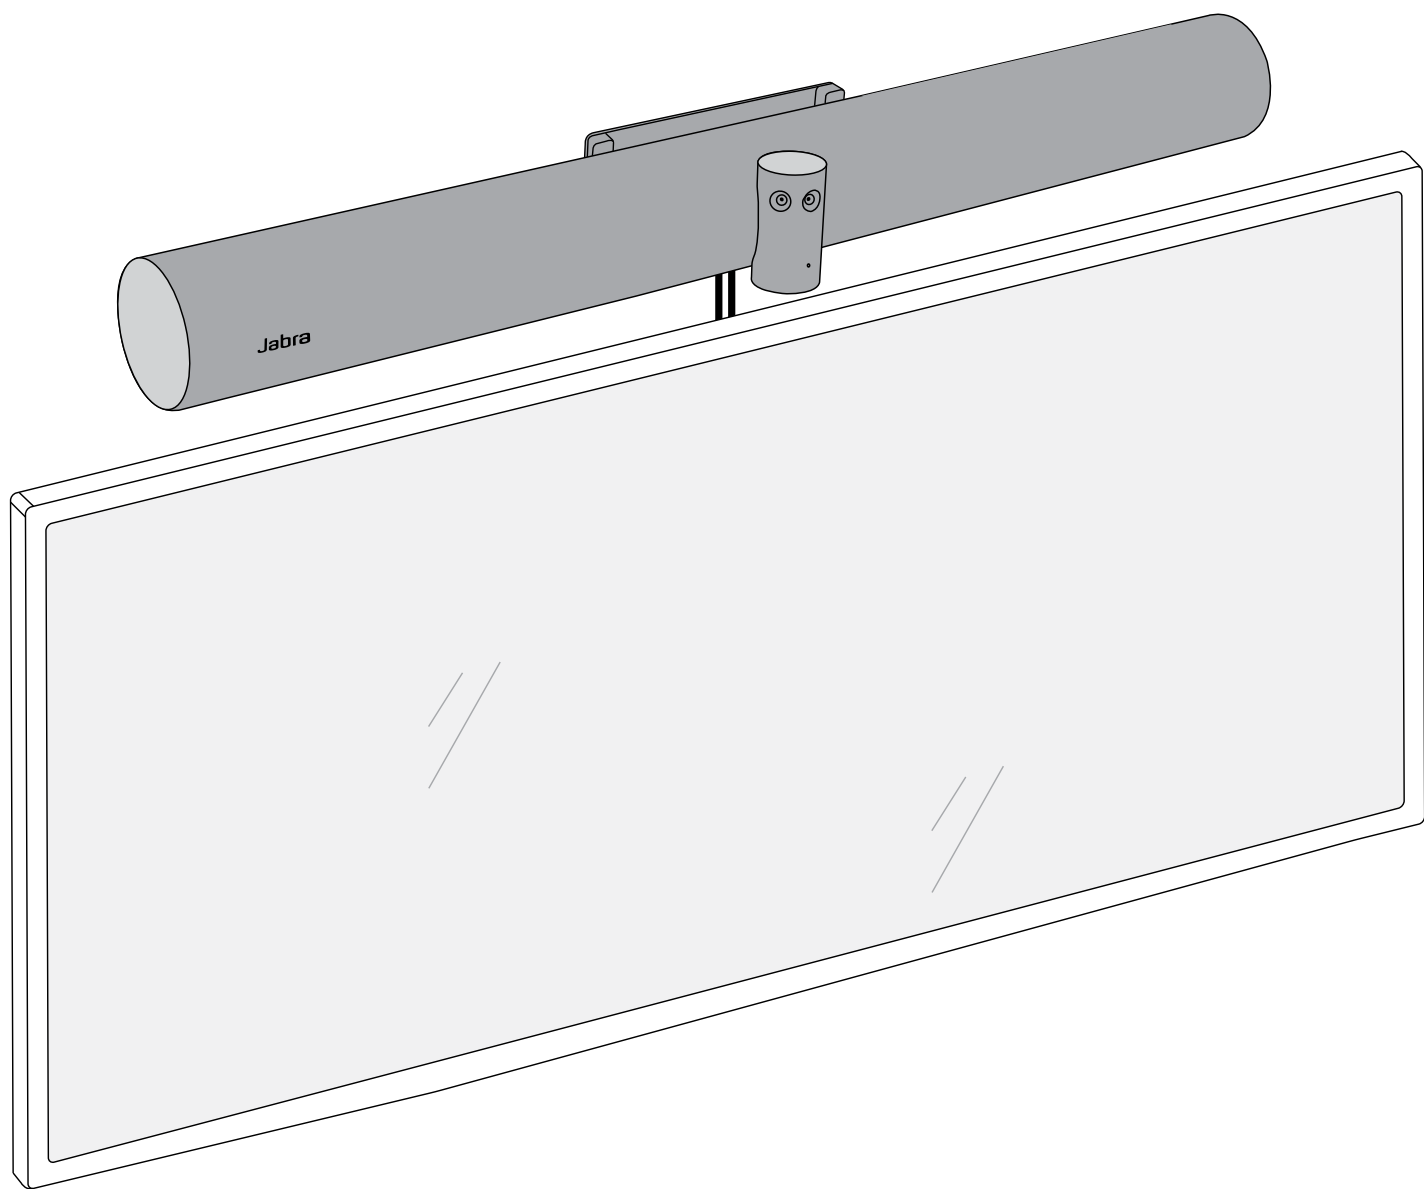


Items included

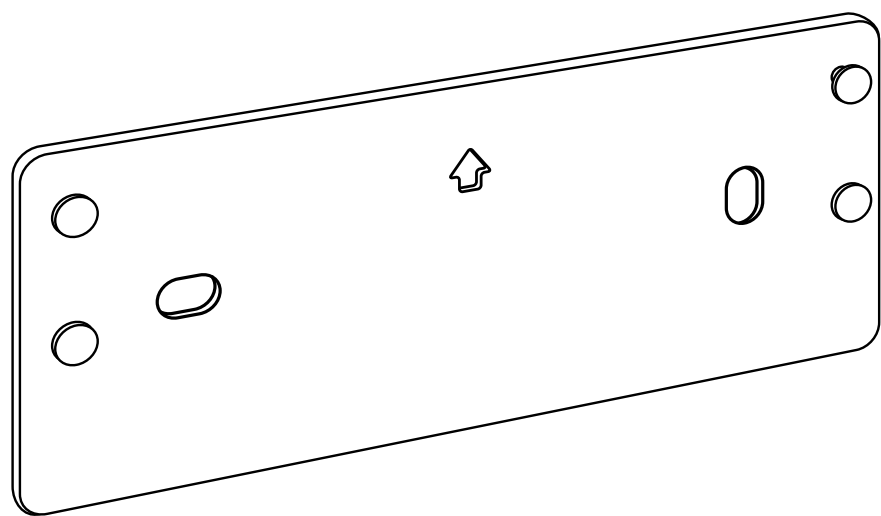


Video bar mount


Tools needed (not supplied in the pack)

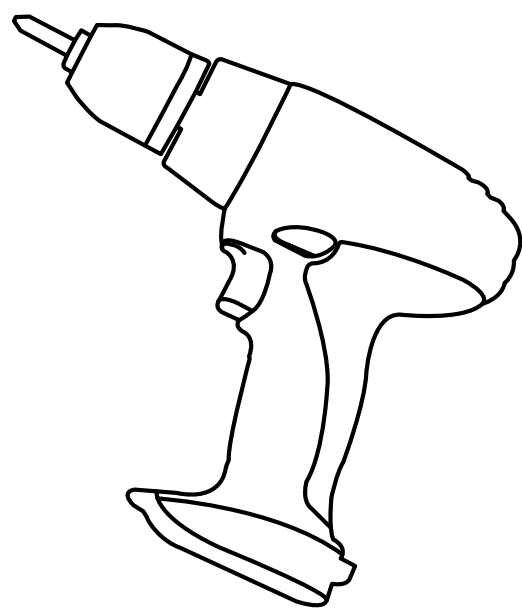

Drill

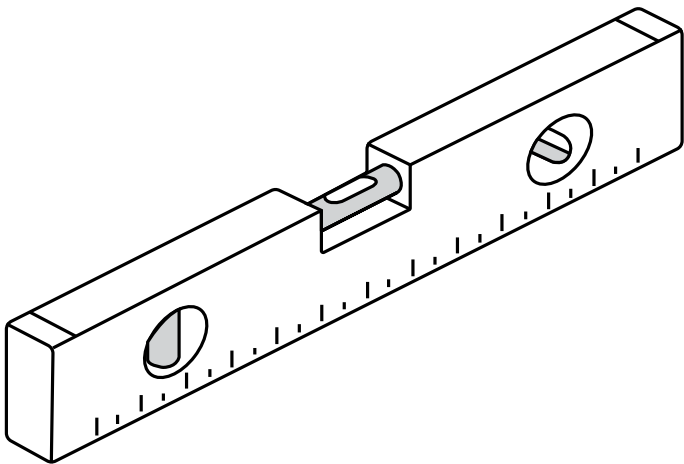



Level

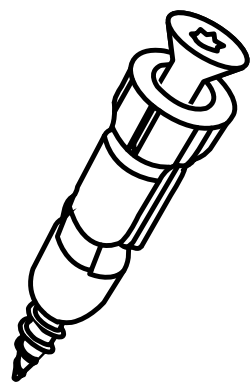

Wall screws



1

Measure **8cm** from the bottom of the screen to the top of the **video bar mount**. Using a pencil, mark the screw holes on the wall, as illustrated.

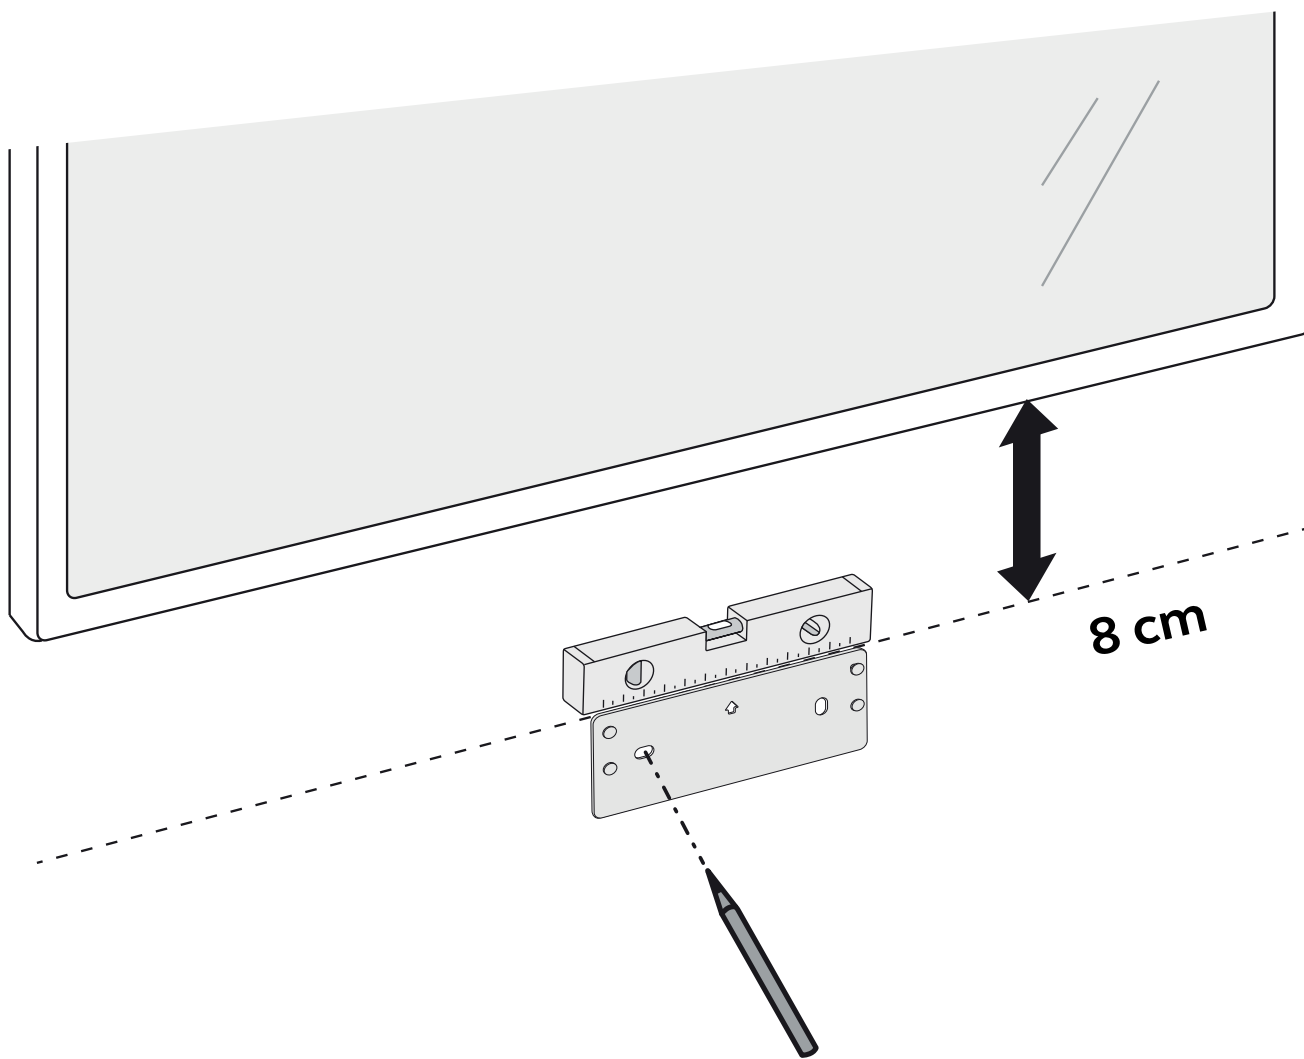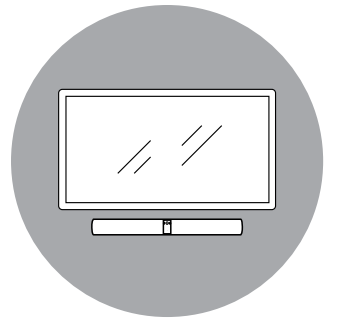



2

Screw the **video bar mount** to the wall using a drill (screws not supplied).

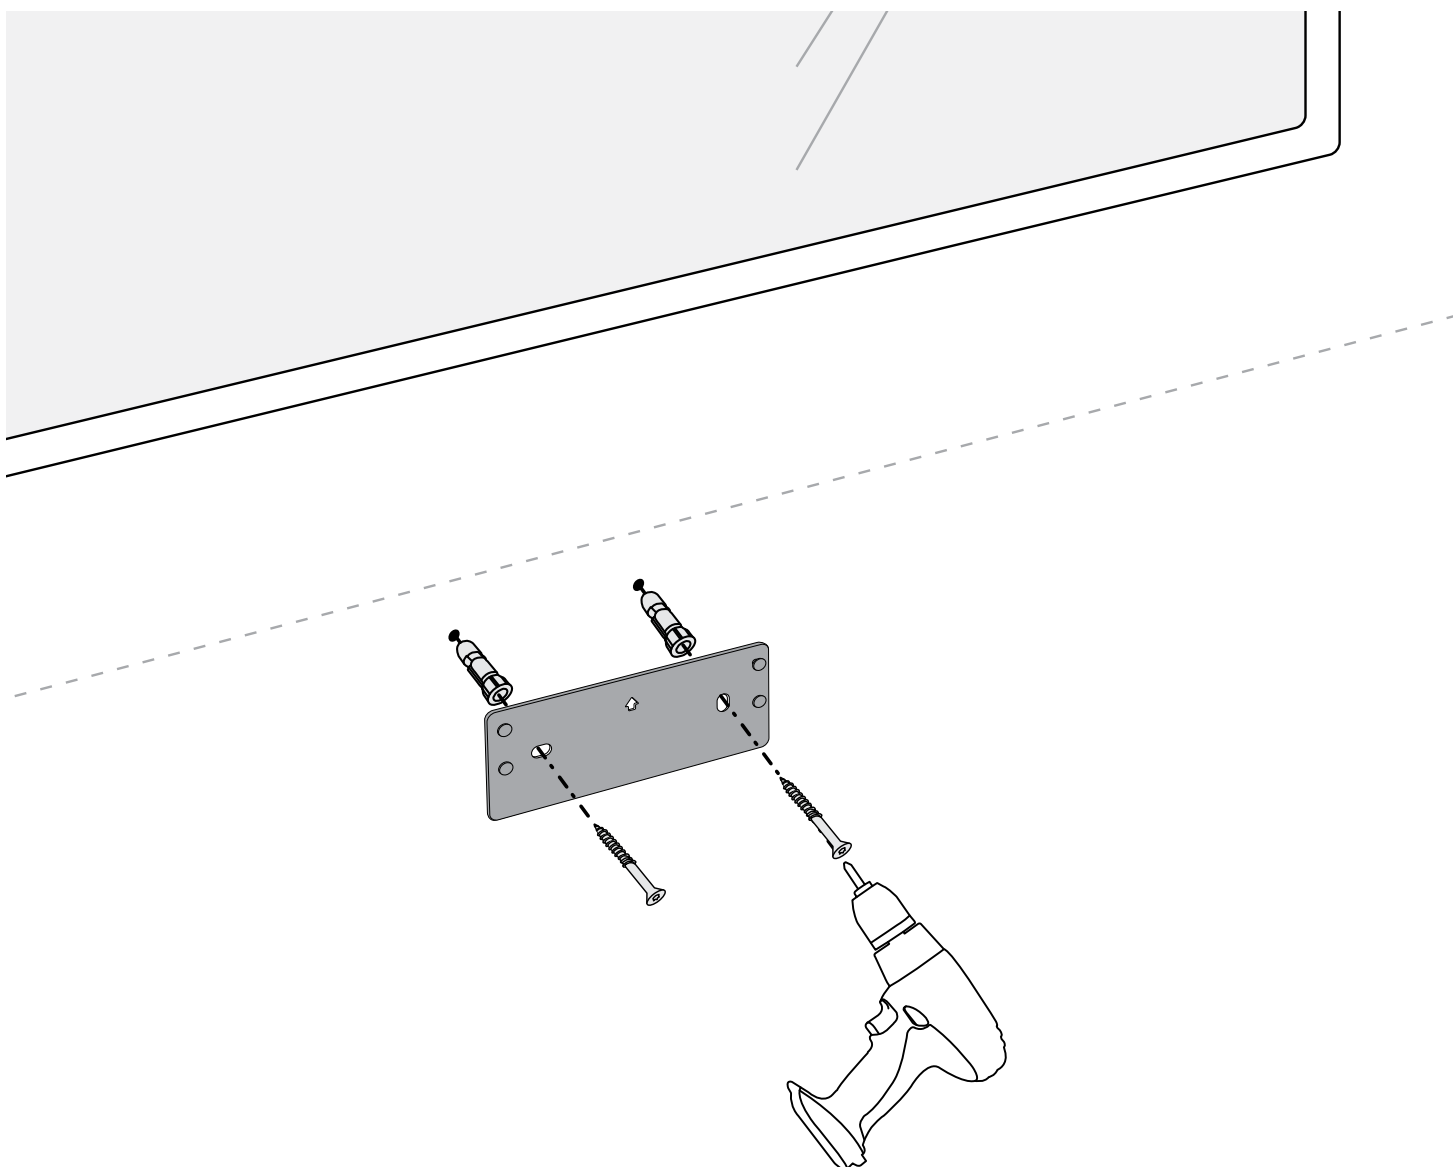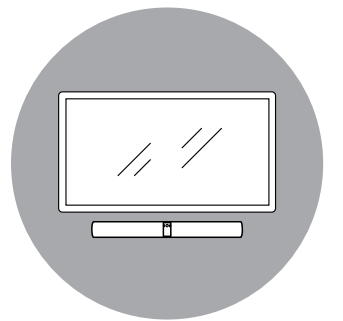



3

Attach the video bar to the video bar mount. Screws are not required.

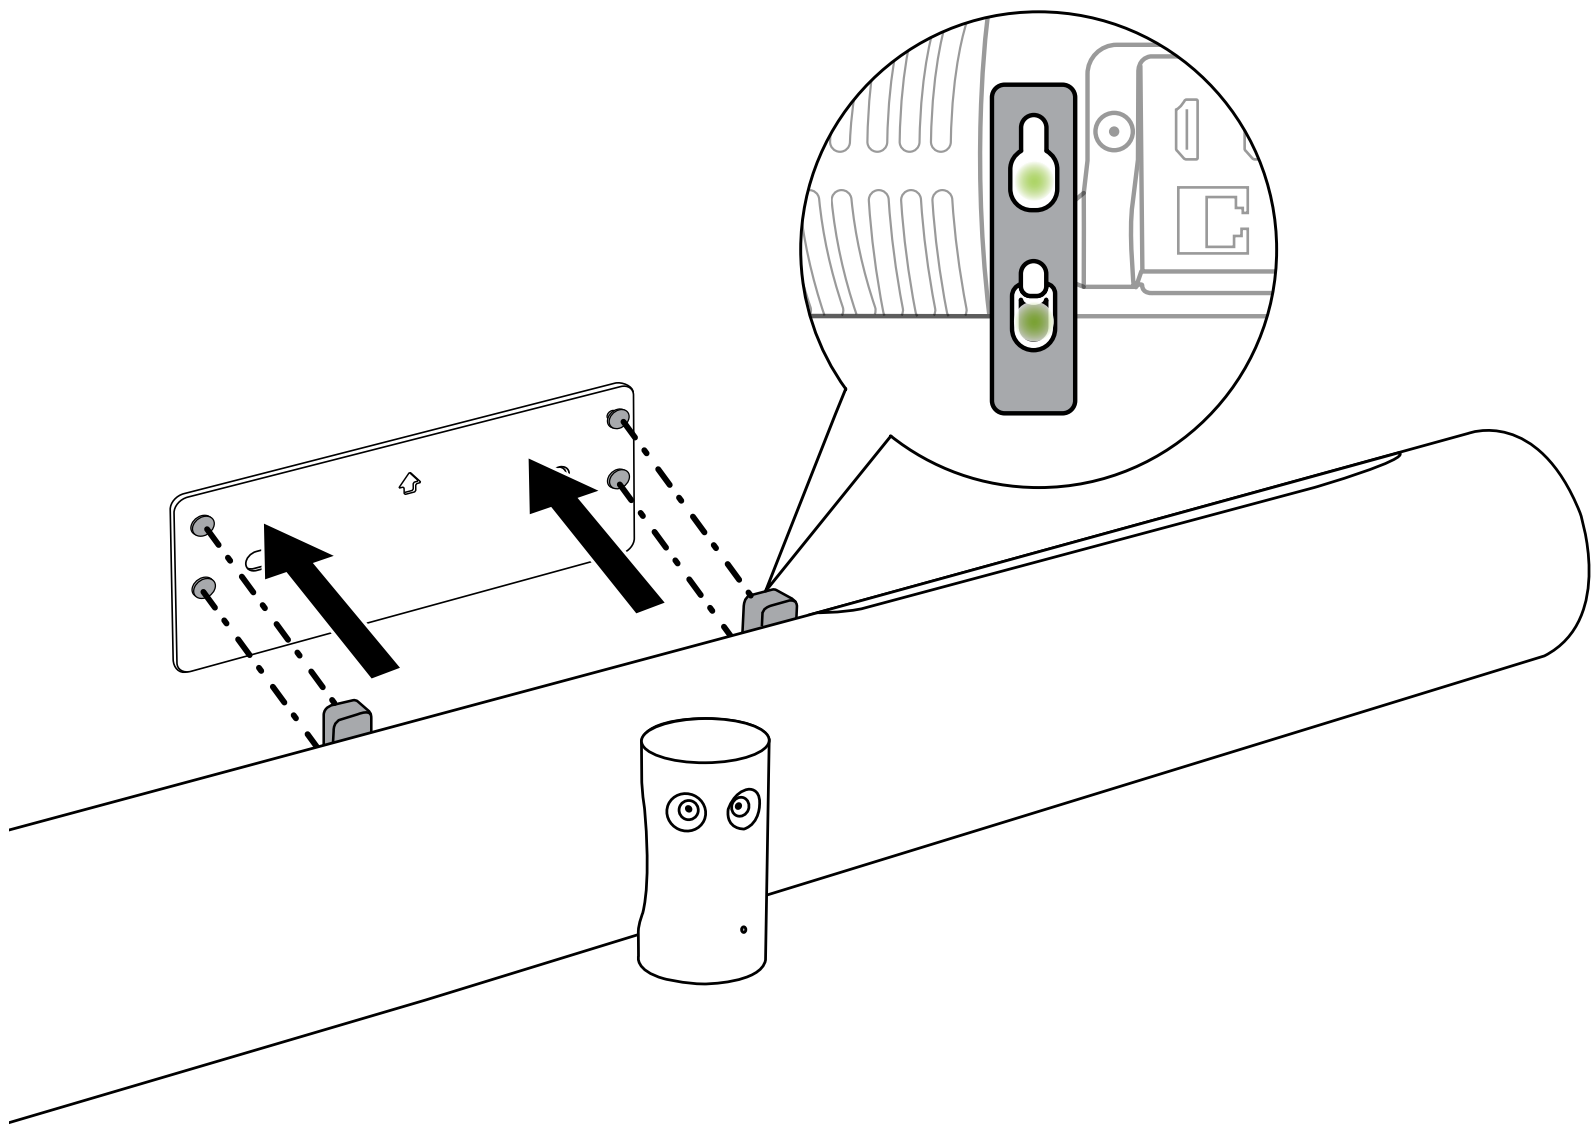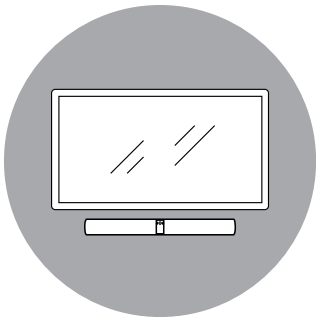



4

Rotate the video bar down for easy access to the ports.

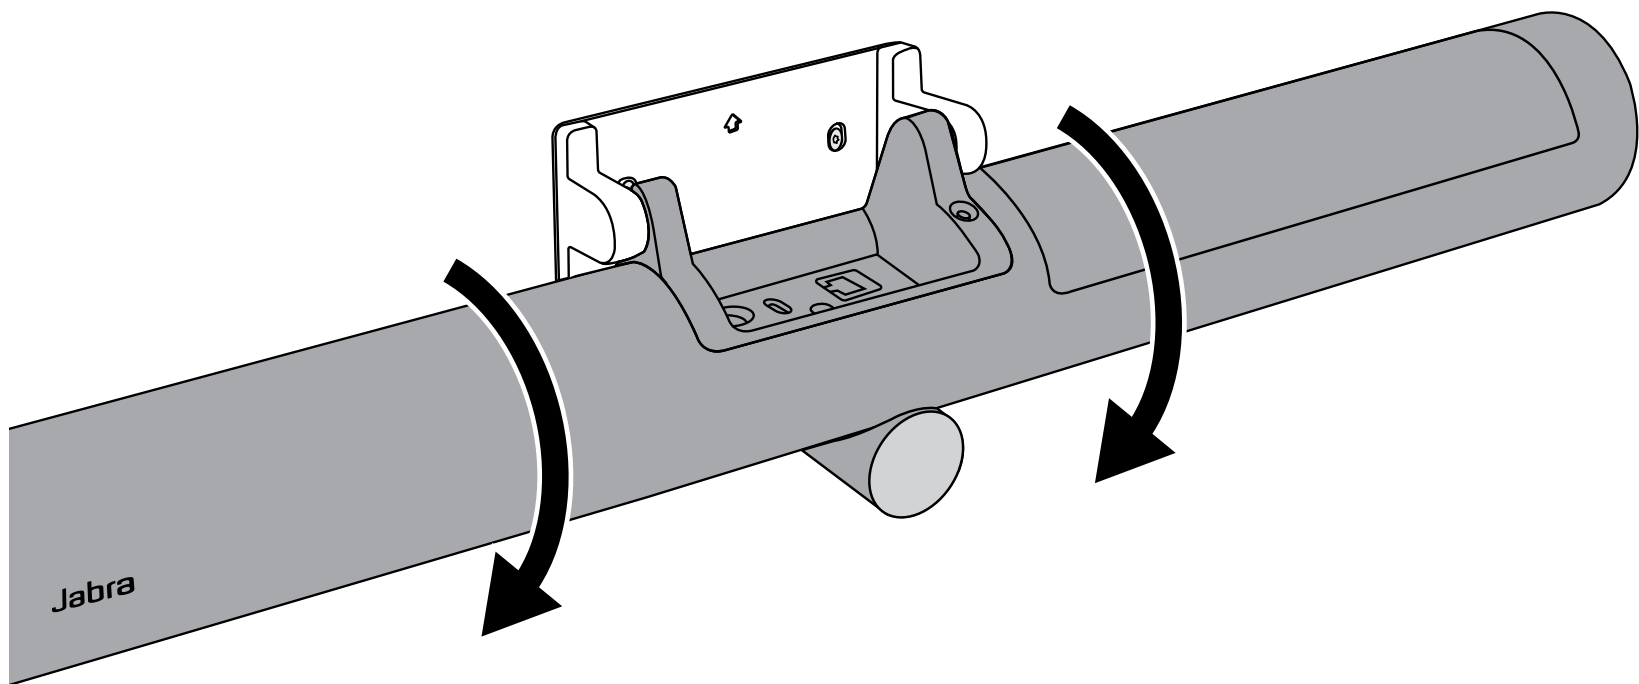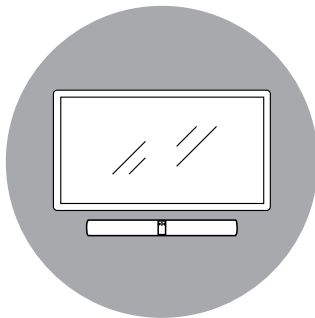



5

Attach the relevant cables to the video bar.

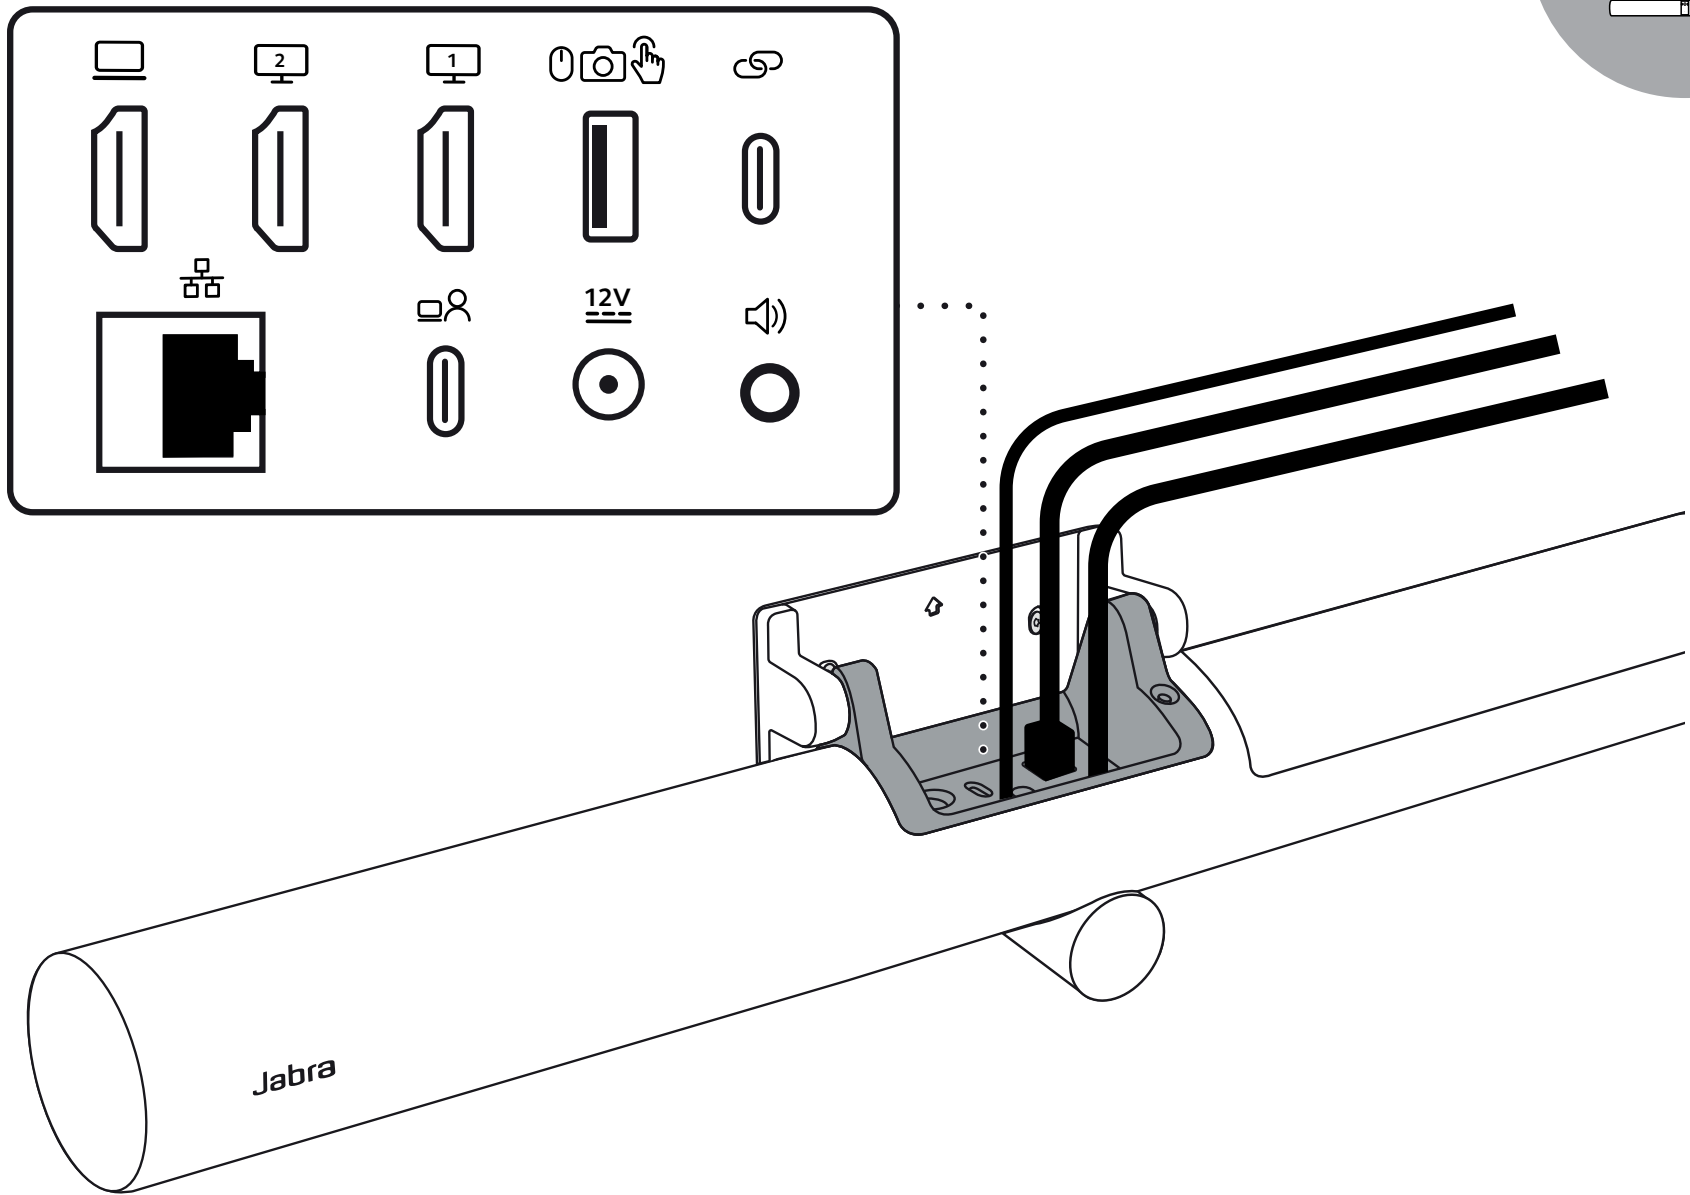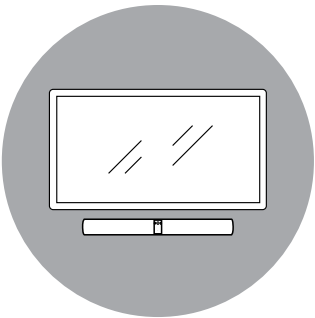




6

Screw the cable compartment cover to the video bar.

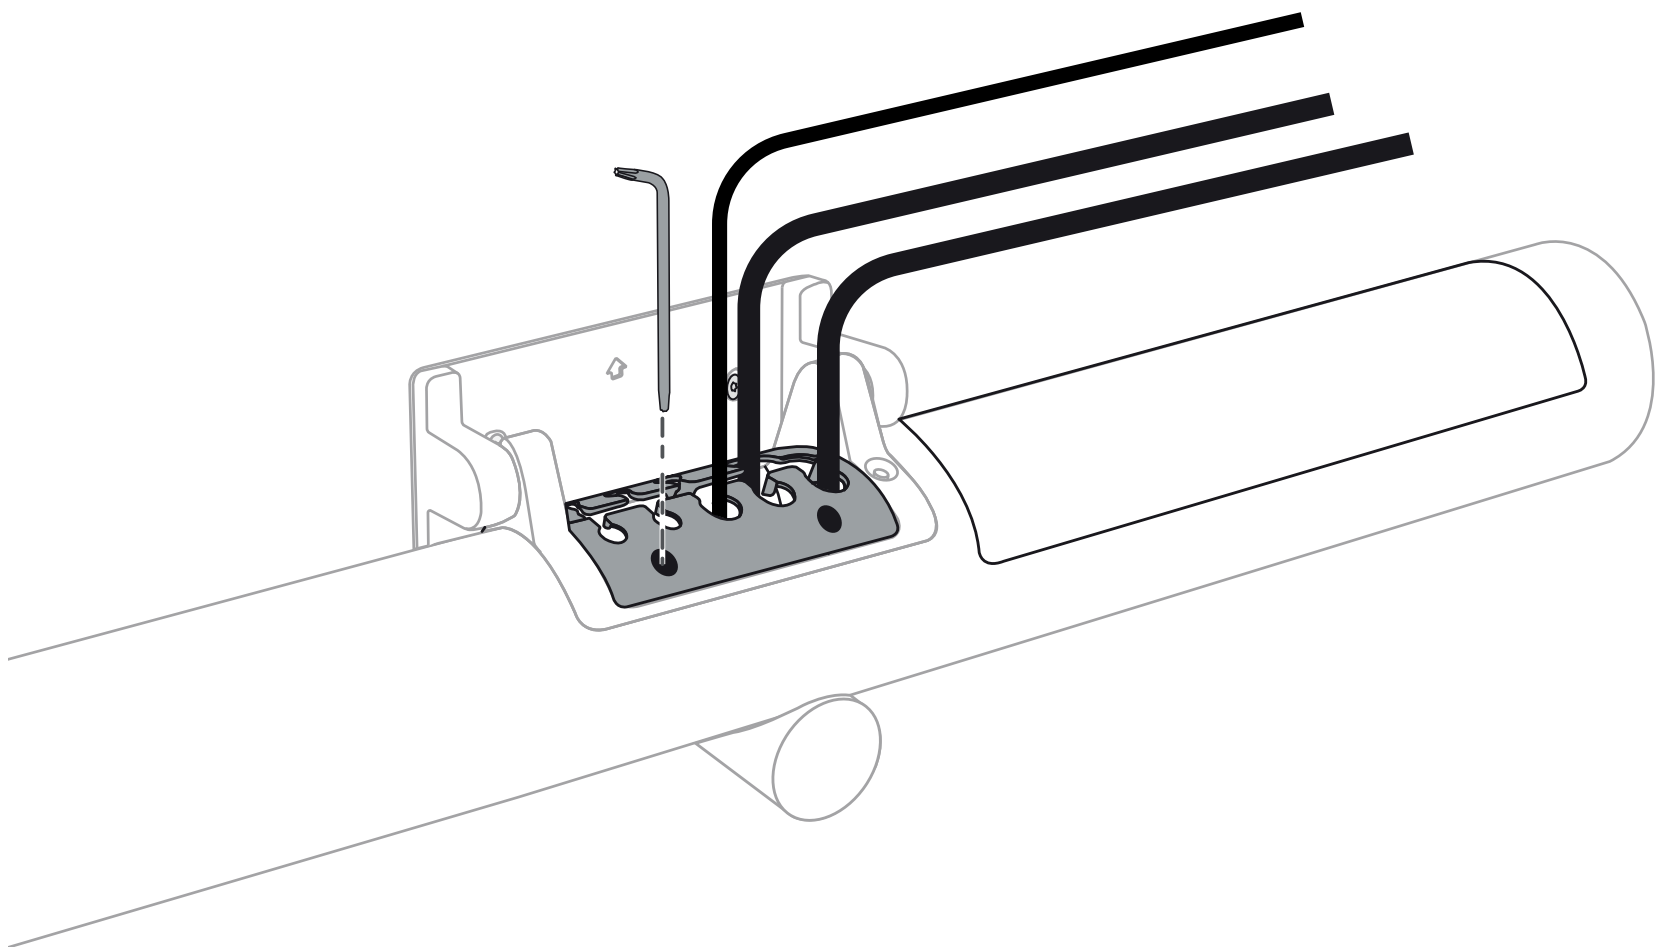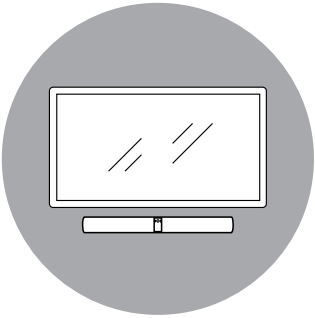



7

Rotate the PanaCast 55 VBS into its final position and angle the camera to point at eye-level.

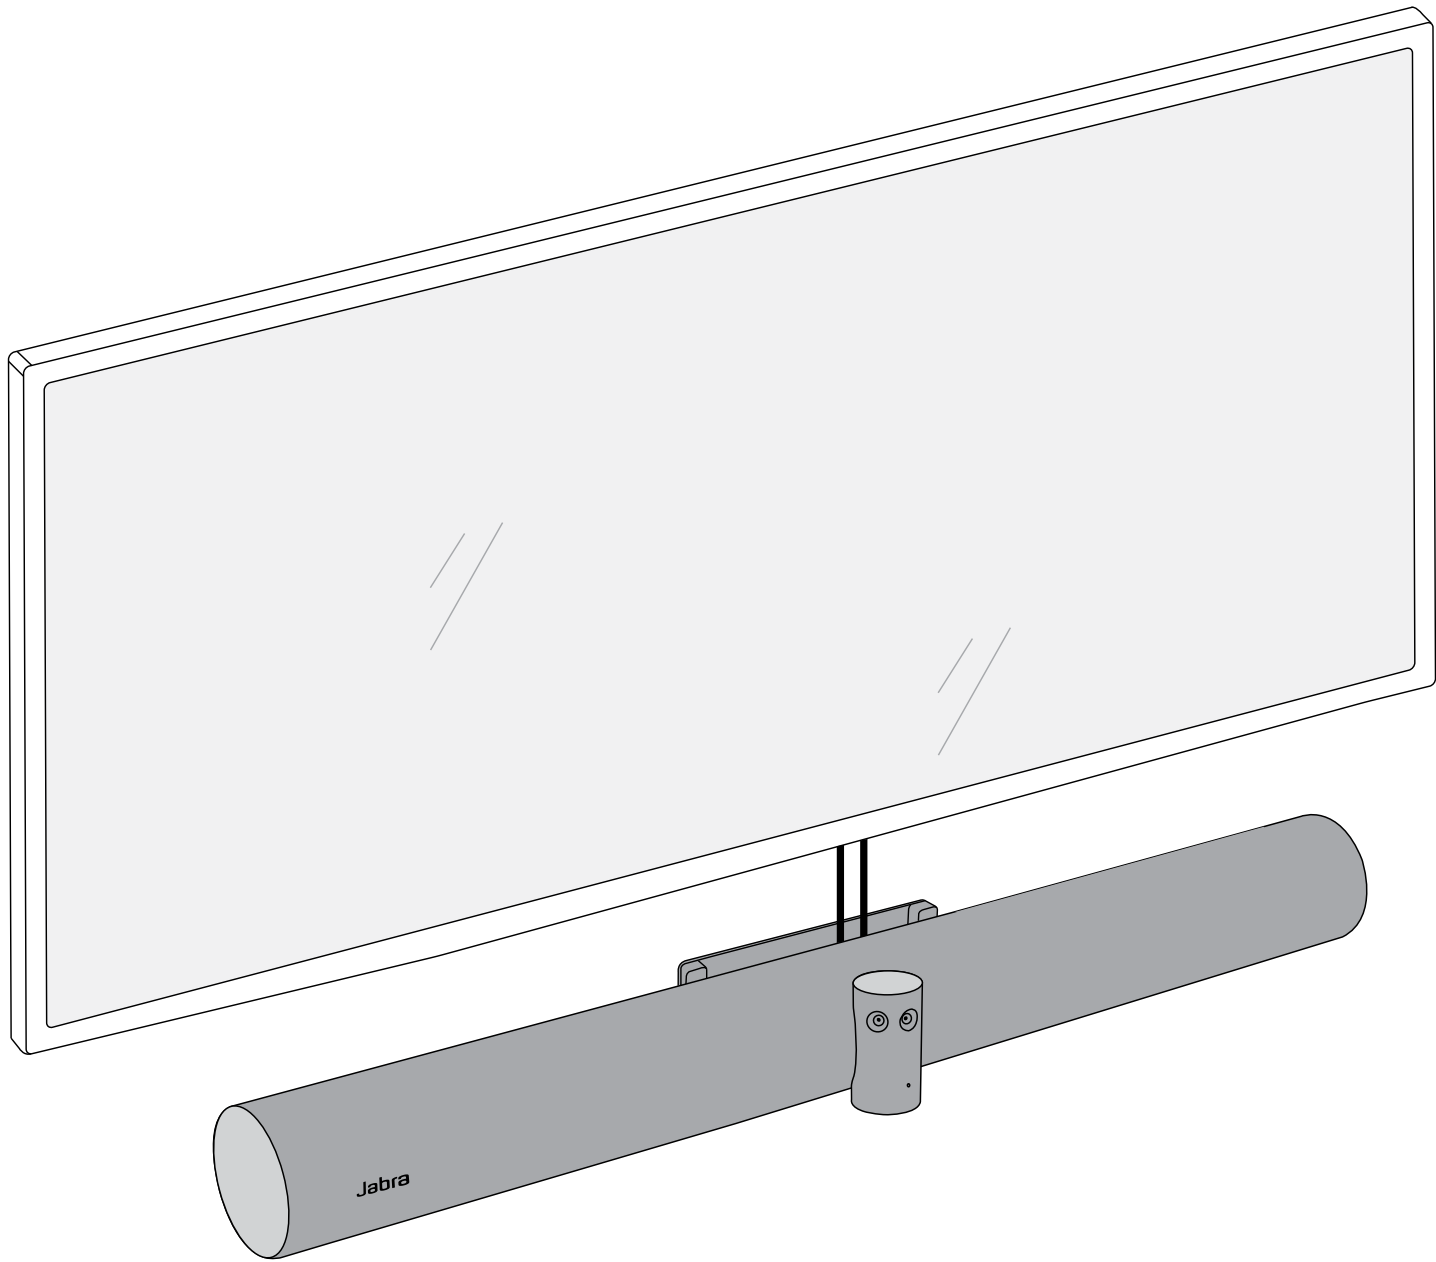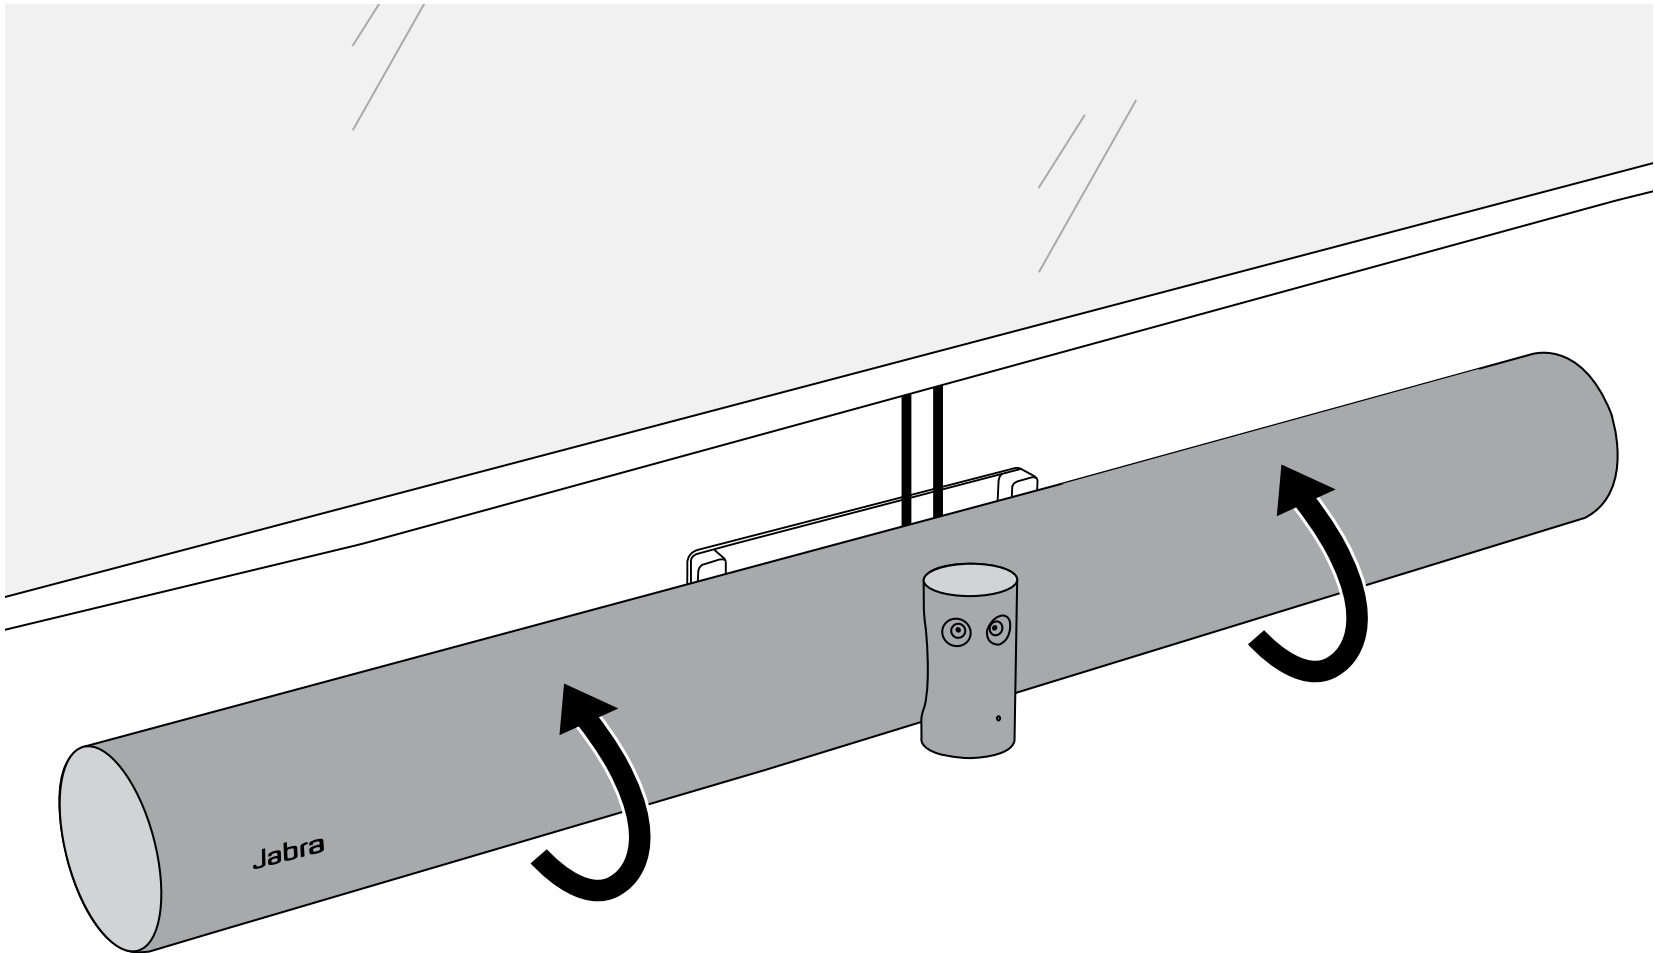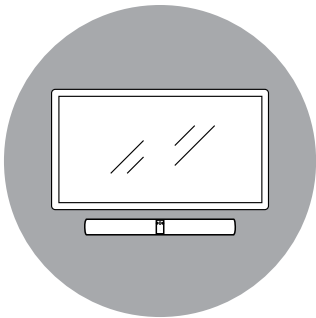



1

Measure **8cm** from the top of the screen to the bottom of the **video bar mount**. Using a pencil, mark the screw holes on the wall, as illustrated.

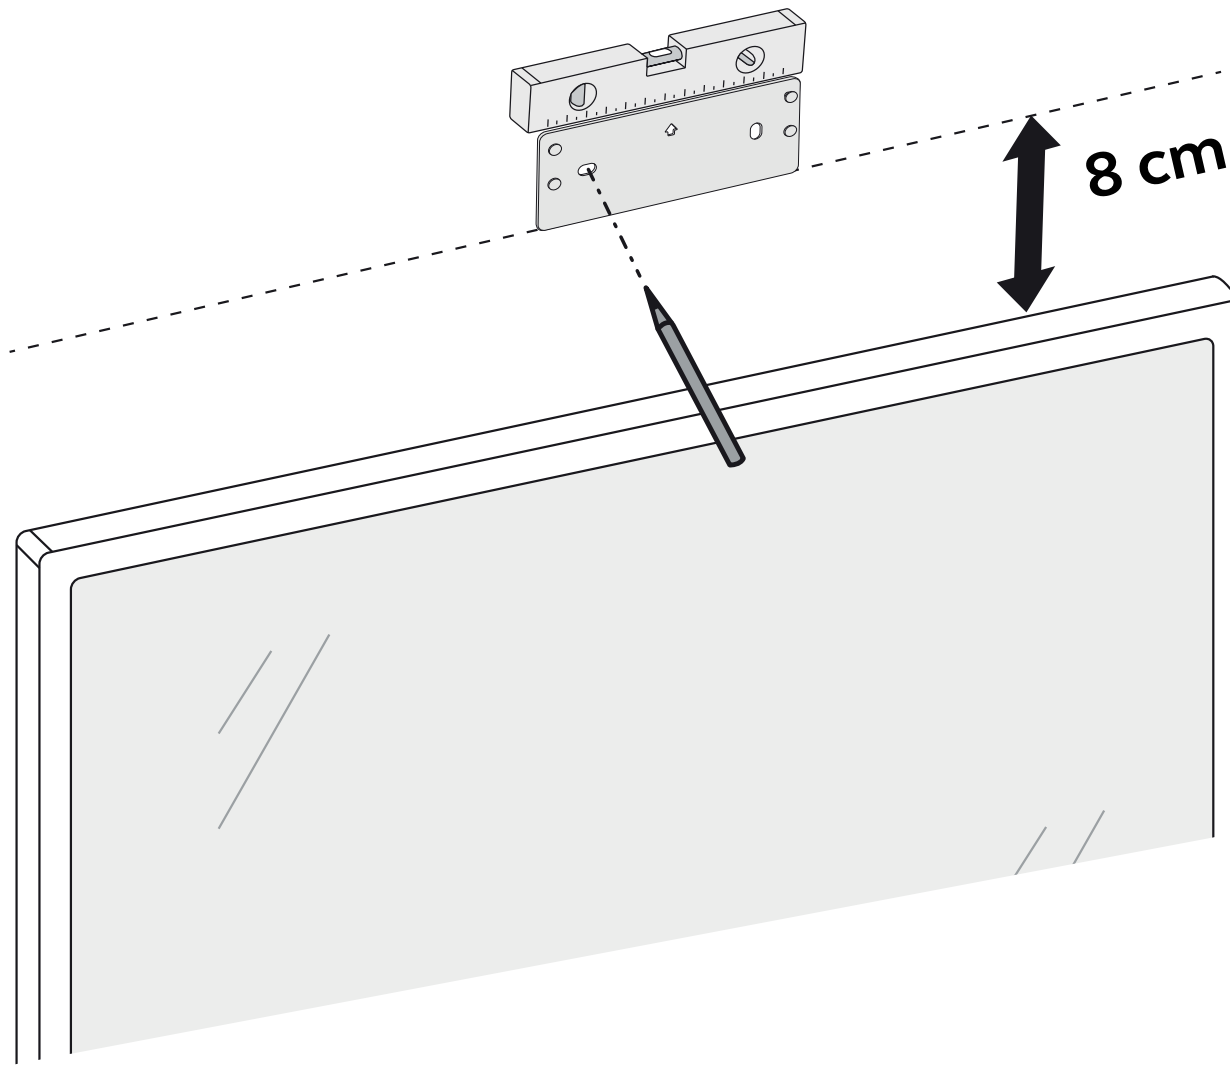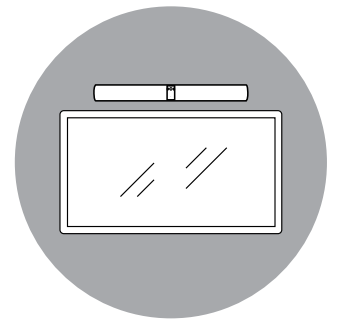



2

Screw the **video bar mount** to the wall using a drill (screws not supplied).

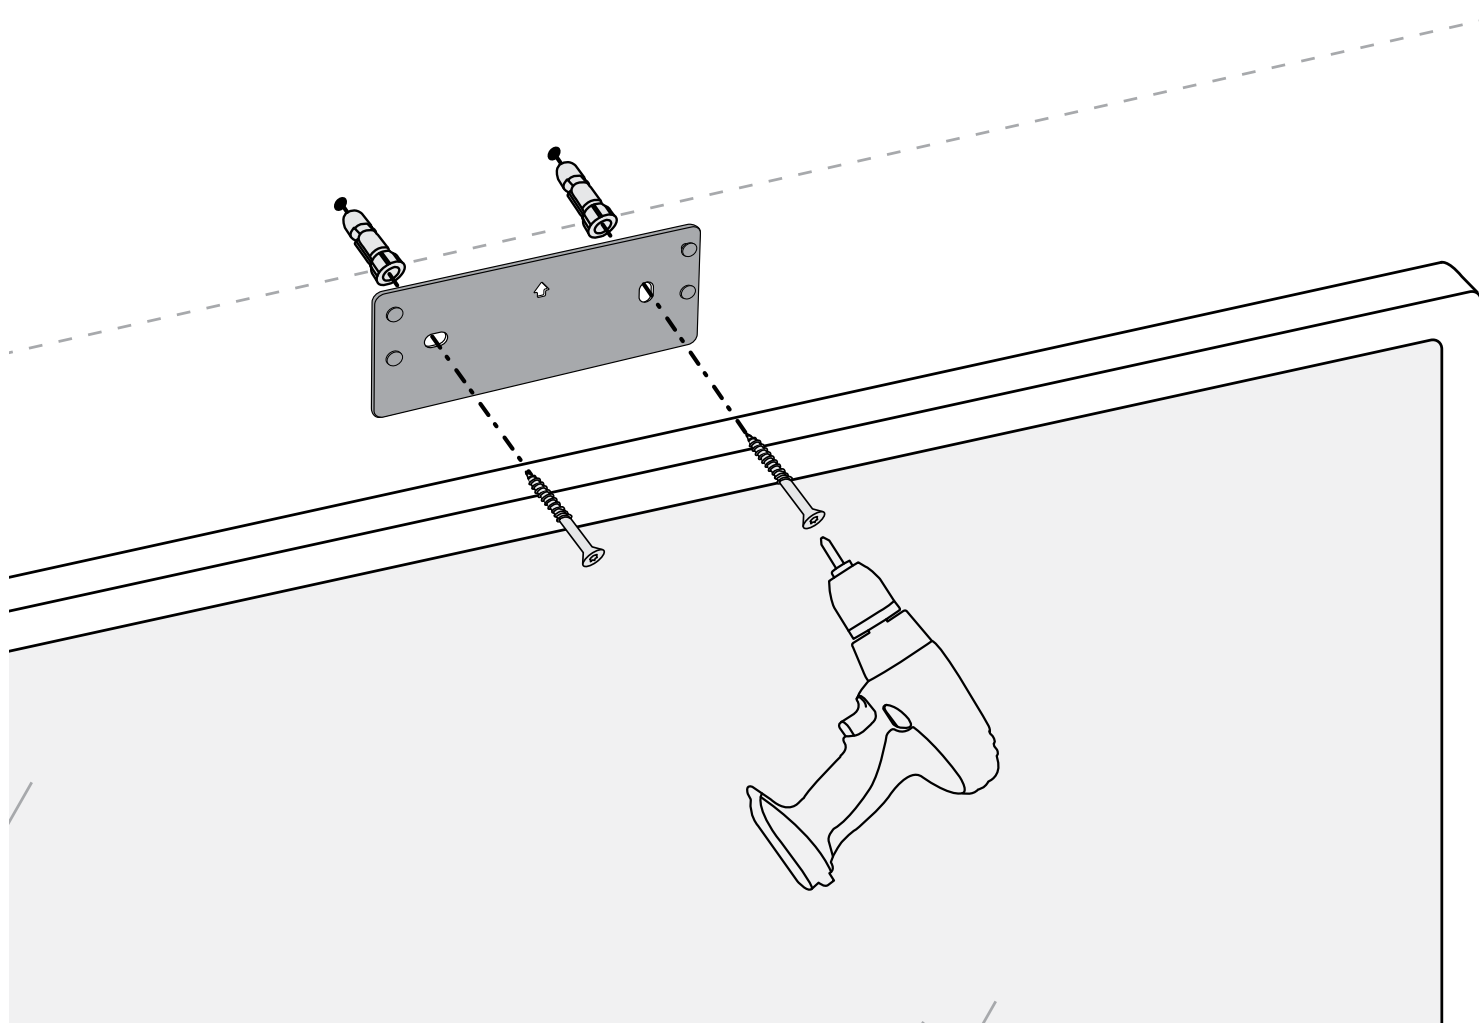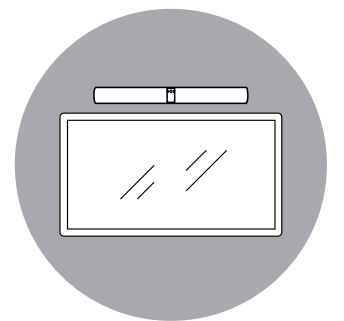



3

Attach the video bar to the video bar mount. Screws are not required.

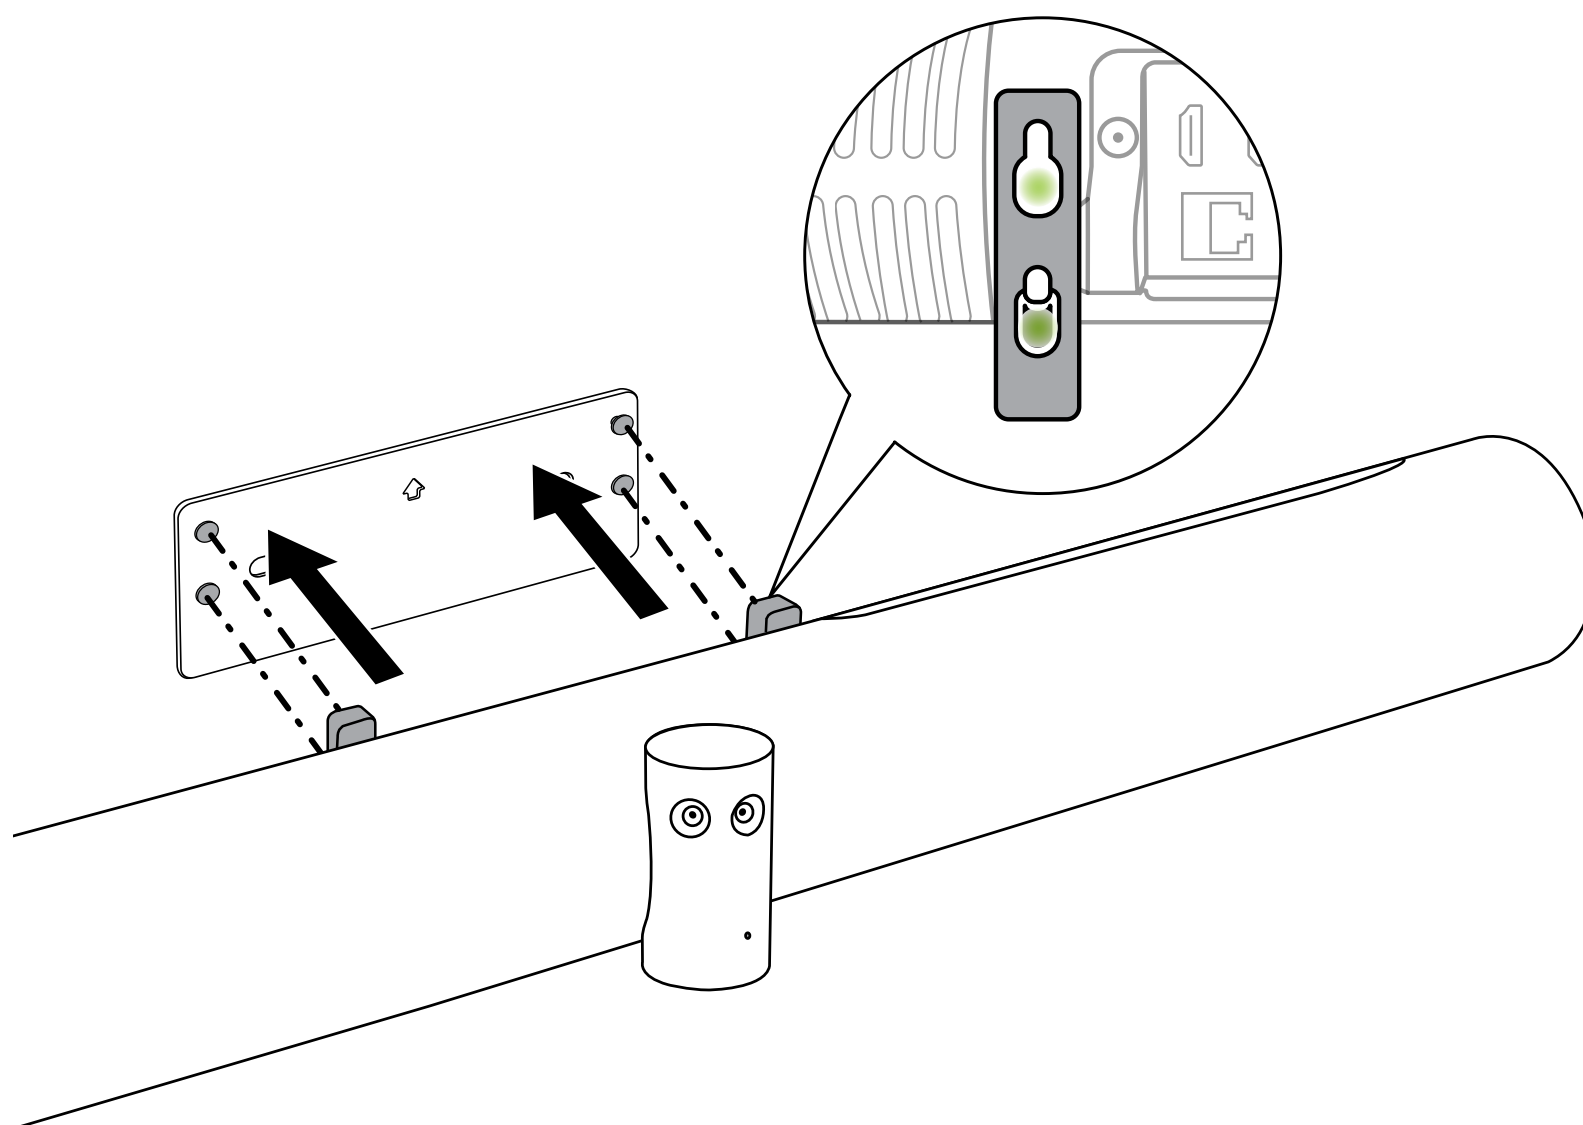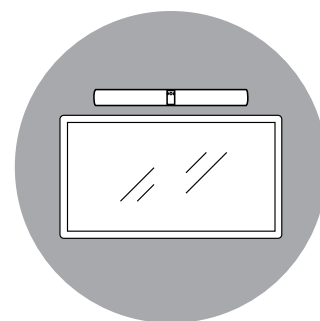



4

Rotate the video bar down for easy access to the ports.

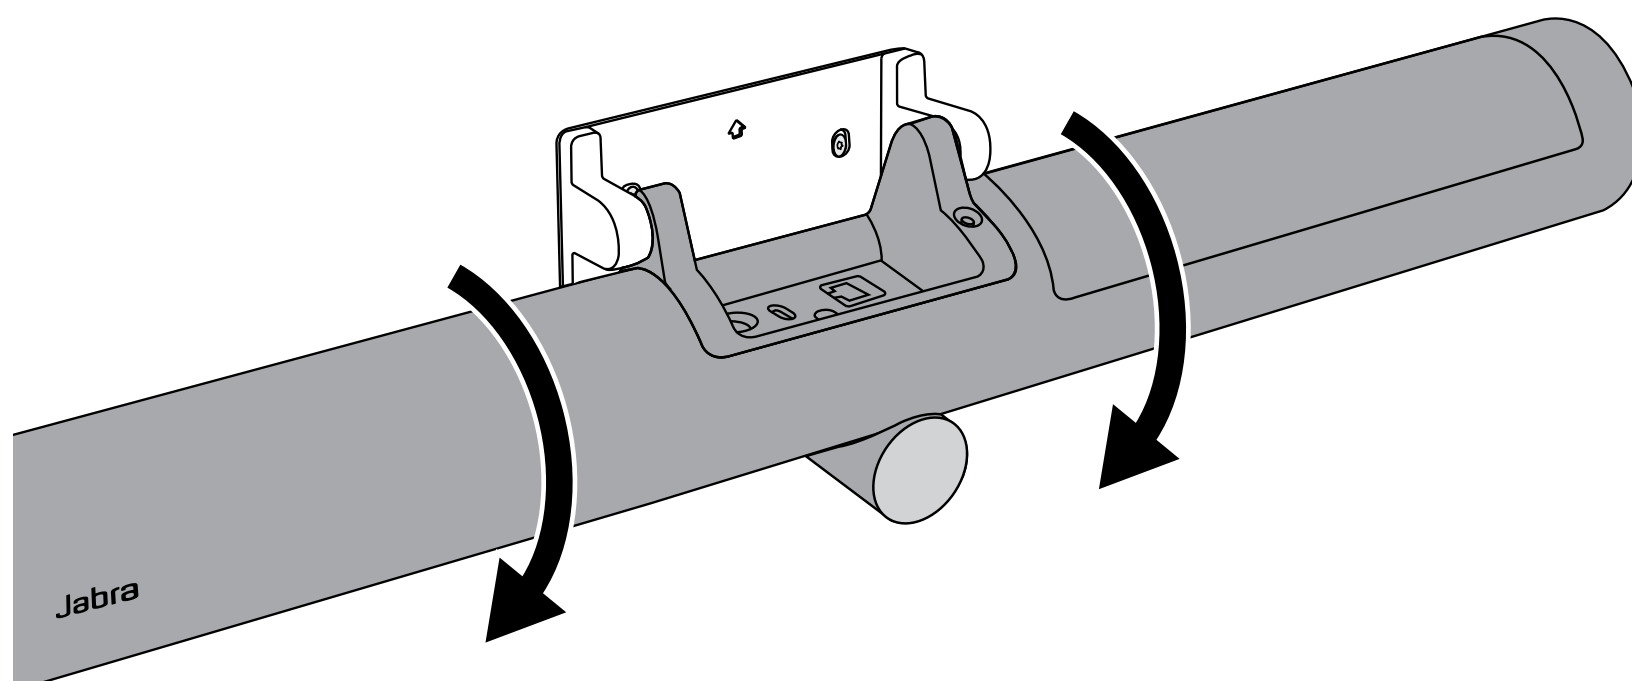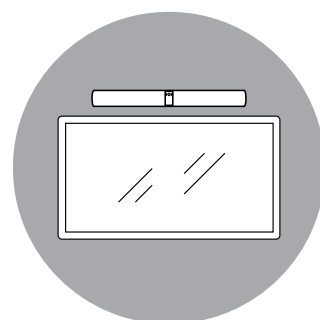



5

Attach the relevant cables to the video bar.

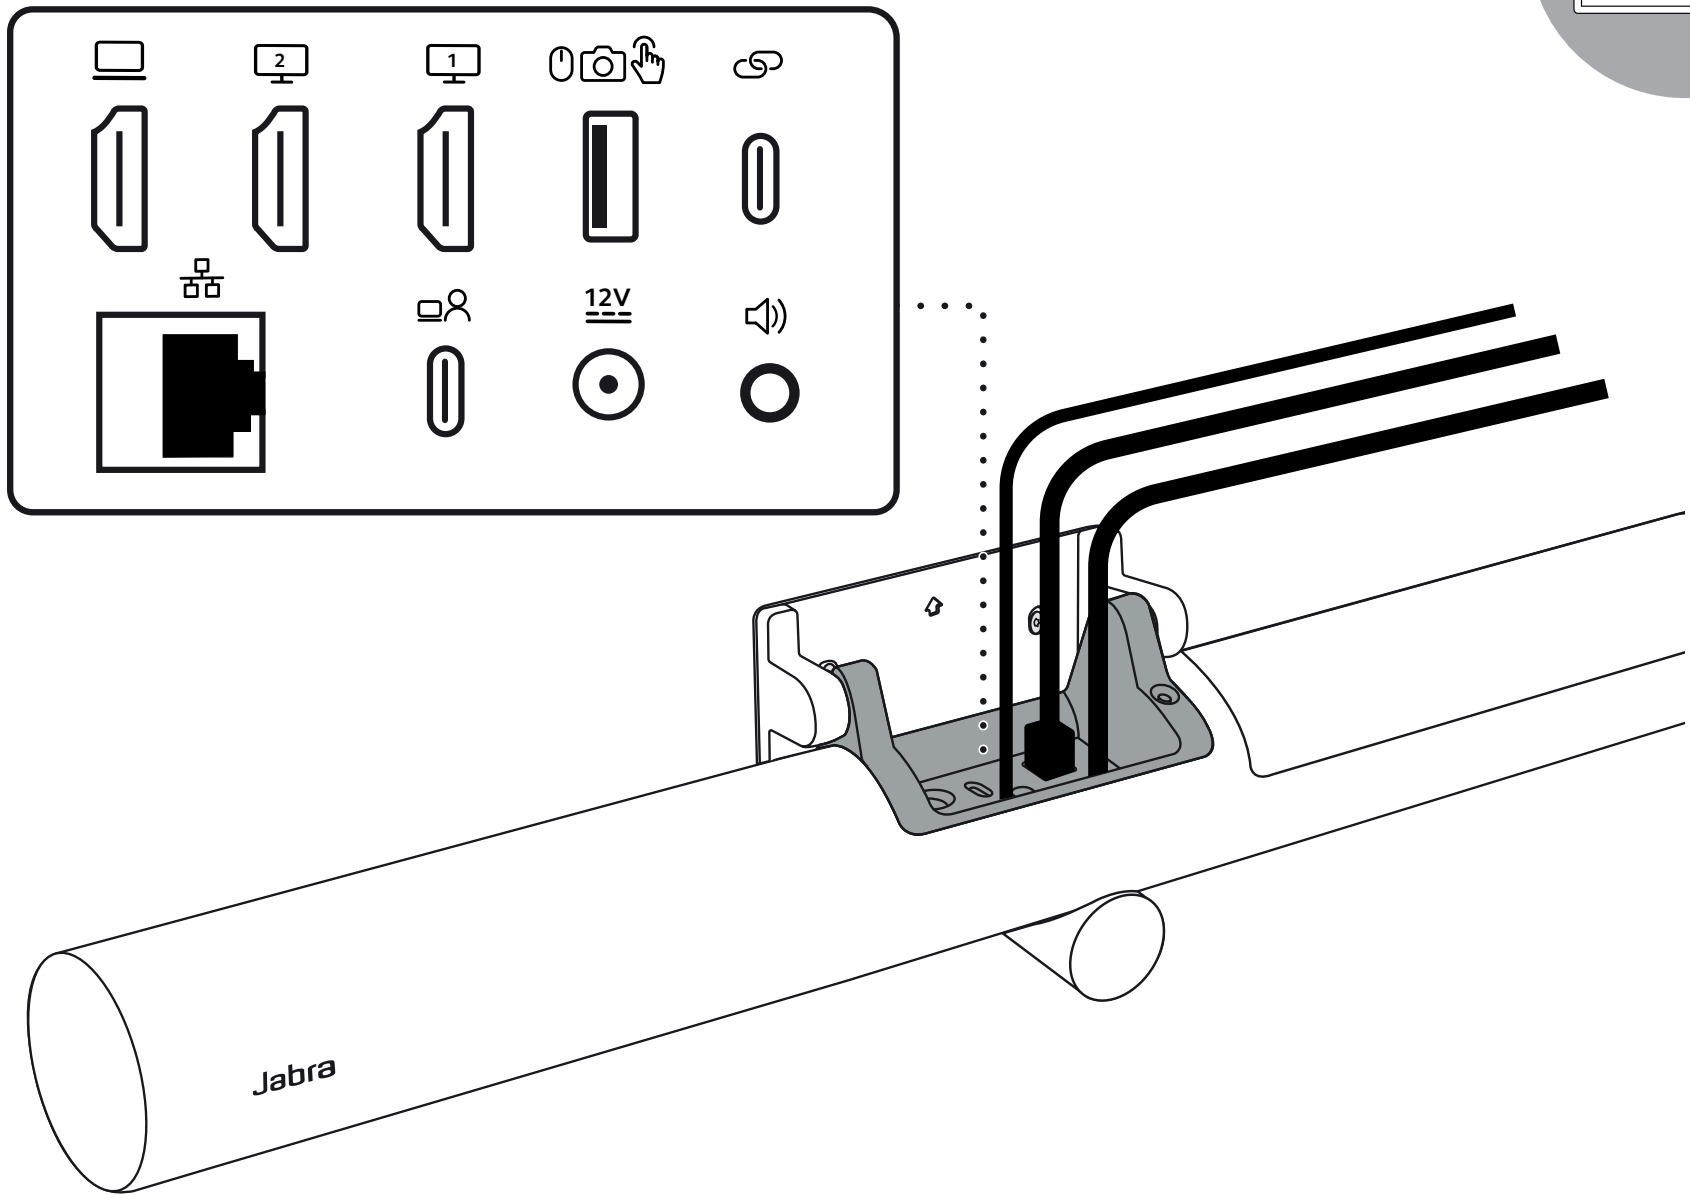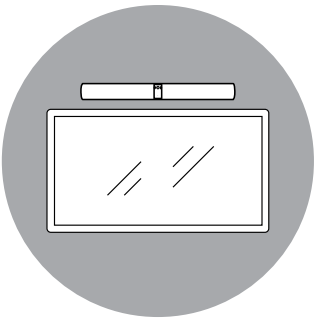

6

Screw the cable compartment cover to the video bar.

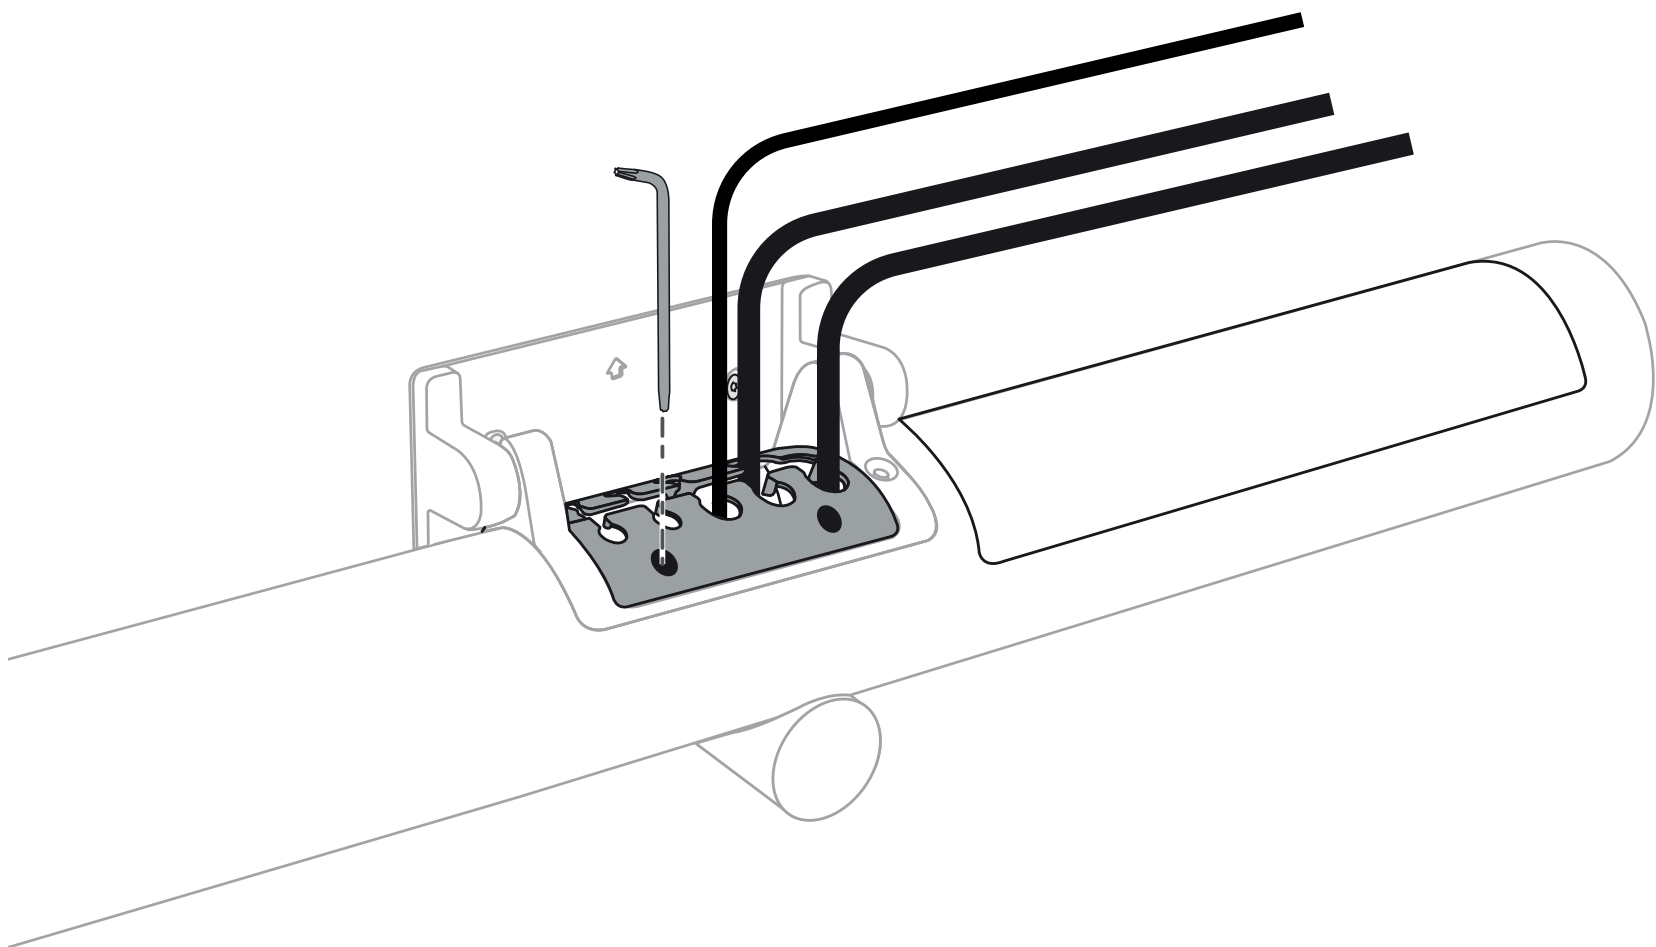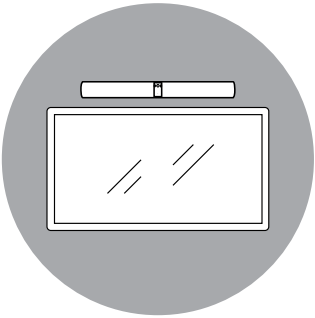

7

Rotate the PanaCast 55 VBS into its final position and angle the camera to point at eye-level.

